

92218701  
3rd copy

U C L A  
ENVIRONMENTAL  
SCIENCE &  
ENGINEERING


19960419 187



DISTRIBUTION STATEMENT A

Approved for public release;  
Distribution Unlimited

# DISCLAIMER NOTICE

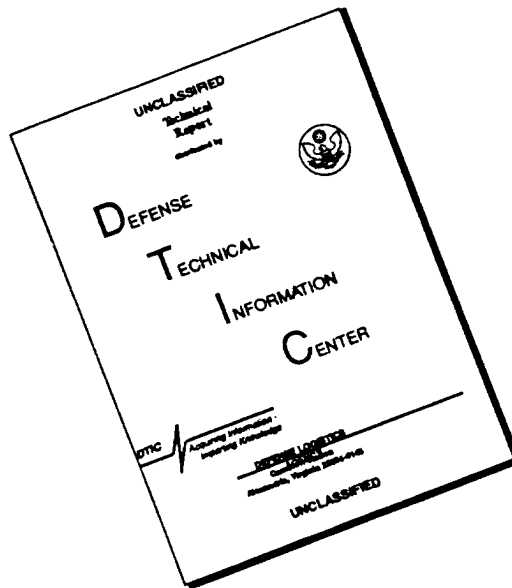

THIS DOCUMENT IS BEST QUALITY AVAILABLE. THE COPY FURNISHED TO DTIC CONTAINED A SIGNIFICANT NUMBER OF PAGES WHICH DO NOT REPRODUCE LEGIBLY.



April 26, 1990

ENVIRONMENTAL SCIENCE AND ENGINEERING  
SCHOOL OF PUBLIC HEALTH  
10833 LE CONTE AVENUE  
LOS ANGELES, CALIFORNIA 90024-1772

Mark Besmer  
Program Manager's Office for  
Rocky Mountain Arsenal Contamination Cleanup  
Building 111  
Commerce City, Colorado 80022-2188

Dear Mark:

You asked for some clarification regarding the "conservative, nontoxic tracer" we would propose to use in field studies near the Basin F area at the Arsenal. In all good field work on contaminant transport in groundwater, one or more chemicals, usually simple salts (discussed below), are added to serve as conservative tracers. This has been the case in a variety of field experiments conducted by universities, U.S. Geological Survey and Canadian governmental research agencies, as detailed below. The term "conservative" implies that the chemical does not adsorb to the geologic medium (sand, silt, clay, etc.) nor does it degrade or transform during its passage through the medium. With these properties, the tracer mimics the movement of the water itself. By comparing the tracer behavior to that of the contaminants, it is possible to unambiguously determine if the contaminants are adsorbed or degraded as they move through the medium. If no tracer is used, the interpretation of the behavior of the contaminants is difficult if not impossible, especially when quantitative estimates of transport parameters are desired such as in our work.

The chemicals that have generally been used as conservative tracers in previous field work (and confirmed to act conservatively, i.e. not adsorb or degrade) are simple salts containing chloride, bromide or iodide, such as sodium chloride (table salt), potassium chloride, sodium bromide, potassium bromide, potassium iodide, etc. Whether the salt contains sodium or potassium is generally a matter of whichever salt is cheaper, more available, etc. Examples of tracers used in previous field work are the following:

#### Sodium Chloride and Potassium Bromide

Canadian Forces Base Borden, Ontario, Canada.

This was a field experiment on organic contaminant transport in a sand aquifer impacted by a plume of contamination from a landfill. The work was conducted by Stanford University in collaboration with the University of Waterloo; I was the designer and implementer of the experiment. Approval for the work was obtained from the Canadian Forces by Professor John Cherry of the University of Waterloo. Two tracers were used for redundancy; both behaved conservatively for over three years of observation. Results are published in December 1986 issue of the scientific journal Water Resources Research. This work was sponsored by the U.S. E.P.A.

#### Sodium Iodide

Gloucester, Ontario, Canada.

This was a field experiment to determine the rate at which contaminants from a hazardous waste landfill could be flushed from a sand aquifer. The work was conducted by the Canadian National Hydrology Research Institute in Ottawa, Canada. The concern was that the organic contaminants were migrating towards a water supply and information on their rate of migration was needed to plan the cleanup. Thus the tracer was crucial to their experiment.

#### Sodium Bromide

Mobile, Alabama.

This was a large field experiment on tracer behavior in a layered sand aquifer. No organic contaminants were present. The main purpose was to use the tracer to determine the relative permeability of the various layers in the aquifer. This work was sponsored by the U.S.E.P.A. It has been described in numerous publications in scientific journals such as Water Resources Research, Ground Water, etc.

#### Lithium Bromide

Otis Air Force Base, Cape Cod, Massachusetts.

This was a large scale field experiment on solute transport in a sand aquifer impacted by sewage infiltration beds. The work was conducted by the United States Geological Survey in collaboration with the Massachusetts Institute of Technology. The lithium salt was used because of interest in the behavior of lithium itself, which was not conservative (i.e. interacted with the geologic mediaum). The bromide tracer was shown to have been conservative over a span of several years in a paper now in press in the scientific journal Water Resources Research. Aspects of the work are also described in a recent article in the journal Science (vol. 247, pp.1569-1572, March 1990).

#### Potassium Bromide

Moffett Naval Air Station, Mountain View, California.

This is an ongoing evaluation of in-situ bioremediation being conducted in a sand/gravel aquifer by Stanford University. I was managing the project at its start before I moved to UCLA, and secured approval from the California Regional Water Quality Control Board and the Environmental Protection Agency prior to beginning the field research. Since that time, there have been many short term experiments involving the injection of the tracer. It has been shown to be conservative in its behavior in a report available through the National Technical Information Service (NTIS #PB88-130257, Nov 87) and a paper now in press in the scientific journal Ground Water. This work is funded by the U.S.E.P.A.

#### Potassium Iodide

Rocky Mountain Arsenal, Commerce City, Colorado.

This was the experiment I conducted with my group from UCLA and in collaboration with Ebasco, Inc. and R.L. Stollar and Associates. The experiment, conducted in Summer 1988, determined the rate of flushing of two organic contaminants from the sand aquifer. Iodide was used as the tracer since 1) background chloride levels were too high for use to use chloride as a tracer, 2) the various parties reviewing our plans readily accepted iodide as a harmless, nontoxic chemical (since it is used in table salt as a nutritional supplement), and 3) we guessed that the parties were less familiar with potassium bromide and chose not to attempt an argument for it.


Not all field studies are listed above, but this brief review illustrates that the most frequently used tracers are bromide salts. They have been used for studies in contaminated aquifers in the U.S. and Canada by a variety of researchers, all working with government funding. Of course, one would prefer not to add salt to an aquifer, but it is generally acknowledged that the very slight degradation caused by the use of the tracer is absolutely insignificant by comparison to the improvement in

understanding of the behavior of the much more worrisome contaminants, and the corresponding improvement in understanding of how to manage or clean up the contamination problem.

In any future work we might receive approval to conduct at the Rocky Mountain Arsenal, we would prefer to use sodium or potassium bromide, with sodium or potassium iodide as a second choice. Like all chemicals, including table salt, these salts possess some toxicity to animals if the dose is extremely high (several hundred to thousand milligrams per kilogram body weight). No such exposures would be remotely possible in our work. We plan to inject into the aquifer a 24-48 hour pulses of the tracer in concentrations on the order of 300 milligrams per liter, which is actually quite low (roughly equivalent to a quarter teaspoon of salt in a glass of water). No person is likely to be exposed even to those concentrations, of course, since the groundwater on the Arsenal near Basin F is contaminated with organic compounds and is not used for drinking. However, even if they were, it is unlikely the bromide or iodide salts would have a detrimental or even noticeable impact: for example, potassium bromide has medicinal use in lower doses as a sedative (hence the now outdated expression "take a bromide"), while potassium iodide is routinely added to table salt as a nutritional supplement.

I hope this addresses the issue we discussed. If I can provide any additional information, please let me know. Thanks for your continued interest in this work. I think the proposed project will prove very useful for your management or cleanup efforts while also very intriguing from a scientific point of view.

Sincerely,

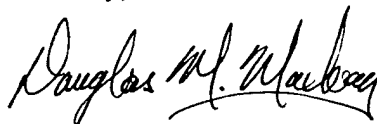A handwritten signature in cursive script, reading "Douglas M. Mackay". The signature is written in dark ink and is positioned above the typed name.

Douglas M. Mackay  
Assistant Professor

cc: R. Stollar, R.L. Stollar and Associates  
K. Glover, R.L. Stollar and Associates

# REPORT DOCUMENTATION PAGE

Form Approved  
OMB No. 0704-0188

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (0704-0188), Washington, DC 20503.

|  |   |  |                            |   |  |
|--|---|--|----------------------------|---|--|
| 1. AGENCY USE ONLY (Leave blank)   |   | 2. REPORT DATE<br>04/00/90                 |                            | 3. REPORT TYPE AND DATES COVERED                            |  |
| 4. TITLE AND SUBTITLE<br>FLUSHING OF ORGANIC CONTAMINANTS FROM A GROUNDWATER PLUME AT THE ROCKY MOUNTAIN ARSENAL   |   |  |                            | 5. FUNDING NUMBERS  |  |
| 6. AUTHOR(S)<br>MACKAY, D.; THORBJARNARSON, K.   |   |  |                            |   |  |
| 7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES)<br>UNIVERSITY OF CALIFORNIA, LOS ANGELES. SCHOOL OF PUBLIC HEALTH<br>LOS ANGELES, CA  |   |  |                            | 8. PERFORMING ORGANIZATION<br>REPORT NUMBER<br><br>90218R01 |  |
| 9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES)  |   |  |                            | 10. SPONSORING/MONITORING<br>AGENCY REPORT NUMBER           |  |
| 11. SUPPLEMENTARY NOTES  |   |  |                            |   |  |
| 12a. DISTRIBUTION/AVAILABILITY STATEMENT<br><br>APPROVED FOR PUBLIC RELEASE; DISTRIBUTION IS UNLIMITED   |   |  |                            | 12b. DISTRIBUTION CODE                                      |  |
| 13. ABSTRACT (Maximum 200 words)<br><br>DURING THE SUMMER OF 1988, UCLA CONDUCTED A FIELD EXPERIMENT ON FLUSHING OF ORGANIC CONTAMINANTS FROM A CONTAMINATED AQUIFER IN THE WESTERN TIER OF RMA. THE OBJECTIVES OF THE STUDY WERE TO:<br>1. ESTIMATE THE HYDRAULIC CONDUCTIVITY OF THE AQUIFER<br>2. ESTIMATE THE DEGREE TO WHICH TRCLE AND 111TCE ARE RETARDED IN THEIR MOBILITY DUE TO SORPTION BY THE AQUIFER MEDIA<br>3. DETERMINE THE EFFECTS OF SPATIAL VARIABILITY OF AQUIFER PROPERTIES ON WATER FLOW AND TRCLE AND 111TCE FLUSHING RATES<br>4. COMPARE RESULTS OF FIELD AND LABORATORY INVESTIGATIONS.<br>THE LABORATORY ANALYSES OF CORING SAMPLES INDICATED THAT THE HYDRAULIC CONDUCTIVITY OF THE AQUIFER AND THE TRCLE MOBILITY ARE LIKELY TO VARY SIGNIFICANTLY WITH DEPTH. THE FIELD EXPERIMENT CONSISTED OF 1) AIR STRIPPING EXTRACTED WATER, 2) SPIKING IT WITH A TRACER, AND 3) REINJECTING IT. THE FIELD DATA SHOW THAT FLUSHING WILL BE VERY EFFICIENT IN THE HIGHLY PERMEABLE STRATA, |   |  |                            |   |  |
| 14. SUBJECT TERMS<br><br>LABORATORY STUDIES, WELL CONSTRUCTION, HYDRAULIC CONDUCTIVITY ESTIMATES   |   |  |                            | 15. NUMBER OF PAGES   |  |
|  |   |  |                            | 16. PRICE CODE  |  |
| 17. SECURITY CLASSIFICATION<br>OF REPORT<br><br>UNCLASSIFIED   | 18. SECURITY CLASSIFICATION<br>OF THIS PAGE | 19. SECURITY CLASSIFICATION<br>OF ABSTRACT | 20. LIMITATION OF ABSTRACT |   |  |

**FLUSHING OF ORGANIC CONTAMINANTS  
FROM A GROUND WATER PLUME AT THE  
ROCKY MOUNTAIN ARSENAL:  
VOLUME II. APPENDICES**

Douglas M. Mackay, Ph.D  
Kathryn W. Thorbjarnarson  
UCLA School of Public Health  
Environmental Science and Engineering  
Los Angeles, CA 90024-1772

ES&E Tech. Report No. 90-69  
April 1990

## TABLE OF CONTENTS

|  |     |
|--|-----|
| INTRODUCTION . . . . .                                       | 1   |
| APPENDIX A. GRAIN SIZE PARAMETERS . . . . .                  | 2   |
| APPENDIX B. LABORATORY HYDRAULIC CONDUCTIVITY ESTIMATES . .  | 51  |
| APPENDIX C. LOCATION AND CONSTRUCTION OF WELLS . . . . .     | 61  |
| APPENDIX D. SOLUTE CONCENTRATIONS IN WATER SAMPLES . . . . . | 80  |
| APPENDIX E. CALCULATIONS OF PULSE BREAKTHROUGH MEANS . . . . | 102 |



## INTRODUCTION

In this volume, appendices containing various raw and reduced data are presented. These appendices are referred to in the text of the first volume "Flushing of Organic Contaminants from a Ground Water Plume at the Rocky Mountain Arsenal: Volume I. Field and Laboratory Studies.

**APPENDIX A. GRAIN SIZE PARAMETERS**

# GRAIN SIZE PARAMETERS

| Core # | Depth interval (ft) <sup>1</sup> | Mean (phi) | Sorting (phi) | Description                         |
|--------|----------------------------------|------------|---------------|-------------------------------------|
| 1      | 59.50-61.00                      | 0.11       | 1.43          | poorly sorted coarse sand           |
| 1      | 61.00-62.00                      | -0.65      | 1.45          | poorly sorted very coarse sand      |
| 1      | 62.00-63.50                      | -0.62      | 1.64          | poorly sorted very coarse sand      |
| 1      | 69.25-70.25                      | -0.04      | 1.53          | poorly sorted very coarse sand      |
| 1      | 70.25-71.25                      | -0.31      | 1.30          | moderately sorted very coarse sand  |
| 1      | 71.25-72.00                      | 0.09       | 1.44          | poorly sorted coarse sand           |
| 1      | 74.00-75.00                      | 0.29       | 1.54          | poorly sorted coarse sand           |
| 1      | 75.00-76.00                      | 0.22       | 1.34          | moderately sorted coarse sand       |
| 1      | 76.00-77.00                      | 0.49       | 1.22          | moderately sorted coarse sand       |
| 1      | 77.00-78.00                      | 0.72       | 1.15          | moderately sorted coarse sand       |
| 1      | 78.00-79.00                      | 0.70       | 1.10          | moderately sorted coarse sand       |
| 1      | 79.00-80.00                      | 1.33       | 1.07          | moderately sorted medium sand       |
| 1      | 80.00-81.00                      | 0.38       | 1.45          | poorly sorted coarse sand           |
| 1      | 81.00-81.75                      | -0.42      | 1.53          | poorly sorted very coarse sand      |
| 1      | 81.75-82.75                      | 0.80       | 1.28          | moderately sorted coarse sand       |
| 1      | 82.75-83.75                      | -0.17      | 1.59          | poorly sorted very coarse sand      |
| 1      | 84.00-85.25                      | 0.91       | 1.19          | moderately sorted coarse sand       |
| 1      | 85.25-86.25                      | 0.26       | 1.57          | poorly sorted coarse sand           |
| 1      | 86.25-87.25                      | 0.94       | 1.97          | poorly sorted coarse sand           |
| 1      | 87.25-88.50                      | 0.42       | 2.01          | very poorly sorted coarse sand      |
| 2      | 56.50-57.50                      | 0.49       | 1.56          | poorly sorted coarse sand           |
| 2      | 57.50-58.50                      | -0.06      | 1.54          | poorly sorted very coarse sand      |
| 2      | 58.50-59.50                      | -0.46      | 1.62          | poorly sorted very coarse sand      |
| 2      | 59.50-60.50                      | -1.03      | 1.78          | poorly sorted gravel                |
| 2      | 60.50-61.50                      | -0.60      | 1.72          | poorly sorted very coarse sand      |
| 2      | 64.00-65.00                      | 0.25       | 1.40          | poorly sorted coarse sand           |
| 2      | 65.00-66.00                      | -1.06      | 1.72          | poorly sorted gravel                |
| 2      | 66.00-67.00                      | -1.69      | 1.61          | poorly sorted gravel                |
| 2      | 67.00-68.00                      | -1.06      | 1.43          | poorly sorted gravel                |
| 3      | 59.80-61.05                      | -0.08      | 1.53          | poorly sorted very coarse sand      |
| 3      | 61.05-62.30                      | -0.07      | 1.84          | poorly sorted very coarse sand      |
| 3      | 64.80-65.80                      | -0.96      | 1.67          | poorly sorted very coarse sand      |
| 3      | 65.80-66.80                      | -0.92      | 1.55          | poorly sorted very coarse sand      |
| 3      | 66.80-67.80                      | -0.87      | 1.59          | poorly sorted very coarse sand      |
| 3      | 67.80-69.80                      | -1.00      | 1.73          | poorly sorted very coarse sand      |
| 3      | 69.80-70.80                      | 0.15       | 1.21          | moderately sorted coarse sand       |
| 3      | 70.80-71.80                      | -1.24      | 1.63          | poorly sorted gravel                |
| 3      | 71.80-72.80                      | -1.59      | 1.91          | poorly sorted gravel                |
| 3      | 72.80-74.30                      | -0.42      | 2.68          | extremely poorly sorted v.c. sand   |
| 3      | 74.80-75.80                      | 1.36       | 1.10          | moderately sorted medium sand       |
| 3      | 75.80-76.80                      | 0.69       | 1.39          | moderately sorted coarse sand       |
| 3      | 76.80-77.80                      | 0.97       | 1.03          | moderately sorted coarse sand       |
| 3      | 77.80-78.80                      | 0.91       | 1.24          | moderately sorted coarse sand       |
| 3      | 79.80-80.80                      | 0.78       | 1.03          | moderately sorted coarse sand       |
| 3      | 80.80-81.80                      | 0.87       | 1.16          | moderately sorted coarse sand       |
| 3      | 81.80-82.80                      | -0.72      | 2.54          | very poorly sorted very coarse sand |
| 3      | 82.80-83.80                      | 0.25       | 1.49          | poorly sorted coarse sand           |
| 3      | 86.05-86.30                      | 1.18       | 1.45          | poorly sorted medium sand           |

(1) All depths relative to a ground elevation of 5176.4 ft

# Method of Moments Grain Size Analysis

RMA 33080

Sample 59.5-61

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 93.2   | 8.02  | -20.06    | -2.61     |
| -1.5      | 153.2  | 13.19 | -19.78    | -1.61     |
| -0.5      | 283.6  | 24.42 | -12.21    | -0.61     |
| 0.5       | 361.1  | 31.09 | 15.54     | 0.39      |
| 1.5       | 177.5  | 15.28 | 22.92     | 1.39      |
| 2.5       | 55     | 4.74  | 11.84     | 2.39      |
| 3.5       | 23.7   | 2.04  | 7.14      | 3.39      |
| 4.5       | 14.2   | 1.22  | 5.50      | 4.39      |
|           | 1161.5 | 100   | 10.90     |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 6.81  | 54.62     | -142.49   | 371.76    |
| -1.5      | 2.59  | 34.14     | -54.94    | 88.39     |
| -0.5      | 0.37  | 9.05      | -5.51     | 3.36      |
| 0.5       | 0.15  | 4.75      | 1.86      | 0.73      |
| 1.5       | 1.94  | 29.57     | 41.13     | 57.22     |
| 2.5       | 5.72  | 27.07     | 64.73     | 154.77    |
| 3.5       | 11.50 | 23.46     | 79.57     | 269.81    |
| 4.5       | 19.28 | 23.57     | 103.51    | 454.51    |
|           |       | 206.25    | 87.85     | 1400.55   |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.1089539 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.0624940 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.4361386$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 0.8785272 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.2965965 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 14.005503 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 3.2924053 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 61-62

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -2.5      | 152    | 20.72 | -51.80    | -1.85     |
| -1.5      | 159.8  | 21.78 | -32.67    | -0.85     |
| -0.5      | 204.1  | 27.82 | -13.91    | 0.15      |
| 0.5       | 137.8  | 18.78 | 9.39      | 1.15      |
| 1.5       | 45.8   | 6.24  | 9.36      | 2.15      |
| 2.5       | 19     | 2.59  | 6.47      | 3.15      |
| 3.5       | 8.6    | 1.17  | 4.10      | 4.15      |
| 4.5       | 6.5    | 0.89  | 3.99      | 5.15      |
|           | 733.6  | 100   | -65.06    |           |

| Phi Class | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  |       |           |           |           |
| -2.5      | 3.42  | 70.87     | -131.06   | 242.37    |
| -1.5      | 0.72  | 15.71     | -13.35    | 11.34     |
| -0.5      | 0.02  | 0.63      | 0.10      | 0.01      |
| 0.5       | 1.32  | 24.87     | 28.61     | 32.93     |
| 1.5       | 4.63  | 28.88     | 62.10     | 133.56    |
| 2.5       | 9.93  | 25.71     | 81.00     | 255.20    |
| 3.5       | 17.23 | 20.20     | 83.83     | 347.93    |
| 4.5       | 26.53 | 23.51     | 121.07    | 623.58    |
|           |       | 210.37    | 232.30    | 1646.92   |

First Moment:

$$\text{Mean} = \frac{\text{Sum}(\text{Wt}\% * \text{Midpt})}{100}$$

$$= -0.650627$$

Second Moment:

$$\text{Dispersion} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^2))}{100}$$

$$= 2.1036746$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.4504049$$

$$\text{Third Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^3))}{100}$$

$$= 2.3230305$$

$$\text{Skewness} = \frac{\text{Third Moment}}{(\text{Standard deviation}^3)}$$

$$= 0.7613547$$

$$\text{Fourth Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^4))}{100}$$

$$= 16.469216$$

$$\text{Kurtosis} = \frac{\text{Fourth Moment}}{(\text{Standard Deviation}^4)}$$

$$= 3.7214808$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 62-63.5

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 289.3  | 27.49 | -68.74    | -1.88     |
| -1.5      | 188.3  | 17.90 | -26.84    | -0.88     |
| -0.5      | 202    | 19.20 | -9.60     | 0.12      |
| 0.5       | 212.2  | 20.17 | 10.08     | 1.12      |
| 1.5       | 92.3   | 8.77  | 13.16     | 2.12      |
| 2.5       | 38.4   | 3.65  | 9.12      | 3.12      |
| 3.5       | 17.8   | 1.69  | 5.92      | 4.12      |
| 4.5       | 11.9   | 1.13  | 5.09      | 5.12      |
|           | 1052.2 | 100   | -61.80    |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 3.54  | 97.38     | -183.27   | 344.90    |
| -1.5      | 0.78  | 13.92     | -12.28    | 10.83     |
| -0.5      | 0.01  | 0.27      | 0.03      | 0.00      |
| 0.5       | 1.25  | 25.21     | 28.18     | 31.51     |
| 1.5       | 4.49  | 39.35     | 83.35     | 176.54    |
| 2.5       | 9.72  | 35.48     | 110.63    | 344.95    |
| 3.5       | 16.96 | 28.69     | 118.14    | 486.50    |
| 4.5       | 26.19 | 29.62     | 151.62    | 776.00    |
|           |       | 269.92    | 296.41    | 2171.24   |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.618038 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.6992393 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.6429361$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 2.9641390 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.6684000 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 21.712363 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 2.9800552 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 69.25-70.25

| Phi Class | Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------|----------|--------|-------|-----------|-----------------------|
| -2.5      |          | 125.9  | 15.96 | -39.90    | -2.46                 |
| -1.5      |          | 72.5   | 9.19  | -13.79    | -1.46                 |
| -0.5      |          | 167    | 21.17 | -10.59    | -0.46                 |
| 0.5       |          | 251.1  | 31.83 | 15.92     | 0.54                  |
| 1.5       |          | 111.7  | 14.16 | 21.24     | 1.54                  |
| 2.5       |          | 39.2   | 4.97  | 12.42     | 2.54                  |
| 3.5       |          | 15.6   | 1.98  | 6.92      | 3.54                  |
| 4.5       |          | 5.8    | 0.74  | 3.31      | 4.54                  |
|           |          | 788.8  | 100   | -4.46     |                       |

| Phi Class | Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|----------|-------|-----------|-----------|-----------|
| -2.5      |          | 6.03  | 96.23     | -236.27   | 580.14    |
| -1.5      |          | 2.12  | 19.47     | -28.33    | 41.24     |
| -0.5      |          | 0.21  | 4.39      | -2.00     | 0.91      |
| 0.5       |          | 0.30  | 9.44      | 5.14      | 2.80      |
| 1.5       |          | 2.39  | 33.79     | 52.19     | 80.61     |
| 2.5       |          | 6.48  | 32.18     | 81.88     | 208.36    |
| 3.5       |          | 12.56 | 24.85     | 88.08     | 312.20    |
| 4.5       |          | 20.65 | 15.19     | 69.02     | 313.66    |
|           |          |       | 235.53    | 29.70     | 1539.91   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.044624 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.3552601 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.5346856$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 0.2970151 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.0821713 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 15.399111 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 2.7759899 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 70.25-71.25

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 63.9   | 9.87  | -24.66    | -2.19     |
| -1.5      | 139    | 21.46 | -32.19    | -1.19     |
| -0.5      | 176.6  | 27.27 | -13.63    | -0.19     |
| 0.5       | 173.9  | 26.85 | 13.42     | 0.81      |
| 1.5       | 72.4   | 11.18 | 16.77     | 1.81      |
| 2.5       | 16.4   | 2.53  | 6.33      | 2.81      |
| 3.5       | 3.3    | 0.51  | 1.78      | 3.81      |
| 4.5       | 2.2    | 0.34  | 1.53      | 4.81      |
|           | 647.7  | 100   | -30.65    |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 4.81  | 47.47     | -104.11   | 228.37    |
| -1.5      | 1.42  | 30.57     | -36.48    | 43.54     |
| -0.5      | 0.04  | 1.02      | -0.20     | 0.04      |
| 0.5       | 0.65  | 17.47     | 14.09     | 11.36     |
| 1.5       | 3.26  | 36.48     | 65.90     | 119.06    |
| 2.5       | 7.88  | 19.94     | 55.97     | 157.09    |
| 3.5       | 14.49 | 7.38      | 28.10     | 106.97    |
| 4.5       | 23.10 | 7.85      | 37.72     | 181.29    |
|           |       | 168.17    | 60.99     | 847.72    |

## First Moment:

Mean =  $\text{Sum}(\text{Wt}\% \cdot \text{Midpt}) / 100$   
 = -0.306546

## Second Moment:

Dispersion =  $\text{Sum}((\text{Wt}\%) \cdot (\text{Dev}^2)) / 100$   
 = 1.6817357

## Square Root of Second Moment:

Standard Deviation = 1.2968175

Third Moment =  $\text{Sum}((\text{Wt}\%) \cdot (\text{Dev}^3)) / 100$   
 = 0.6099216

Skewness = Third Moment / (Standard deviation\*3)  
 = 0.2796645

Fourth Moment =  $\text{Sum}((\text{Wt}\%) \cdot (\text{Dev}^4)) / 100$   
 = 8.4772439

Kurtosis = Fourth Moment / (Standard Deviation\*4)  
 = 2.9973618



# Method of Moments Grain Size Analysis

RMA 33080

Sample 71.25-72

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 13.5   | 4.63  | -11.57    | -2.59     |
| -1.5      | 33.6   | 11.51 | -17.27    | -1.59     |
| -0.5      | 118.4  | 40.58 | -20.29    | -0.59     |
| 0.5       | 73.8   | 25.29 | 12.65     | 0.41      |
| 1.5       | 26.1   | 8.94  | 13.42     | 1.41      |
| 2.5       | 5      | 1.71  | 4.28      | 2.41      |
| 3.5       | 15     | 5.14  | 17.99     | 3.41      |
| 4.5       | 6.4    | 2.19  | 9.87      | 4.41      |
|           | 291.8  | 100   | 9.08      |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 6.71  | 31.05     | -80.46    | 208.45    |
| -1.5      | 2.53  | 29.14     | -46.36    | 73.75     |
| -0.5      | 0.35  | 14.16     | -8.37     | 4.94      |
| 0.5       | 0.17  | 4.23      | 1.73      | 0.71      |
| 1.5       | 1.99  | 17.76     | 25.03     | 35.27     |
| 2.5       | 5.80  | 9.95      | 23.96     | 57.73     |
| 3.5       | 11.62 | 59.75     | 203.68    | 694.40    |
| 4.5       | 19.44 | 42.64     | 188.01    | 828.95    |
|           |       | 208.69    | 307.23    | 1904.19   |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.0908156 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.0868519 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.4445940$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 3.0723156 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 1.0191271 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 19.041873 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 4.3724657 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 74-75

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -2.5      | 41.8   | 7.04  | -17.60    | -2.79     |
| -1.5      | 86.5   | 14.57 | -21.85    | -1.79     |
| -0.5      | 121    | 20.38 | -10.19    | -0.79     |
| 0.5       | 158    | 26.61 | 13.31     | 0.21      |
| 1.5       | 109.4  | 18.43 | 27.64     | 1.21      |
| 2.5       | 50.7   | 8.54  | 21.35     | 2.21      |
| 3.5       | 20.4   | 3.44  | 12.03     | 3.21      |
| 4.5       | 5.9    | 0.99  | 4.47      | 4.21      |
|           | 593.7  | 100   | 29.15     |           |

| Phi Class | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  |       |           |           |           |
| -2.5      | 7.79  | 54.86     | -153.15   | 427.51    |
| -1.5      | 3.21  | 46.76     | -83.77    | 150.07    |
| -0.5      | 0.63  | 12.77     | -10.10    | 8.00      |
| 0.5       | 0.04  | 1.16      | 0.24      | 0.05      |
| 1.5       | 1.46  | 26.91     | 32.52     | 39.31     |
| 2.5       | 4.88  | 41.65     | 91.99     | 203.16    |
| 3.5       | 10.29 | 35.37     | 113.50    | 364.15    |
| 4.5       | 17.71 | 17.60     | 74.08     | 311.75    |
|           |       | 237.09    | 65.31     | 1504.00   |

First Moment:

$$\text{Mean} = \frac{\text{Sum}(Wt\% * \text{Midpt})}{100}$$

$$= 0.2914771$$

Second Moment:

$$\text{Dispersion} = \frac{\text{Sum}((Wt\%) * (Dev^2))}{100}$$

$$= 2.3708689$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.5397626$$

$$\text{Third Moment} = \frac{\text{Sum}((Wt\%) * (Dev^3))}{100}$$

$$= 0.6530634$$

$$\text{Skewness} = \frac{\text{Third Moment}}{(\text{Standard deviation}^3)}$$

$$= 0.1788932$$

$$\text{Fourth Moment} = \frac{\text{Sum}((Wt\%) * (Dev^4))}{100}$$

$$= 15.040001$$

$$\text{Kurtosis} = \frac{\text{Fourth Moment}}{(\text{Standard Deviation}^4)}$$

$$= 2.6756714$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 75-76

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 104.8  | 10.89 | -27.22    | -2.72     |
| -1.5      | 49.1   | 5.10  | -7.65     | -1.72     |
| -0.5      | 166.4  | 17.29 | -8.65     | -0.72     |
| 0.5       | 402.8  | 41.85 | 20.93     | 0.28      |
| 1.5       | 193.2  | 20.07 | 30.11     | 1.28      |
| 2.5       | 30.6   | 3.18  | 7.95      | 2.28      |
| 3.5       | 8.7    | 0.90  | 3.16      | 3.28      |
| 4.5       | 6.8    | 0.71  | 3.18      | 4.28      |

---

|       |     |       |
|-------|-----|-------|
| 962.4 | 100 | 21.81 |
|-------|-----|-------|

---

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 7.39  | 80.45     | -218.68   | 594.38    |
| -1.5      | 2.95  | 15.06     | -25.87    | 44.45     |
| -0.5      | 0.52  | 8.92      | -6.40     | 4.60      |
| 0.5       | 0.08  | 3.33      | 0.94      | 0.26      |
| 1.5       | 1.64  | 32.99     | 42.29     | 54.21     |
| 2.5       | 5.21  | 16.56     | 37.78     | 86.21     |
| 3.5       | 10.77 | 9.74      | 31.96     | 104.87    |
| 4.5       | 18.33 | 12.95     | 55.47     | 237.52    |

---

|        |        |         |
|--------|--------|---------|
| 179.99 | -82.52 | 1126.51 |
|--------|--------|---------|

---

First Moment:

Mean =  $\text{Sum}(\text{Wt}\% \cdot \text{Midpt}) / 100$   
 = 0.2181005

Second Moment:

Dispersion =  $\text{Sum}((\text{Wt}\%) \cdot (\text{Dev}^2)) / 100$   
 = 1.7998968

Square Root of Second Moment:

Standard Deviation = 1.3416023

Third Moment =  $\text{Sum}((\text{Wt}\%) \cdot (\text{Dev}^3)) / 100$

= -0.825233

Skewness = Third Moment / (Standard deviation\*3)

= -0.341747

Fourth Moment =  $\text{Sum}((\text{Wt}\%) \cdot (\text{Dev}^4)) / 100$

= 11.265118

Kurtosis = Fourth Moment / (Standard Deviation\*4)

= 3.4772871

Method of Moments Grain Size Analysis

RMA 33080

Sample 76-77

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 26.3   | 4.07  | -10.16    | -2.99     |
| -1.5      | 40.8   | 6.31  | -9.46     | -1.99     |
| -0.5      | 107.8  | 16.66 | -8.33     | -0.99     |
| 0.5       | 275.4  | 42.57 | 21.29     | 0.01      |
| 1.5       | 149    | 23.03 | 34.55     | 1.01      |
| 2.5       | 32.4   | 5.01  | 12.52     | 2.01      |
| 3.5       | 9.8    | 1.51  | 5.30      | 3.01      |
| 4.5       | 5.4    | 0.83  | 3.76      | 4.01      |
|           | 646.9  | 100   | 49.46     |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 8.97  | 36.46     | -109.18   | 326.94    |
| -1.5      | 3.98  | 25.09     | -50.05    | 99.82     |
| -0.5      | 0.99  | 16.48     | -16.40    | 16.31     |
| 0.5       | 0.00  | 0.00      | 0.00      | 0.00      |
| 1.5       | 1.01  | 23.28     | 23.41     | 23.54     |
| 2.5       | 4.02  | 20.14     | 40.39     | 81.01     |
| 3.5       | 9.03  | 13.68     | 41.12     | 123.60    |
| 4.5       | 16.04 | 13.39     | 53.64     | 214.85    |
|           |       | 148.54    | -17.05    | 886.06    |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.4945895 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.4853625 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.2187545$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= -0.170511$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= -0.094189$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 8.8606339$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 4.0160566$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 77-78

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 13.2   | 1.80  | -4.49     | -3.22     |
| -1.5      | 23     | 3.13  | -4.70     | -2.22     |
| -0.5      | 108.3  | 14.75 | -7.37     | -1.22     |
| 0.5       | 344.4  | 46.90 | 23.45     | -0.22     |
| 1.5       | 177    | 24.10 | 36.16     | 0.78      |
| 2.5       | 40     | 5.45  | 13.62     | 1.78      |
| 3.5       | 15.4   | 2.10  | 7.34      | 2.78      |
| 4.5       | 13     | 1.77  | 7.97      | 3.78      |
|           | 734.3  | 100   | 71.97     |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 10.37 | 18.63     | -60.00    | 193.17    |
| -1.5      | 4.93  | 15.43     | -34.25    | 76.03     |
| -0.5      | 1.49  | 21.94     | -26.76    | 32.64     |
| 0.5       | 0.05  | 2.26      | -0.50     | 0.11      |
| 1.5       | 0.61  | 14.68     | 11.45     | 8.94      |
| 2.5       | 3.17  | 17.27     | 30.74     | 54.73     |
| 3.5       | 7.73  | 16.21     | 45.08     | 125.32    |
| 4.5       | 14.29 | 25.30     | 95.64     | 361.57    |
|           |       | 131.73    | 61.40     | 852.51    |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.7196649 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.3172654 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.1477218$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= 0.6140434$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.4061524 \end{aligned}$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 8.5250847$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 4.9130601 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 78-79

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 4.4    | 0.83  | -2.08     | -3.20     |
| -1.5      | 13.4   | 2.54  | -3.80     | -2.20     |
| -0.5      | 96.7   | 18.30 | -9.15     | -1.20     |
| 0.5       | 247.3  | 46.79 | 23.40     | -0.20     |
| 1.5       | 118.5  | 22.42 | 33.63     | 0.80      |
| 2.5       | 28.7   | 5.43  | 13.58     | 1.80      |
| 3.5       | 11.4   | 2.16  | 7.55      | 2.80      |
| 4.5       | 8.1    | 1.53  | 6.90      | 3.80      |

---

|       |     |       |
|-------|-----|-------|
| 528.5 | 100 | 70.02 |
|-------|-----|-------|

---

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 10.24 | 8.53      | -27.29    | 87.32     |
| -1.5      | 4.84  | 12.27     | -27.00    | 59.42     |
| -0.5      | 1.44  | 26.36     | -31.63    | 37.96     |
| 0.5       | 0.04  | 1.88      | -0.38     | 0.08      |
| 1.5       | 0.64  | 14.34     | 11.47     | 9.18      |
| 2.5       | 3.24  | 17.59     | 31.66     | 56.98     |
| 3.5       | 7.84  | 16.91     | 47.34     | 132.55    |
| 4.5       | 14.44 | 22.13     | 84.09     | 319.51    |

---

|        |       |        |
|--------|-------|--------|
| 120.00 | 88.26 | 702.99 |
|--------|-------|--------|

---

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.7001892 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.2000378 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.0954623$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 0.8826262 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.6714048 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 7.0299390 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 4.8815945 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 79-80

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 0.5    | 0.07  | -0.19     | -3.83     |
| -1.5      | 3.9    | 0.58  | -0.88     | -2.83     |
| -0.5      | 33.6   | 5.03  | -2.52     | -1.83     |
| 0.5       | 246.6  | 36.94 | 18.47     | -0.83     |
| 1.5       | 231.3  | 34.65 | 51.98     | 0.17      |
| 2.5       | 103.3  | 15.48 | 38.69     | 1.17      |
| 3.5       | 35.5   | 5.32  | 18.61     | 2.17      |
| 4.5       | 12.8   | 1.92  | 8.63      | 3.17      |
|           | 667.5  | 100   | 132.80    |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 14.65 | 1.10      | -4.20     | 16.08     |
| -1.5      | 8.00  | 4.67      | -13.21    | 37.37     |
| -0.5      | 3.34  | 16.82     | -30.75    | 56.21     |
| 0.5       | 0.69  | 25.33     | -20.97    | 17.37     |
| 1.5       | 0.03  | 1.02      | 0.18      | 0.03      |
| 2.5       | 1.37  | 21.26     | 24.91     | 29.20     |
| 3.5       | 4.72  | 25.09     | 54.49     | 118.36    |
| 4.5       | 10.06 | 19.29     | 61.20     | 194.13    |
|           |       | 114.59    | 71.64     | 468.74    |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 1.3280149 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.1458518 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.0704447$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 0.7164449 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.5841039 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 4.6874399 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 3.5700867 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 80-81

| Phi Class | Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------|----------|--------|-------|-----------|-----------------------|
|           | -2.5     | 29.1   | 4.20  | -10.51    | -2.88                 |
|           | -1.5     | 46.1   | 6.66  | -9.99     | -1.88                 |
|           | -0.5     | 142.7  | 20.62 | -10.31    | -0.88                 |
|           | 0.5      | 300.2  | 43.38 | 21.69     | 0.12                  |
|           | 1.5      | 128.1  | 18.51 | 27.76     | 1.12                  |
|           | 2.5      | 30.8   | 4.45  | 11.13     | 2.12                  |
|           | 3.5      | 9.4    | 1.36  | 4.75      | 3.12                  |
|           | 4.5      | 5.7    | 0.82  | 3.71      | 4.12                  |
|           |          | 692.1  | 100   | 38.22     |                       |

| Phi Class | Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|----------|-------|-----------|-----------|-----------|
|           | -2.5     | 8.31  | 34.93     | -100.67   | 290.17    |
|           | -1.5     | 3.54  | 23.60     | -44.42    | 83.61     |
|           | -0.5     | 0.78  | 16.05     | -14.16    | 12.49     |
|           | 0.5      | 0.01  | 0.60      | 0.07      | 0.01      |
|           | 1.5      | 1.25  | 23.12     | 25.85     | 28.89     |
|           | 2.5      | 4.48  | 19.96     | 42.27     | 89.51     |
|           | 3.5      | 9.72  | 13.20     | 41.16     | 128.33    |
|           | 4.5      | 16.96 | 13.96     | 57.50     | 236.78    |
|           |          |       | 145.43    | 7.60      | 869.79    |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.3822424 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.4542736 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.2059326$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 0.0760006 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.0433359 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 8.6978775 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 4.1126433 \end{aligned}$$



Method of Moments Grain Size Analysis

RMA 33080

Sample 81-81.75

| Phi Class | Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------|----------|--------|-------|-----------|-----------------------|
|           | -2.5     | 100.2  | 18.58 | -46.45    | -2.08                 |
|           | -1.5     | 101.1  | 18.75 | -28.12    | -1.08                 |
|           | -0.5     | 126.3  | 23.42 | -11.71    | -0.08                 |
|           | 0.5      | 126    | 23.36 | 11.68     | 0.92                  |
|           | 1.5      | 55.5   | 10.29 | 15.44     | 1.92                  |
|           | 2.5      | 17.3   | 3.21  | 8.02      | 2.92                  |
|           | 3.5      | 7.6    | 1.41  | 4.93      | 3.92                  |
|           | 4.5      | 5.3    | 0.98  | 4.42      | 4.92                  |
|           |          | 539.3  | 100   | -41.79    |                       |

| Phi Class | Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|----------|-------|-----------|-----------|-----------|
|           | -2.5     | 4.34  | 80.55     | -167.71   | 349.20    |
|           | -1.5     | 1.17  | 21.95     | -23.76    | 25.71     |
|           | -0.5     | 0.01  | 0.16      | -0.01     | 0.00      |
|           | 0.5      | 0.84  | 19.68     | 18.07     | 16.58     |
|           | 1.5      | 3.68  | 37.85     | 72.60     | 139.23    |
|           | 2.5      | 8.51  | 27.31     | 79.69     | 232.53    |
|           | 3.5      | 15.35 | 21.63     | 84.75     | 332.03    |
|           | 4.5      | 24.19 | 23.77     | 116.89    | 574.84    |
|           |          |       | 232.91    | 180.51    | 1670.12   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.417856 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.3290581 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.5261251$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= 1.8050607$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= 0.5078334$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 16.701217$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 3.0788425$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 81.75-82.75

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 21.7   | 3.63  | -9.06     | -3.30     |
| -1.5      | 22.7   | 3.79  | -5.69     | -2.30     |
| -0.5      | 76.6   | 12.80 | -6.40     | -1.30     |
| 0.5       | 220.9  | 36.91 | 18.45     | -0.30     |
| 1.5       | 181.3  | 30.29 | 45.44     | 0.70      |
| 2.5       | 50.7   | 8.47  | 21.18     | 1.70      |
| 3.5       | 16.1   | 2.69  | 9.42      | 2.70      |
| 4.5       | 8.5    | 1.42  | 6.39      | 3.70      |
|           | 598.5  | 100   | 79.72     |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 10.87 | 39.42     | -129.97   | 428.55    |
| -1.5      | 5.28  | 20.02     | -45.98    | 105.63    |
| -0.5      | 1.68  | 21.54     | -27.94    | 36.25     |
| 0.5       | 0.09  | 3.26      | -0.97     | 0.29      |
| 1.5       | 0.49  | 14.96     | 10.51     | 7.39      |
| 2.5       | 2.90  | 24.56     | 41.82     | 71.21     |
| 3.5       | 7.30  | 19.65     | 53.11     | 143.55    |
| 4.5       | 13.71 | 19.47     | 72.10     | 266.97    |
|           |       | 162.88    | -27.32    | 1059.82   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.7972431 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.6287726 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.2762337$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= -0.273173$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= -0.131415$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 10.598237$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 3.9949624$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 82.75-83.75

| Phi Class | Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------|----------|--------|-------|-----------|-----------------------|
| -2.5      |          | 115.3  | 16.21 | -40.54    | -2.33                 |
| -1.5      |          | 91.4   | 12.85 | -19.28    | -1.33                 |
| -0.5      |          | 179.1  | 25.19 | -12.59    | -0.33                 |
| 0.5       |          | 189.5  | 26.65 | 13.32     | 0.67                  |
| 1.5       |          | 79.3   | 11.15 | 16.73     | 1.67                  |
| 2.5       |          | 28.7   | 4.04  | 10.09     | 2.67                  |
| 3.5       |          | 14.6   | 2.05  | 7.19      | 3.67                  |
| 4.5       |          | 13.2   | 1.86  | 8.35      | 4.67                  |
|           |          | 711.1  | 100   | -16.73    |                       |

| Phi Class | Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|----------|-------|-----------|-----------|-----------|
| -2.5      |          | 5.44  | 88.23     | -205.82   | 480.12    |
| -1.5      |          | 1.78  | 22.83     | -30.43    | 40.55     |
| -0.5      |          | 0.11  | 2.79      | -0.93     | 0.31      |
| 0.5       |          | 0.45  | 11.87     | 7.92      | 5.28      |
| 1.5       |          | 2.78  | 31.00     | 51.69     | 86.17     |
| 2.5       |          | 7.11  | 28.71     | 76.59     | 204.28    |
| 3.5       |          | 13.45 | 27.61     | 101.26    | 371.36    |
| 4.5       |          | 21.78 | 40.44     | 188.73    | 880.84    |
|           |          |       | 253.48    | 189.01    | 2068.92   |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.167276 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.5347736 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.5920972$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 1.8900644 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.4683471 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 20.689165 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 3.2200649 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 84-85.25

| Phi Class | Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------|----------|--------|-------|-----------|-----------------------|
| -2.5      |          | 8.4    | 1.29  | -3.22     | -3.41                 |
| -1.5      |          | 27.7   | 4.25  | -6.37     | -2.41                 |
| -0.5      |          | 84.5   | 12.95 | -6.48     | -1.41                 |
| 0.5       |          | 224.5  | 34.41 | 17.20     | -0.41                 |
| 1.5       |          | 214.3  | 32.84 | 49.26     | 0.59                  |
| 2.5       |          | 68.2   | 10.45 | 26.13     | 1.59                  |
| 3.5       |          | 17     | 2.61  | 9.12      | 2.59                  |
| 4.5       |          | 7.9    | 1.21  | 5.45      | 3.59                  |
|           |          | 652.5  | 100   | 91.10     |                       |

| Phi Class | Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|----------|-------|-----------|-----------|-----------|
| -2.5      |          | 11.64 | 14.98     | -51.09    | 174.28    |
| -1.5      |          | 5.81  | 24.68     | -59.50    | 143.45    |
| -0.5      |          | 1.99  | 25.78     | -36.38    | 51.34     |
| 0.5       |          | 0.17  | 5.81      | -2.39     | 0.98      |
| 1.5       |          | 0.35  | 11.39     | 6.71      | 3.95      |
| 2.5       |          | 2.52  | 26.39     | 41.93     | 66.63     |
| 3.5       |          | 6.70  | 17.46     | 45.21     | 117.05    |
| 4.5       |          | 12.88 | 15.59     | 55.97     | 200.87    |
|           |          |       | 142.09    | 0.46      | 758.56    |

## First Moment:

$$\begin{aligned}\text{Mean} &= \text{Sum}(\text{Wt\%} * \text{Midpt}) / 100 \\ &= 0.9110344\end{aligned}$$

## Second Moment:

$$\begin{aligned}\text{Dispersion} &= \text{Sum}((\text{Wt\%}) * (\text{Dev}^2)) / 100 \\ &= 1.4209357\end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.1920300$$

$$\begin{aligned}\text{Third Moment} &= \text{Sum}((\text{Wt\%}) * (\text{Dev}^3)) / 100 \\ &= 0.0046021\end{aligned}$$

$$\begin{aligned}\text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.0027170\end{aligned}$$

$$\begin{aligned}\text{Fourth Moment} &= \text{Sum}((\text{Wt\%}) * (\text{Dev}^4)) / 100 \\ &= 7.5855615\end{aligned}$$

$$\begin{aligned}\text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 3.7569799\end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 85.25-86.25

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 78.2   | 12.23 | -30.58    | -2.76     |
| -1.5      | 58.3   | 9.12  | -13.68    | -1.76     |
| -0.5      | 101.5  | 15.87 | -7.94     | -0.76     |
| 0.5       | 199.7  | 31.23 | 15.62     | 0.24      |
| 1.5       | 133.3  | 20.85 | 31.27     | 1.24      |
| 2.5       | 47.6   | 7.44  | 18.61     | 2.24      |
| 3.5       | 13     | 2.03  | 7.12      | 3.24      |
| 4.5       | 7.8    | 1.22  | 5.49      | 4.24      |
|           | 639.4  | 100   | 25.91     |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 7.61  | 93.11     | -256.90   | 708.82    |
| -1.5      | 3.09  | 28.22     | -49.64    | 87.32     |
| -0.5      | 0.58  | 9.15      | -6.95     | 5.27      |
| 0.5       | 0.06  | 1.81      | 0.44      | 0.11      |
| 1.5       | 1.54  | 32.10     | 39.83     | 49.42     |
| 2.5       | 5.02  | 37.38     | 83.77     | 187.71    |
| 3.5       | 10.50 | 21.35     | 69.21     | 224.29    |
| 4.5       | 17.98 | 21.94     | 93.04     | 394.58    |
|           |       | 245.06    | -27.20    | 1657.51   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.2591492 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.4505927 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.5654369$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= -0.271962$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= -0.070892$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 16.575147$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 2.7600384$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 86.25-87.25

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -2.5      | 28     | 5.41  | -13.54    | -3.44     |
| -1.5      | 73.5   | 14.21 | -21.32    | -2.44     |
| -0.5      | 84     | 16.24 | -8.12     | -1.44     |
| 0.5       | 76.1   | 14.72 | 7.36      | -0.44     |
| 1.5       | 100.1  | 19.36 | 29.04     | 0.56      |
| 2.5       | 66.6   | 12.88 | 32.20     | 1.56      |
| 3.5       | 43.8   | 8.47  | 29.65     | 2.56      |
| 4.5       | 45     | 8.70  | 39.16     | 3.56      |
|           | 517.1  | 100   | 94.42     |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -2.5      | 11.86 | 64.23     | -221.23   | 761.98    |
| -1.5      | 5.97  | 84.92     | -207.55   | 507.30    |
| -0.5      | 2.09  | 33.88     | -48.93    | 70.67     |
| 0.5       | 0.20  | 2.90      | -1.29     | 0.57      |
| 1.5       | 0.31  | 5.98      | 3.32      | 1.85      |
| 2.5       | 2.42  | 31.17     | 48.50     | 75.46     |
| 3.5       | 6.53  | 55.33     | 141.41    | 361.41    |
| 4.5       | 12.64 | 110.03    | 391.24    | 1391.18   |
|           |       | 388.45    | 105.47    | 3170.41   |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.9442080 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 3.8844815 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.9709088$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 1.0546880 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.1377604 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 31.704138 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 2.1011150 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33080

Sample 87.25-88.5

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -2.5      | 86.5   | 8.78  | -21.94    | -2.92     |
| -1.5      | 194.4  | 19.73 | -29.59    | -1.92     |
| -0.5      | 205.3  | 20.83 | -10.42    | -0.92     |
| 0.5       | 164.8  | 16.72 | 8.36      | 0.08      |
| 1.5       | 107.4  | 10.90 | 16.35     | 1.08      |
| 2.5       | 80.2   | 8.14  | 20.35     | 2.08      |
| 3.5       | 80.1   | 8.13  | 28.45     | 3.08      |
| 4.5       | 66.8   | 6.78  | 30.50     | 4.08      |
|           | 985.5  | 100   | 42.05     |           |

| Phi Class | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  |       |           |           |           |
| -2.5      | 8.53  | 74.87     | -218.65   | 638.58    |
| -1.5      | 3.69  | 72.76     | -139.74   | 268.37    |
| -0.5      | 0.85  | 17.65     | -16.25    | 14.96     |
| 0.5       | 0.01  | 0.11      | 0.01      | 0.00      |
| 1.5       | 1.17  | 12.70     | 13.71     | 14.80     |
| 2.5       | 4.32  | 35.19     | 73.18     | 152.16    |
| 3.5       | 9.48  | 77.08     | 237.35    | 730.92    |
| 4.5       | 16.64 | 112.80    | 460.18    | 1877.27   |
|           |       | 403.15    | 409.78    | 3697.07   |

First Moment:

$$\text{Mean} = \frac{\text{Sum}(\text{Wt}\% * \text{Midpt})}{100}$$

$$= 0.4205479$$

Second Moment:

$$\text{Dispersion} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^2))}{100}$$

$$= 4.0315361$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 2.0078685$$

$$\text{Third Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^3))}{100}$$

$$= 4.0978205$$

$$\text{Skewness} = \frac{\text{Third Moment}}{(\text{Standard deviation}^3)}$$

$$= 0.5062290$$

$$\text{Fourth Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^4))}{100}$$

$$= 36.970689$$

$$\text{Kurtosis} = \frac{\text{Fourth Moment}}{(\text{Standard Deviation}^4)}$$

$$= 2.2746596$$

# Method of Moments Grain Size Analysis

RMA Core 2

Sample 56.5-57.5

| Phi Class | Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------|----------|--------|-------|-----------|-----------------------|
|           | -5.5     | 0      | 0.00  | 0.00      | -5.99                 |
|           | -4.5     | 0      | 0.00  | 0.00      | -4.99                 |
|           | -3.5     | 18.62  | 2.45  | -8.59     | -3.99                 |
|           | -2.5     | 34.09  | 4.49  | -11.23    | -2.99                 |
|           | -1.5     | 62.6   | 8.25  | -12.37    | -1.99                 |
|           | -0.5     | 127.6  | 16.81 | -8.40     | -0.99                 |
|           | 0.5      | 251.6  | 33.14 | 16.57     | 0.01                  |
|           | 1.5      | 166.2  | 21.89 | 32.84     | 1.01                  |
|           | 2.5      | 58.2   | 7.67  | 19.17     | 2.01                  |
|           | 3.5      | 24.9   | 3.28  | 11.48     | 3.01                  |
|           | 4.5      | 15.3   | 2.02  | 9.07      | 4.01                  |
|           |          | 759.11 | 100   | 48.54     |                       |

| Phi Class | Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|----------|-------|-----------|-----------|-----------|
|           | -5.5     | 35.83 | 0.00      | 0.00      | 0.00      |
|           | -4.5     | 24.85 | 0.00      | 0.00      | 0.00      |
|           | -3.5     | 15.88 | 38.96     | -155.28   | 618.84    |
|           | -2.5     | 8.91  | 40.03     | -119.49   | 356.74    |
|           | -1.5     | 3.94  | 32.51     | -64.54    | 128.14    |
|           | -0.5     | 0.97  | 16.32     | -16.09    | 15.85     |
|           | 0.5      | 0.00  | 0.01      | 0.00      | 0.00      |
|           | 1.5      | 1.03  | 22.54     | 22.86     | 23.20     |
|           | 2.5      | 4.06  | 31.12     | 62.68     | 126.28    |
|           | 3.5      | 9.09  | 29.81     | 89.86     | 270.89    |
|           | 4.5      | 16.12 | 32.48     | 130.41    | 523.52    |
|           |          |       | 243.77    | -49.58    | 2063.47   |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.4854434 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.4376824 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.5613079$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= -0.495841$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= -0.130279$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 20.634744$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 3.4725205$$



# Method of Moments Grain Size Analysis

RMA Core 2

Sample 57.5-58.5

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -5.44     |
| -4.5      | 6.3    | 0.90  | -4.07     | -4.44     |
| -3.5      | 20.2   | 2.90  | -10.14    | -3.44     |
| -2.5      | 57.1   | 8.19  | -20.47    | -2.44     |
| -1.5      | 84.1   | 12.06 | -18.09    | -1.44     |
| -0.5      | 146    | 20.93 | -10.47    | -0.44     |
| 0.5       | 245.3  | 35.17 | 17.59     | 0.56      |
| 1.5       | 97     | 13.91 | 20.86     | 1.56      |
| 2.5       | 23.5   | 3.37  | 8.42      | 2.56      |
| 3.5       | 10.1   | 1.45  | 5.07      | 3.56      |
| 4.5       | 7.8    | 1.12  | 5.03      | 4.56      |
|           | 697.4  | 100   | -6.25     |           |

| Phi Class |        |           |           |           |
|-----------|--------|-----------|-----------|-----------|
| Midpoint  | Dev*2  | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 29.57  | 0.00      | 0.00      | 0.00      |
| -4.5      | 19.69  | 17.79     | -78.93    | 350.27    |
| -3.5      | 11.82  | 34.23     | -117.65   | 404.42    |
| -2.5      | 5.94   | 48.64     | -118.57   | 289.01    |
| -1.5      | 2.07   | 24.92     | -35.82    | 51.49     |
| -0.5      | 0.19   | 4.01      | -1.75     | 0.77      |
| 0.5       | 0.32   | 11.13     | 6.26      | 3.52      |
| 1.5       | 2.44   | 33.96     | 53.06     | 82.91     |
| 2.5       | 6.57   | 22.13     | 56.70     | 145.30    |
| 3.5       | 12.69  | 18.38     | 65.48     | 233.27    |
| 4.5       | 20.82  | 23.28     | 106.22    | 484.65    |
|           | 238.46 | -65.00    | 2045.61   |           |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.062517 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.3846059 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.5442169$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= -0.650018$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= -0.176522$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 20.456142$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 3.5974145$$

# Method of Moments Grain Size Analysis

RMA Core 2

Sample 58.5-59.5

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -5.04     |
| -4.5      | 19.3   | 2.78  | -12.49    | -4.04     |
| -3.5      | 32.8   | 4.72  | -16.51    | -3.04     |
| -2.5      | 65.5   | 9.42  | -23.55    | -2.04     |
| -1.5      | 103.7  | 14.91 | -22.37    | -1.04     |
| -0.5      | 177.8  | 25.57 | -12.78    | -0.04     |
| 0.5       | 202.1  | 29.06 | 14.53     | 0.96      |
| 1.5       | 66.6   | 9.58  | 14.37     | 1.96      |
| 2.5       | 14.7   | 2.11  | 5.28      | 2.96      |
| 3.5       | 6.9    | 0.99  | 3.47      | 3.96      |
| 4.5       | 6      | 0.86  | 3.88      | 4.96      |
|           |        | 695.4 | 100       | -46.16    |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 25.39 | 0.00      | 0.00      | 0.00      |
| -4.5      | 16.31 | 45.26     | -182.79   | 738.17    |
| -3.5      | 9.23  | 43.54     | -132.30   | 401.99    |
| -2.5      | 4.16  | 39.14     | -79.78    | 162.61    |
| -1.5      | 1.08  | 16.08     | -16.70    | 17.34     |
| -0.5      | 0.00  | 0.04      | -0.00     | 0.00      |
| 0.5       | 0.92  | 26.87     | 25.84     | 24.85     |
| 1.5       | 3.85  | 36.85     | 72.29     | 141.80    |
| 2.5       | 8.77  | 18.54     | 54.91     | 162.63    |
| 3.5       | 15.69 | 15.57     | 61.69     | 244.40    |
| 4.5       | 24.62 | 21.24     | 105.39    | 522.88    |
|           |       | 263.14    | -91.45    | 2416.68   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.461604 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.6313989 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.6221587$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= -0.914458$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= -0.214231$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 24.166777$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 3.4901600$$

# Method of Moments Grain Size Analysis

RMA Core 2

Sample 59.5-60.5

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -4.47     |
| -4.5      | 48.5   | 7.10  | -31.95    | -3.47     |
| -3.5      | 40.9   | 5.99  | -20.96    | -2.47     |
| -2.5      | 104.4  | 15.29 | -38.21    | -1.47     |
| -1.5      | 149.7  | 21.92 | -32.88    | -0.47     |
| -0.5      | 144.1  | 21.10 | -10.55    | 0.53      |
| 0.5       | 121    | 17.72 | 8.86      | 1.53      |
| 1.5       | 49.8   | 7.29  | 10.94     | 2.53      |
| 2.5       | 13.7   | 2.01  | 5.01      | 3.53      |
| 3.5       | 6.4    | 0.94  | 3.28      | 4.53      |
| 4.5       | 4.5    | 0.66  | 2.96      | 5.53      |
| <hr/>     |        |       |           |           |
| 683       |        | 100   | -103.50   |           |

| Phi Class | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  |       |           |           |           |
| -5.5      | 19.94 | 0.00      | 0.00      | 0.00      |
| -4.5      | 12.01 | 85.26     | -295.42   | 1023.62   |
| -3.5      | 6.08  | 36.39     | -89.69    | 221.09    |
| -2.5      | 2.15  | 32.81     | -48.06    | 70.41     |
| -1.5      | 0.22  | 4.74      | -2.20     | 1.02      |
| -0.5      | 0.29  | 6.04      | 3.23      | 1.73      |
| 0.5       | 2.36  | 41.74     | 64.07     | 98.35     |
| 1.5       | 6.43  | 46.86     | 118.78    | 301.10    |
| 2.5       | 12.50 | 25.07     | 88.61     | 313.22    |
| 3.5       | 20.57 | 19.27     | 87.40     | 396.34    |
| 4.5       | 30.64 | 20.18     | 111.72    | 618.39    |
| <hr/>     |       |           |           |           |
| 318.35    |       | 38.43     | 3045.28   |           |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -1.034992 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 3.1834753 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.7842296$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= 0.3843476$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= 0.0676662$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 30.452790$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 3.0048590$$

# Method of Moments Grain Size Analysis

RMA Core 2

Sample 60.5-61.5

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -4.90     |
| -4.5      | 17.8   | 3.09  | -13.90    | -3.90     |
| -3.5      | 27.2   | 4.72  | -16.52    | -2.90     |
| -2.5      | 77.1   | 13.38 | -33.46    | -1.90     |
| -1.5      | 103.6  | 17.98 | -26.97    | -0.90     |
| -0.5      | 132.6  | 23.02 | -11.51    | 0.10      |
| 0.5       | 130.4  | 22.63 | 11.32     | 1.10      |
| 1.5       | 55.3   | 9.60  | 14.40     | 2.10      |
| 2.5       | 19.4   | 3.37  | 8.42      | 3.10      |
| 3.5       | 7.6    | 1.32  | 4.62      | 4.10      |
| 4.5       | 5.1    | 0.89  | 3.98      | 5.10      |
|           | 576.1  | 100   | -59.63    |           |

| Phi Class | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  |       |           |           |           |
| -5.5      | 24.05 | 0.00      | 0.00      | 0.00      |
| -4.5      | 15.24 | 47.08     | -183.80   | 717.48    |
| -3.5      | 8.43  | 39.81     | -115.59   | 335.63    |
| -2.5      | 3.62  | 48.50     | -92.33    | 175.76    |
| -1.5      | 0.82  | 14.69     | -13.27    | 11.99     |
| -0.5      | 0.01  | 0.21      | 0.02      | 0.00      |
| 0.5       | 1.20  | 27.21     | 29.83     | 32.70     |
| 1.5       | 4.39  | 42.18     | 88.43     | 185.38    |
| 2.5       | 9.59  | 32.28     | 99.97     | 309.53    |
| 3.5       | 16.78 | 22.14     | 90.68     | 371.45    |
| 4.5       | 25.97 | 22.99     | 117.18    | 597.18    |
|           |       | 297.09    | 21.12     | 2737.10   |

First Moment:

$$\text{Mean} = \frac{\text{Sum}(\text{Wt}\% * \text{Midpt})}{100}$$

$$= -0.596337$$

Second Moment:

$$\text{Dispersion} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^2))}{100}$$

$$= 2.9709308$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.7236388$$

$$\text{Third Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^3))}{100}$$

$$= 0.2112047$$

$$\text{Skewness} = \frac{\text{Third Moment}}{(\text{Standard Deviation}^3)}$$

$$= 0.0412443$$

$$\text{Fourth Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^4))}{100}$$

$$= 27.370993$$

$$\text{Kurtosis} = \frac{\text{Fourth Moment}}{(\text{Standard Deviation}^4)}$$

$$= 3.1010264$$

# Method of Moments Grain Size Analysis

RMA Core 2

Sample 64-65

| Phi Class | Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------|----------|--------|-------|-----------|-----------------------|
| -2.5      |          | 29.2   | 4.15  | -10.36    | -2.75                 |
| -1.5      |          | 93.9   | 13.33 | -20.00    | -1.75                 |
| -0.5      |          | 189    | 26.84 | -13.42    | -0.75                 |
| 0.5       |          | 211.5  | 30.03 | 15.01     | 0.25                  |
| 1.5       |          | 110.2  | 15.65 | 23.47     | 1.25                  |
| 2.5       |          | 43.1   | 6.12  | 15.30     | 2.25                  |
| 3.5       |          | 18     | 2.56  | 8.95      | 3.25                  |
| 4.5       |          | 9.4    | 1.33  | 6.01      | 4.25                  |
|           |          | 704.3  | 100   | 24.95     |                       |

| Phi Class | Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|----------|-------|-----------|-----------|-----------|
| -2.5      |          | 7.56  | 31.34     | -86.18    | 236.95    |
| -1.5      |          | 3.06  | 40.81     | -71.40    | 124.91    |
| -0.5      |          | 0.56  | 15.08     | -11.30    | 8.47      |
| 0.5       |          | 0.06  | 1.88      | 0.47      | 0.12      |
| 1.5       |          | 1.56  | 24.47     | 30.59     | 38.26     |
| 2.5       |          | 5.06  | 30.99     | 69.75     | 156.97    |
| 3.5       |          | 10.57 | 27.00     | 87.77     | 285.30    |
| 4.5       |          | 18.07 | 24.11     | 102.49    | 435.63    |
|           |          |       | 195.69    | 122.20    | 1286.60   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.2495385 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.9568629 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.3988791$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 1.2219759 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.4463977 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 12.865984 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 3.3598678 \end{aligned}$$

Method of Moments Grain Size Analysis

RMA Core 2

Sample 65-66

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -4.44     |
| -4.5      | 38.4   | 5.43  | -24.43    | -3.44     |
| -3.5      | 46.7   | 6.60  | -23.11    | -2.44     |
| -2.5      | 121.9  | 17.23 | -43.09    | -1.44     |
| -1.5      | 154    | 21.77 | -32.66    | -0.44     |
| -0.5      | 158.7  | 22.44 | -11.22    | 0.56      |
| 0.5       | 119.9  | 16.95 | 8.48      | 1.56      |
| 1.5       | 40.9   | 5.78  | 8.67      | 2.56      |
| 2.5       | 16.1   | 2.28  | 5.69      | 3.56      |
| 3.5       | 6.3    | 0.89  | 3.12      | 4.56      |
| 4.5       | 4.4    | 0.62  | 2.80      | 5.56      |
|           |        | 707.3 | 100       | -105.75   |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 19.74 | 0.00      | 0.00      | 0.00      |
| -4.5      | 11.85 | 64.34     | -221.49   | 762.50    |
| -3.5      | 5.97  | 39.39     | -96.21    | 235.00    |
| -2.5      | 2.08  | 35.86     | -51.73    | 74.63     |
| -1.5      | 0.20  | 4.26      | -1.89     | 0.83      |
| -0.5      | 0.31  | 6.97      | 3.89      | 2.17      |
| 0.5       | 2.43  | 41.12     | 64.04     | 99.75     |
| 1.5       | 6.54  | 37.82     | 96.73     | 247.38    |
| 2.5       | 12.66 | 28.81     | 102.48    | 364.58    |
| 3.5       | 20.77 | 18.50     | 84.32     | 384.27    |
| 4.5       | 30.89 | 19.21     | 106.78    | 593.41    |
|           |       | 296.29    | 86.91     | 2764.51   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -1.057472 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.9629418 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.7213197$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= 0.8690831$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= 0.1704027$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 27.645099$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 3.1489944$$

# Method of Moments Grain Size Analysis

RMA Core 2

Sample 66-67

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -3.81     |
| -4.5      | 21.6   | 3.03  | -13.63    | -2.81     |
| -3.5      | 123.2  | 17.28 | -60.47    | -1.81     |
| -2.5      | 200.4  | 28.10 | -70.26    | -0.81     |
| -1.5      | 167.2  | 23.45 | -35.17    | 0.19      |
| -0.5      | 98.5   | 13.81 | -6.91     | 1.19      |
| 0.5       | 57.8   | 8.11  | 4.05      | 2.19      |
| 1.5       | 24.7   | 3.46  | 5.20      | 3.19      |
| 2.5       | 11.5   | 1.61  | 4.03      | 4.19      |
| 3.5       | 4.8    | 0.67  | 2.36      | 5.19      |
| 4.5       | 3.4    | 0.48  | 2.15      | 6.19      |
|           | 713.1  | 100   | -168.65   |           |

| Phi Class | Dev*2  | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|--------|-----------|-----------|-----------|
| Midpoint  |        |           |           |           |
| -5.5      | 14.54  | 0.00      | 0.00      | 0.00      |
| -4.5      | 7.92   | 23.98     | -67.46    | 189.80    |
| -3.5      | 3.29   | 56.82     | -103.04   | 186.86    |
| -2.5      | 0.66   | 18.60     | -15.13    | 12.31     |
| -1.5      | 0.03   | 0.82      | 0.15      | 0.03      |
| -0.5      | 1.41   | 19.45     | 23.07     | 27.38     |
| 0.5       | 4.78   | 38.75     | 84.73     | 185.26    |
| 1.5       | 10.15  | 35.17     | 112.07    | 357.11    |
| 2.5       | 17.53  | 28.27     | 118.33    | 495.40    |
| 3.5       | 26.90  | 18.11     | 93.91     | 487.07    |
| 4.5       | 38.27  | 18.25     | 112.89    | 698.41    |
|           | 258.20 | 359.53    | 2639.63   |           |

First Moment:

$$\text{Mean} = \frac{\text{Sum}(Wt\% * \text{Midpt})}{100} = -1.686509$$

Second Moment:

$$\text{Dispersion} = \frac{\text{Sum}((Wt\%) * (Dev*2))}{100} = 2.5819579$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.6068472$$

$$\text{Third Moment} = \frac{\text{Sum}((Wt\%) * (Dev*3))}{100} = 3.5953270$$

$$\text{Skewness} = \frac{\text{Third Moment}}{(\text{Standard deviation}^3)} = 0.8665919$$

$$\text{Fourth Moment} = \frac{\text{Sum}((Wt\%) * (Dev*4))}{100} = 26.396250$$

$$\text{Kurtosis} = \frac{\text{Fourth Moment}}{(\text{Standard Deviation}^4)} = 3.9595324$$

# Method of Moments Grain Size Analysis

RMA Core 2

Sample 67-68

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -4.44     |
| -4.5      | 0      | 0.00  | 0.00      | -3.44     |
| -3.5      | 0      | 0.00  | 0.00      | -2.44     |
| -2.5      | 218.3  | 32.36 | -80.89    | -1.44     |
| -1.5      | 178.4  | 26.44 | -39.66    | -0.44     |
| -0.5      | 132.9  | 19.70 | -9.85     | 0.56      |
| 0.5       | 87.2   | 12.92 | 6.46      | 1.56      |
| 1.5       | 35     | 5.19  | 7.78      | 2.56      |
| 2.5       | 13.9   | 2.06  | 5.15      | 3.56      |
| 3.5       | 5.3    | 0.79  | 2.75      | 4.56      |
| 4.5       | 3.7    | 0.55  | 2.47      | 5.56      |
|           |        | 674.7 | 100       | -105.79   |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 19.73 | 0.00      | 0.00      | 0.00      |
| -4.5      | 11.85 | 0.00      | 0.00      | 0.00      |
| -3.5      | 5.96  | 0.00      | 0.00      | 0.00      |
| -2.5      | 2.08  | 67.29     | -97.04    | 139.94    |
| -1.5      | 0.20  | 5.17      | -2.29     | 1.01      |
| -0.5      | 0.31  | 6.13      | 3.42      | 1.91      |
| 0.5       | 2.43  | 31.37     | 48.87     | 76.13     |
| 1.5       | 6.54  | 33.94     | 86.82     | 222.06    |
| 2.5       | 12.66 | 26.08     | 92.78     | 330.12    |
| 3.5       | 20.77 | 16.32     | 74.38     | 339.01    |
| 4.5       | 30.89 | 16.94     | 94.15     | 523.27    |
|           |       | 203.23    | 301.09    | 1633.45   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -1.057877 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.0323327 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.4255990$$

Third Moment = Sum((Wt%)\*(Dev\*3))/100

$$= 3.0109027$$

Skewness = Third Moment/(Standard deviation\*3)

$$= 1.0392128$$

Fourth Moment = Sum((Wt%)\*(Dev\*4))/100

$$= 16.334525$$

Kurtosis = Fourth Moment/(Standard Deviation\*4)

$$= 3.9547306$$



# Method of Moments Grain Size Analysis

RMA 33085

Sample 58.5-59.75

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -5.42     |
| -4.5      | 9.7    | 1.12  | -5.03     | -4.42     |
| -3.5      | 43     | 4.96  | -17.36    | -3.42     |
| -2.5      | 46.7   | 5.39  | -13.46    | -2.42     |
| -1.5      | 97.3   | 11.22 | -16.83    | -1.42     |
| -0.5      | 183.4  | 21.15 | -10.58    | -0.42     |
| 0.5       | 305.2  | 35.20 | 17.60     | 0.58      |
| 1.5       | 141.1  | 16.27 | 24.41     | 1.58      |
| 2.5       | 29.9   | 3.45  | 8.62      | 2.58      |
| 3.5       | 7      | 0.81  | 2.83      | 3.58      |
| 4.5       | 3.8    | 0.44  | 1.97      | 4.58      |
|           | 867.1  | 100   | -7.84     |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 29.39 | 0.00      | 0.00      | 0.00      |
| -4.5      | 19.55 | 21.87     | -96.71    | 427.60    |
| -3.5      | 11.71 | 58.06     | -198.66   | 679.73    |
| -2.5      | 5.86  | 31.58     | -76.48    | 185.22    |
| -1.5      | 2.02  | 22.68     | -32.24    | 45.83     |
| -0.5      | 0.18  | 3.76      | -1.59     | 0.67      |
| 0.5       | 0.33  | 11.77     | 6.81      | 3.94      |
| 1.5       | 2.49  | 40.54     | 63.99     | 100.99    |
| 2.5       | 6.65  | 22.92     | 59.11     | 152.40    |
| 3.5       | 12.80 | 10.34     | 36.99     | 132.36    |
| 4.5       | 20.96 | 9.19      | 42.06     | 192.56    |
|           |       | 232.71    | -196.72   | 1921.29   |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.078364 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.3271250 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.5254917$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= -1.967230$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= -0.554147$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 19.212914$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 3.5477564$$

Method of Moments Grain Size Analysis

RMA 33085

Sample 59.75-61

| Phi Class<br>Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------------------|--------|-------|-----------|-----------------------|
| -5.5                  | 0      | 0.00  | 0.00      | -5.43                 |
| -4.5                  | 64     | 7.02  | -31.60    | -4.43                 |
| -3.5                  | 31     | 3.40  | -11.90    | -3.43                 |
| -2.5                  | 33.1   | 3.63  | -9.08     | -2.43                 |
| -1.5                  | 66.9   | 7.34  | -11.01    | -1.43                 |
| -0.5                  | 165    | 18.10 | -9.05     | -0.43                 |
| 0.5                   | 311.7  | 34.20 | 17.10     | 0.57                  |
| 1.5                   | 184.9  | 20.29 | 30.43     | 1.57                  |
| 2.5                   | 37.1   | 4.07  | 10.18     | 2.57                  |
| 3.5                   | 10.6   | 1.16  | 4.07      | 3.57                  |
| 4.5                   | 7.1    | 0.78  | 3.51      | 4.57                  |
| 911.4                 |        | 100   | -7.36     |                       |

| Phi Class<br>Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------------------|-------|-----------|-----------|-----------|
| -5.5                  | 29.45 | 0.00      | 0.00      | 0.00      |
| -4.5                  | 19.59 | 137.58    | -609.00   | 2695.66   |
| -3.5                  | 11.74 | 39.93     | -136.82   | 468.81    |
| -2.5                  | 5.89  | 21.38     | -51.88    | 125.88    |
| -1.5                  | 2.03  | 14.93     | -21.30    | 30.38     |
| -0.5                  | 0.18  | 3.29      | -1.40     | 0.60      |
| 0.5                   | 0.33  | 11.25     | 6.46      | 3.70      |
| 1.5                   | 2.48  | 50.24     | 79.06     | 124.40    |
| 2.5                   | 6.62  | 26.96     | 69.39     | 178.58    |
| 3.5                   | 12.77 | 14.85     | 53.08     | 189.68    |
| 4.5                   | 20.92 | 16.30     | 74.53     | 340.87    |
|                       |       | 336.72    | -537.90   | 4158.57   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.073622 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 3.3672480 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.8350062$$

Third Moment = Sum((Wt%)\*(Dev\*3))/100

$$= -5.378960$$

Skewness = Third Moment/(Standard deviation\*3)

$$= -0.870533$$

Fourth Moment = Sum((Wt%)\*(Dev\*4))/100

$$= 41.585709$$

Kurtosis = Fourth Moment/(Standard Deviation\*4)

$$= 3.6677006$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 63.5-64.5

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -4.54     |
| -4.5      | 0      | 0.00  | 0.00      | -3.54     |
| -3.5      | 40.7   | 6.01  | -21.04    | -2.54     |
| -2.5      | 153.8  | 22.71 | -56.79    | -1.54     |
| -1.5      | 215.3  | 31.80 | -47.70    | -0.54     |
| -0.5      | 97.7   | 14.43 | -7.21     | 0.46      |
| 0.5       | 71.7   | 10.59 | 5.29      | 1.46      |
| 1.5       | 51.7   | 7.64  | 11.45     | 2.46      |
| 2.5       | 31.8   | 4.70  | 11.74     | 3.46      |
| 3.5       | 10     | 1.48  | 5.17      | 4.46      |
| 4.5       | 4.4    | 0.65  | 2.92      | 5.46      |
|           | 677.1  | 100   | -96.15    |           |

| Phi Class | Dev*2  | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|--------|-----------|-----------|-----------|
| Midpoint  |        |           |           |           |
| -5.5      | 20.60  | 0.00      | 0.00      | 0.00      |
| -4.5      | 12.52  | 0.00      | 0.00      | 0.00      |
| -3.5      | 6.44   | 38.73     | -98.32    | 249.59    |
| -2.5      | 2.37   | 53.76     | -82.71    | 127.25    |
| -1.5      | 0.29   | 9.22      | -4.96     | 2.67      |
| -0.5      | 0.21   | 3.07      | 1.42      | 0.65      |
| 0.5       | 2.14   | 22.62     | 33.06     | 48.32     |
| 1.5       | 6.06   | 46.26     | 113.88    | 280.32    |
| 2.5       | 11.98  | 56.27     | 194.79    | 674.29    |
| 3.5       | 19.91  | 29.40     | 131.16    | 585.17    |
| 4.5       | 29.83  | 19.38     | 105.86    | 578.17    |
|           | 278.73 | 394.17    | 2546.44   |           |

First Moment:

$$\text{Mean} = \frac{\text{Sum}(\text{Wt}\% * \text{Midpt})}{100}$$

$$= -0.961527$$

Second Moment:

$$\text{Dispersion} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^2))}{100}$$

$$= 2.7872881$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.6695173$$

$$\text{Third Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^3))}{100}$$

$$= 3.9417329$$

$$\text{Skewness} = \frac{\text{Third Moment}}{(\text{Standard deviation}^3)}$$

$$= 0.8470604$$

$$\text{Fourth Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^4))}{100}$$

$$= 25.464374$$

$$\text{Kurtosis} = \frac{\text{Fourth Moment}}{(\text{Standard Deviation}^4)}$$

$$= 3.2777006$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 64.5-65.5

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -4.58     |
| -4.5      | 0      | 0.00  | 0.00      | -3.58     |
| -3.5      | 50.8   | 7.11  | -24.88    | -2.58     |
| -2.5      | 123.4  | 17.27 | -43.18    | -1.58     |
| -1.5      | 196.3  | 27.47 | -41.21    | -0.58     |
| -0.5      | 171.2  | 23.96 | -11.98    | 0.42      |
| 0.5       | 99.2   | 13.88 | 6.94      | 1.42      |
| 1.5       | 38.8   | 5.43  | 8.15      | 2.42      |
| 2.5       | 22.6   | 3.16  | 7.91      | 3.42      |
| 3.5       | 8      | 1.12  | 3.92      | 4.42      |
| 4.5       | 4.2    | 0.59  | 2.65      | 5.42      |
|           | 714.5  | 100   | -91.69    |           |

| Phi Class | Dev*2  | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|--------|-----------|-----------|-----------|
| Midpoint  |        |           |           |           |
| -5.5      | 21.00  | 0.00      | 0.00      | 0.00      |
| -4.5      | 12.84  | 0.00      | 0.00      | 0.00      |
| -3.5      | 6.67   | 47.44     | -122.54   | 316.52    |
| -2.5      | 2.51   | 43.28     | -68.52    | 108.47    |
| -1.5      | 0.34   | 9.34      | -5.45     | 3.18      |
| -0.5      | 0.17   | 4.17      | 1.74      | 0.72      |
| 0.5       | 2.01   | 27.87     | 39.50     | 55.96     |
| 1.5       | 5.84   | 31.72     | 76.67     | 185.31    |
| 2.5       | 11.68  | 36.93     | 126.19    | 431.17    |
| 3.5       | 19.51  | 21.84     | 96.48     | 426.16    |
| 4.5       | 29.34  | 17.25     | 93.43     | 506.13    |
|           | 239.85 | 237.51    | 2033.62   |           |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.916934 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.3984535 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.5486941$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= 2.3750641$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= 0.6394084$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 20.336230$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 3.5351498$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 65.5-66.5

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -4.63     |
| -4.5      | 7.3    | 0.95  | -4.29     | -3.63     |
| -3.5      | 45.1   | 5.89  | -20.62    | -2.63     |
| -2.5      | 138    | 18.03 | -45.06    | -1.63     |
| -1.5      | 197.3  | 25.77 | -38.66    | -0.63     |
| -0.5      | 161.2  | 21.06 | -10.53    | 0.37      |
| 0.5       | 125.6  | 16.41 | 8.20      | 1.37      |
| 1.5       | 59.5   | 7.77  | 11.66     | 2.37      |
| 2.5       | 21.1   | 2.76  | 6.89      | 3.37      |
| 3.5       | 6.5    | 0.85  | 2.97      | 4.37      |
| 4.5       | 4      | 0.52  | 2.35      | 5.37      |
|           | 765.6  | 100   | -87.08    |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 21.43 | 0.00      | 0.00      | 0.00      |
| -4.5      | 13.17 | 12.56     | -45.58    | 165.41    |
| -3.5      | 6.91  | 40.72     | -107.06   | 281.49    |
| -2.5      | 2.65  | 47.84     | -77.94    | 126.99    |
| -1.5      | 0.40  | 10.20     | -6.42     | 4.04      |
| -0.5      | 0.14  | 2.90      | 1.07      | 0.40      |
| 0.5       | 1.88  | 30.83     | 42.26     | 57.93     |
| 1.5       | 5.62  | 43.68     | 103.56    | 245.53    |
| 2.5       | 11.36 | 31.31     | 105.56    | 355.81    |
| 3.5       | 19.10 | 16.22     | 70.89     | 309.86    |
| 4.5       | 28.85 | 15.07     | 80.94     | 434.73    |
|           |       | 251.34    | 167.29    | 1982.18   |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.870820 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.5133543 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.5853562$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 1.6728871 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.4198421 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 19.821814 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 3.1378771 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 66.5-68.5

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -4.50     |
| -4.5      | 15.9   | 1.22  | -5.49     | -3.50     |
| -3.5      | 138.8  | 10.64 | -37.25    | -2.50     |
| -2.5      | 252.2  | 19.34 | -48.35    | -1.50     |
| -1.5      | 291.2  | 22.33 | -33.50    | -0.50     |
| -0.5      | 236.3  | 18.12 | -9.06     | 0.50      |
| 0.5       | 212.4  | 16.29 | 8.14      | 1.50      |
| 1.5       | 94.6   | 7.25  | 10.88     | 2.50      |
| 2.5       | 38.4   | 2.94  | 7.36      | 3.50      |
| 3.5       | 14.5   | 1.11  | 3.89      | 4.50      |
| 4.5       | 9.7    | 0.74  | 3.35      | 5.50      |

---

|      |     |         |
|------|-----|---------|
| 1304 | 100 | -100.02 |
|------|-----|---------|

---

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 20.25 | 0.00      | 0.00      | 0.00      |
| -4.5      | 12.25 | 14.93     | -52.27    | 182.93    |
| -3.5      | 6.25  | 66.51     | -166.27   | 415.63    |
| -2.5      | 2.25  | 43.50     | -65.24    | 97.85     |
| -1.5      | 0.25  | 5.58      | -2.79     | 1.39      |
| -0.5      | 0.25  | 4.53      | 2.27      | 1.13      |
| 0.5       | 2.25  | 36.66     | 55.00     | 82.51     |
| 1.5       | 6.25  | 45.35     | 113.38    | 283.49    |
| 2.5       | 12.25 | 36.08     | 126.28    | 442.02    |
| 3.5       | 20.25 | 22.52     | 101.34    | 456.07    |
| 4.5       | 30.25 | 22.50     | 123.78    | 680.80    |

---

|        |        |         |
|--------|--------|---------|
| 298.17 | 235.48 | 2643.82 |
|--------|--------|---------|

---

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -1.000230 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.9817484 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.7267739$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= 2.3548378$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= 0.4573561$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 26.438209$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 2.9736512$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 68.5-69.5

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -5.65     |
| -4.5      | 0      | 0.00  | 0.00      | -4.65     |
| -3.5      | 0      | 0.00  | 0.00      | -3.65     |
| -2.5      | 9      | 1.31  | -3.28     | -2.65     |
| -1.5      | 98.3   | 14.33 | -21.49    | -1.65     |
| -0.5      | 228.6  | 33.32 | -16.66    | -0.65     |
| 0.5       | 200.9  | 29.29 | 14.64     | 0.35      |
| 1.5       | 101.5  | 14.80 | 22.19     | 1.35      |
| 2.5       | 35.4   | 5.16  | 12.90     | 2.35      |
| 3.5       | 8.1    | 1.18  | 4.13      | 3.35      |
| 4.5       | 4.2    | 0.61  | 2.76      | 4.35      |
|           | 686    | 100   | 15.19     |           |

| Phi Class | Dev*2  | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|--------|-----------|-----------|-----------|
| Midpoint  |        |           |           |           |
| -5.5      | 31.94  | 0.00      | 0.00      | 0.00      |
| -4.5      | 21.64  | 0.00      | 0.00      | 0.00      |
| -3.5      | 13.34  | 0.00      | 0.00      | 0.00      |
| -2.5      | 7.03   | 9.23      | -24.47    | 64.88     |
| -1.5      | 2.73   | 39.10     | -64.59    | 106.70    |
| -0.5      | 0.42   | 14.16     | -9.23     | 6.02      |
| 0.5       | 0.12   | 3.55      | 1.24      | 0.43      |
| 1.5       | 1.82   | 26.89     | 36.25     | 48.87     |
| 2.5       | 5.51   | 28.45     | 66.81     | 156.87    |
| 3.5       | 11.21  | 13.24     | 44.32     | 148.37    |
| 4.5       | 18.91  | 11.58     | 50.33     | 218.84    |
|           | 146.19 | 100.65    | 750.99    |           |

First Moment:

$$\text{Mean} = \frac{\text{Sum}(\text{Wt}\% * \text{Midpt})}{100} = 0.1518950$$

Second Moment:

$$\text{Dispersion} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^2))}{100} = 1.4619133$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.2090960$$

$$\text{Third Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^3))}{100} = 1.0064894$$

$$\text{Skewness} = \frac{\text{Third Moment}}{(\text{Standard deviation}^3)} = 0.5694122$$

$$\text{Fourth Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^4))}{100} = 7.5098757$$

$$\text{Kurtosis} = \frac{\text{Fourth Moment}}{(\text{Standard Deviation}^4)} = 3.5139008$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 69.5-70.5

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -4.26     |
| -4.5      | 40.4   | 5.56  | -25.01    | -3.26     |
| -3.5      | 47.8   | 6.57  | -23.01    | -2.26     |
| -2.5      | 143.1  | 19.68 | -49.21    | -1.26     |
| -1.5      | 181.4  | 24.95 | -37.43    | -0.26     |
| -0.5      | 158.6  | 21.82 | -10.91    | 0.74      |
| 0.5       | 104.1  | 14.32 | 7.16      | 1.74      |
| 1.5       | 33.9   | 4.66  | 6.99      | 2.74      |
| 2.5       | 9.5    | 1.31  | 3.27      | 3.74      |
| 3.5       | 4.3    | 0.59  | 2.07      | 4.74      |
| 4.5       | 3.9    | 0.54  | 2.41      | 5.74      |
|           | 727    | 100   | -123.66   |           |

| Phi Class | Dev*2  | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|--------|-----------|-----------|-----------|
| Midpoint  |        |           |           |           |
| -5.5      | 18.18  | 0.00      | 0.00      | 0.00      |
| -4.5      | 10.65  | 59.18     | -193.14   | 630.28    |
| -3.5      | 5.12   | 33.68     | -76.24    | 172.56    |
| -2.5      | 1.60   | 31.42     | -39.70    | 50.15     |
| -1.5      | 0.07   | 1.73      | -0.46     | 0.12      |
| -0.5      | 0.54   | 11.84     | 8.72      | 6.42      |
| 0.5       | 3.02   | 43.18     | 74.99     | 130.23    |
| 1.5       | 7.49   | 34.92     | 95.56     | 261.52    |
| 2.5       | 13.96  | 18.24     | 68.17     | 254.74    |
| 3.5       | 22.44  | 13.27     | 62.85     | 297.71    |
| 4.5       | 32.91  | 17.65     | 101.27    | 580.96    |
|           | 265.12 | 102.05    | 2384.69   |           |

First Moment:

$$\text{Mean} = \frac{\text{Sum}(\text{Wt}\% * \text{Midpt})}{100}$$

$$= -1.236588$$

Second Moment:

$$\text{Dispersion} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^2))}{100}$$

$$= 2.6512472$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.6282650$$

$$\text{Third Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^3))}{100}$$

$$= 1.0204554$$

$$\text{Skewness} = \frac{\text{Third Moment}}{(\text{Standard deviation}^3)}$$

$$= 0.2363843$$

$$\text{Fourth Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^4))}{100}$$

$$= 23.846912$$

$$\text{Kurtosis} = \frac{\text{Fourth Moment}}{(\text{Standard Deviation}^4)}$$

$$= 3.3925925$$



# Method of Moments Grain Size Analysis

RMA 33085

Sample 70.5-71.5

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -3.91     |
| -4.5      | 105.2  | 13.17 | -59.27    | -2.91     |
| -3.5      | 84.8   | 10.62 | -37.16    | -1.91     |
| -2.5      | 150.3  | 18.82 | -47.05    | -0.91     |
| -1.5      | 170.2  | 21.31 | -31.96    | 0.09      |
| -0.5      | 124.3  | 15.56 | -7.78     | 1.09      |
| 0.5       | 96     | 12.02 | 6.01      | 2.09      |
| 1.5       | 39     | 4.88  | 7.32      | 3.09      |
| 2.5       | 16     | 2.00  | 5.01      | 4.09      |
| 3.5       | 7.8    | 0.98  | 3.42      | 5.09      |
| 4.5       | 5.1    | 0.64  | 2.87      | 6.09      |
|           |        | 798.7 | 100       | -158.59   |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 15.32 | 0.00      | 0.00      | 0.00      |
| -4.5      | 8.49  | 111.85    | -325.95   | 949.85    |
| -3.5      | 3.66  | 38.90     | -74.46    | 142.52    |
| -2.5      | 0.84  | 15.72     | -14.37    | 13.14     |
| -1.5      | 0.01  | 0.16      | 0.01      | 0.00      |
| -0.5      | 1.18  | 18.35     | 19.93     | 21.64     |
| 0.5       | 4.35  | 52.30     | 109.08    | 227.54    |
| 1.5       | 9.52  | 46.50     | 143.49    | 442.79    |
| 2.5       | 16.69 | 33.44     | 136.65    | 558.32    |
| 3.5       | 25.87 | 25.26     | 128.47    | 653.40    |
| 4.5       | 37.04 | 23.65     | 143.93    | 875.96    |
|           |       | 366.13    | 266.78    | 3885.16   |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -1.585889 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 3.6613346 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.9134614$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 2.6678461 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.3808041 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 38.851605 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 2.8982118 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 71.5-73

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -5.08     |
| -4.5      | 131    | 14.21 | -63.92    | -4.08     |
| -3.5      | 65.2   | 7.07  | -24.75    | -3.08     |
| -2.5      | 102.8  | 11.15 | -27.87    | -2.08     |
| -1.5      | 104.2  | 11.30 | -16.95    | -1.08     |
| -0.5      | 102.3  | 11.09 | -5.55     | -0.08     |
| 0.5       | 67.8   | 7.35  | 3.68      | 0.92      |
| 1.5       | 139.7  | 15.15 | 22.72     | 1.92      |
| 2.5       | 122.4  | 13.27 | 33.18     | 2.92      |
| 3.5       | 49.5   | 5.37  | 18.79     | 3.92      |
| 4.5       | 37.3   | 4.04  | 18.20     | 4.92      |
|           | 922.2  | 100   | -42.46    |           |

| Phi Class | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  |       |           |           |           |
| -5.5      | 25.76 | 0.00      | 0.00      | 0.00      |
| -4.5      | 16.61 | 235.93    | -961.49   | 3918.42   |
| -3.5      | 9.46  | 66.87     | -205.64   | 632.42    |
| -2.5      | 4.31  | 48.01     | -99.64    | 206.80    |
| -1.5      | 1.16  | 13.07     | -14.05    | 15.11     |
| -0.5      | 0.01  | 0.06      | -0.00     | 0.00      |
| 0.5       | 0.85  | 6.29      | 5.81      | 5.37      |
| 1.5       | 3.70  | 56.11     | 108.00    | 207.86    |
| 2.5       | 8.55  | 113.53    | 332.03    | 971.06    |
| 3.5       | 15.40 | 82.68     | 324.47    | 1273.44   |
| 4.5       | 24.25 | 98.09     | 483.07    | 2378.92   |
|           |       | 720.63    | -27.46    | 9609.40   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= -0.424636 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 7.2063134 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 2.6844577$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= -0.274572 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= -0.014193 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 96.094049 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 1.8504195 \end{aligned}$$

Method of Moments Grain Size Analysis

RMA 33085

Sample 73.5-74.5

| Phi Class | Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------|----------|--------|-------|-----------|-----------------------|
|           | -5.5     | 0      | 0.00  | 0.00      | -6.86                 |
|           | -4.5     | 0      | 0.00  | 0.00      | -5.86                 |
|           | -3.5     | 0      | 0.00  | 0.00      | -4.86                 |
|           | -2.5     | 0      | 0.00  | 0.00      | -3.86                 |
|           | -1.5     | 1.77   | 0.81  | -1.21     | -2.86                 |
|           | -0.5     | 17.25  | 7.86  | -3.93     | -1.86                 |
|           | 0.5      | 66.99  | 30.52 | 15.26     | -0.86                 |
|           | 1.5      | 74.53  | 33.95 | 50.93     | 0.14                  |
|           | 2.5      | 43.93  | 20.01 | 50.03     | 1.14                  |
|           | 3.5      | 12.09  | 5.51  | 19.28     | 2.14                  |
|           | 4.5      | 2.96   | 1.35  | 6.07      | 3.14                  |
|           |          | 219.52 | 100   | 136.42    |                       |

| Phi Class | Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|----------|-------|-----------|-----------|-----------|
|           | -5.5     | 47.12 | 0.00      | 0.00      | 0.00      |
|           | -4.5     | 34.39 | 0.00      | 0.00      | 0.00      |
|           | -3.5     | 23.66 | 0.00      | 0.00      | 0.00      |
|           | -2.5     | 14.93 | 0.00      | 0.00      | 0.00      |
|           | -1.5     | 8.20  | 6.61      | -18.95    | 54.26     |
|           | -0.5     | 3.48  | 27.31     | -50.91    | 94.90     |
|           | 0.5      | 0.75  | 22.79     | -19.70    | 17.02     |
|           | 1.5      | 0.02  | 0.63      | 0.09      | 0.01      |
|           | 2.5      | 1.29  | 25.82     | 29.32     | 33.30     |
|           | 3.5      | 4.56  | 25.12     | 53.66     | 114.60    |
|           | 4.5      | 9.83  | 13.26     | 41.58     | 130.38    |
|           |          |       | 121.54    | 35.09     | 444.49    |

First Moment:

$$\begin{aligned}\text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 1.3642037\end{aligned}$$

Second Moment:

$$\begin{aligned}\text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.2153877\end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.1024462$$

$$\begin{aligned}\text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 0.3509103\end{aligned}$$

$$\begin{aligned}\text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.2618930\end{aligned}$$

$$\begin{aligned}\text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 4.4448702\end{aligned}$$

$$\begin{aligned}\text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 3.0090499\end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 74.5-75.5

| Phi Class<br>Midpoint | Wt (g) | Wt %   | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------------------|--------|--------|-----------|-----------------------|
| -5.5                  | 0      | 0.00   | 0.00      | -6.19                 |
| -4.5                  | 0      | 0.00   | 0.00      | -5.19                 |
| -3.5                  | 2.9    | 1.27   | -4.44     | -4.19                 |
| -2.5                  | 5.03   | 2.20   | -5.50     | -3.19                 |
| -1.5                  | 15.13  | 6.61   | -9.92     | -2.19                 |
| -0.5                  | 38.15  | 16.67  | -8.34     | -1.19                 |
| 0.5                   | 75.21  | 32.87  | 16.44     | -0.19                 |
| 1.5                   | 58.18  | 25.43  | 38.14     | 0.81                  |
| 2.5                   | 25.5   | 11.14  | 27.86     | 1.81                  |
| 3.5                   | 5.98   | 2.61   | 9.15      | 2.81                  |
| 4.5                   | 2.73   | 1.19   | 5.37      | 3.81                  |
|                       |        | 228.81 | 100       | 68.77                 |

| Phi Class<br>Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------------------|-------|-----------|-----------|-----------|
| -5.5                  | 38.29 | 0.00      | 0.00      | 0.00      |
| -4.5                  | 26.91 | 0.00      | 0.00      | 0.00      |
| -3.5                  | 17.54 | 22.23     | -93.08    | 389.77    |
| -2.5                  | 10.16 | 22.34     | -71.21    | 226.98    |
| -1.5                  | 4.79  | 31.65     | -69.23    | 151.46    |
| -0.5                  | 1.41  | 23.52     | -27.93    | 33.17     |
| 0.5                   | 0.04  | 1.16      | -0.22     | 0.04      |
| 1.5                   | 0.66  | 16.78     | 13.63     | 11.07     |
| 2.5                   | 3.28  | 36.61     | 66.34     | 120.23    |
| 3.5                   | 7.91  | 20.67     | 58.13     | 163.49    |
| 4.5                   | 14.53 | 17.34     | 66.11     | 252.03    |
|                       |       | 192.28    | -57.45    | 1348.25   |

## First Moment:

$$\begin{aligned}\text{Mean} &= \text{Sum}(\text{Wt\%} * \text{Midpt}) / 100 \\ &= 0.6876666\end{aligned}$$

## Second Moment:

$$\begin{aligned}\text{Dispersion} &= \text{Sum}((\text{Wt\%}) * (\text{Dev}^2)) / 100 \\ &= 1.9228250\end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.3866596$$

$$\begin{aligned}\text{Third Moment} &= \text{Sum}((\text{Wt\%}) * (\text{Dev}^3)) / 100 \\ &= -0.574496\end{aligned}$$

$$\begin{aligned}\text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= -0.215465\end{aligned}$$

$$\begin{aligned}\text{Fourth Moment} &= \text{Sum}((\text{Wt\%}) * (\text{Dev}^4)) / 100 \\ &= 13.482462\end{aligned}$$

$$\begin{aligned}\text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 3.6466132\end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 75.5-76.5

| Phi Class<br>Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------------------|--------|-------|-----------|-----------------------|
| -5.5                  | 0      | 0.00  | 0.00      | -6.47                 |
| -4.5                  | 0      | 0.00  | 0.00      | -5.47                 |
| -3.5                  | 0      | 0.00  | 0.00      | -4.47                 |
| -2.5                  | 1.6    | 0.84  | -2.11     | -3.47                 |
| -1.5                  | 4.6    | 2.43  | -3.64     | -2.47                 |
| -0.5                  | 16.6   | 8.76  | -4.38     | -1.47                 |
| 0.5                   | 74.6   | 39.39 | 19.69     | -0.47                 |
| 1.5                   | 72.4   | 38.23 | 57.34     | 0.53                  |
| 2.5                   | 14.4   | 7.60  | 19.01     | 1.53                  |
| 3.5                   | 3.2    | 1.69  | 5.91      | 2.53                  |
| 4.5                   | 2      | 1.06  | 4.75      | 3.53                  |
|                       |        | 189.4 | 100       | 96.57                 |

| Phi Class<br>Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------------------|-------|-----------|-----------|-----------|
| -5.5                  | 41.81 | 0.00      | 0.00      | 0.00      |
| -4.5                  | 29.87 | 0.00      | 0.00      | 0.00      |
| -3.5                  | 19.94 | 0.00      | 0.00      | 0.00      |
| -2.5                  | 12.01 | 10.15     | -35.16    | 121.87    |
| -1.5                  | 6.08  | 14.77     | -36.41    | 89.77     |
| -0.5                  | 2.15  | 18.83     | -27.60    | 40.45     |
| 0.5                   | 0.22  | 8.54      | -3.98     | 1.85      |
| 1.5                   | 0.29  | 10.91     | 5.83      | 3.12      |
| 2.5                   | 2.35  | 17.90     | 27.46     | 42.14     |
| 3.5                   | 6.42  | 10.85     | 27.50     | 69.70     |
| 4.5                   | 12.49 | 13.19     | 46.62     | 164.77    |
|                       |       | 105.14    | 4.27      | 533.65    |

## First Moment:

$$\begin{aligned}\text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.9656810\end{aligned}$$

## Second Moment:

$$\begin{aligned}\text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.0513565\end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.0253567$$

$$\begin{aligned}\text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 0.0426827\end{aligned}$$

$$\begin{aligned}\text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.0395937\end{aligned}$$

$$\begin{aligned}\text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 5.3365354\end{aligned}$$

$$\begin{aligned}\text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 4.8279122\end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 76.5-77.5

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -6.41     |
| -4.5      | 0      | 0.00  | 0.00      | -5.41     |
| -3.5      | 0.89   | 0.42  | -1.47     | -4.41     |
| -2.5      | 3.14   | 1.48  | -3.69     | -3.41     |
| -1.5      | 5.66   | 2.66  | -3.99     | -2.41     |
| -0.5      | 27.01  | 12.70 | -6.35     | -1.41     |
| 0.5       | 83.28  | 39.17 | 19.59     | -0.41     |
| 1.5       | 62.18  | 29.25 | 43.87     | 0.59      |
| 2.5       | 19.95  | 9.38  | 23.46     | 1.59      |
| 3.5       | 5.76   | 2.71  | 9.48      | 2.59      |
| 4.5       | 4.73   | 2.22  | 10.01     | 3.59      |
|           | 212.6  | 100   | 90.91     |           |

| Phi Class | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  |       |           |           |           |
| -5.5      | 41.08 | 0.00      | 0.00      | 0.00      |
| -4.5      | 29.26 | 0.00      | 0.00      | 0.00      |
| -3.5      | 19.44 | 8.14      | -35.88    | 158.20    |
| -2.5      | 11.62 | 17.16     | -58.52    | 199.49    |
| -1.5      | 5.80  | 15.45     | -37.22    | 89.67     |
| -0.5      | 1.99  | 25.23     | -35.54    | 50.08     |
| 0.5       | 0.17  | 6.56      | -2.68     | 1.10      |
| 1.5       | 0.35  | 10.21     | 6.04      | 3.57      |
| 2.5       | 2.53  | 23.75     | 37.79     | 60.11     |
| 3.5       | 6.71  | 18.19     | 47.12     | 122.09    |
| 4.5       | 12.89 | 28.69     | 103.02    | 369.93    |
|           |       | 153.37    | 24.12     | 1054.25   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.9090780 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.5337369 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.2384413$$

$$\begin{aligned} \text{Third Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100 \\ &= 0.2411510 \end{aligned}$$

$$\begin{aligned} \text{Skewness} &= \text{Third Moment} / (\text{Standard deviation}^3) \\ &= 0.1269587 \end{aligned}$$

$$\begin{aligned} \text{Fourth Moment} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100 \\ &= 10.542452 \end{aligned}$$

$$\begin{aligned} \text{Kurtosis} &= \text{Fourth Moment} / (\text{Standard Deviation}^4) \\ &= 4.4816699 \end{aligned}$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 78.5-79.5

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -6.28     |
| -4.5      | 0      | 0.00  | 0.00      | -5.28     |
| -3.5      | 0      | 0.00  | 0.00      | -4.28     |
| -2.5      | 0.1    | 0.05  | -0.13     | -3.28     |
| -1.5      | 5.9    | 3.15  | -4.73     | -2.28     |
| -0.5      | 32.8   | 17.52 | -8.76     | -1.28     |
| 0.5       | 74.4   | 39.74 | 19.87     | -0.28     |
| 1.5       | 55.3   | 29.54 | 44.31     | 0.72      |
| 2.5       | 14.9   | 7.96  | 19.90     | 1.72      |
| 3.5       | 2.6    | 1.39  | 4.86      | 2.72      |
| 4.5       | 1.2    | 0.64  | 2.88      | 3.72      |
|           |        | 187.2 | 100       | 78.21     |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 39.46 | 0.00      | 0.00      | 0.00      |
| -4.5      | 27.90 | 0.00      | 0.00      | 0.00      |
| -3.5      | 18.34 | 0.00      | 0.00      | 0.00      |
| -2.5      | 10.77 | 0.58      | -1.89     | 6.20      |
| -1.5      | 5.21  | 16.41     | -37.46    | 85.48     |
| -0.5      | 1.64  | 28.80     | -36.92    | 47.34     |
| 0.5       | 0.08  | 3.16      | -0.89     | 0.25      |
| 1.5       | 0.52  | 15.23     | 10.93     | 7.85      |
| 2.5       | 2.95  | 23.49     | 40.36     | 69.33     |
| 3.5       | 7.39  | 10.26     | 27.89     | 75.79     |
| 4.5       | 13.82 | 8.86      | 32.94     | 122.49    |
|           |       | 106.79    | 34.96     | 414.72    |

## First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.7820512 \end{aligned}$$

## Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.0678829 \end{aligned}$$

## Square Root of Second Moment:

$$\text{Standard Deviation} = 1.0333842$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= 0.3496097$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= 0.3168093$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 4.1472128$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 3.6367127$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 79.5-80.5

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -6.37     |
| -4.5      | 0      | 0.00  | 0.00      | -5.37     |
| -3.5      | 0      | 0.00  | 0.00      | -4.37     |
| -2.5      | 1.14   | 0.26  | -0.66     | -3.37     |
| -1.5      | 10.1   | 2.32  | -3.48     | -2.37     |
| -0.5      | 73.42  | 16.88 | -8.44     | -1.37     |
| 0.5       | 178.4  | 41.01 | 20.50     | -0.37     |
| 1.5       | 117.1  | 26.92 | 40.37     | 0.63      |
| 2.5       | 33.4   | 7.68  | 19.19     | 1.63      |
| 3.5       | 11     | 2.53  | 8.85      | 2.63      |
| 4.5       | 10.5   | 2.41  | 10.86     | 3.63      |
|           | 435.06 | 100   | 87.20     |           |

| Phi Class |       |           |           |           |
|-----------|-------|-----------|-----------|-----------|
| Midpoint  | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 40.60 | 0.00      | 0.00      | 0.00      |
| -4.5      | 28.86 | 0.00      | 0.00      | 0.00      |
| -3.5      | 19.11 | 0.00      | 0.00      | 0.00      |
| -2.5      | 11.37 | 2.98      | -10.05    | 33.88     |
| -1.5      | 5.63  | 13.06     | -30.98    | 73.50     |
| -0.5      | 1.88  | 31.77     | -43.59    | 59.80     |
| 0.5       | 0.14  | 5.68      | -2.11     | 0.79      |
| 1.5       | 0.39  | 10.61     | 6.67      | 4.19      |
| 2.5       | 2.65  | 20.35     | 33.12     | 53.92     |
| 3.5       | 6.91  | 17.46     | 45.89     | 120.59    |
| 4.5       | 13.16 | 31.77     | 115.25    | 418.11    |
|           |       | 133.67    | 114.19    | 764.77    |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 0.8720406 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 1.3367386 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.1561741$$

Third Moment = Sum((Wt%)\*(Dev\*3))/100

$$= 1.1419177$$

Skewness = Third Moment/(Standard deviation\*3)

$$= 0.7388649$$

Fourth Moment = Sum((Wt%)\*(Dev\*4))/100

$$= 7.6477344$$

Kurtosis = Fourth Moment/(Standard Deviation\*4)

$$= 4.2799609$$



# Method of Moments Grain Size Analysis

RMA 33085

Sample 80.5-81.5

| Phi Class |        |       |           | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  | Wt (g) | Wt %  | Midpt*Wt% | Mpt-Mean  |
| -5.5      | 44.4   | 16.91 | -92.98    | -4.78     |
| -4.5      | 0      | 0.00  | 0.00      | -3.78     |
| -3.5      | 4.71   | 1.79  | -6.28     | -2.78     |
| -2.5      | 8.7    | 3.31  | -8.28     | -1.78     |
| -1.5      | 23.77  | 9.05  | -13.58    | -0.78     |
| -0.5      | 50.16  | 19.10 | -9.55     | 0.22      |
| 0.5       | 74.1   | 28.21 | 14.11     | 1.22      |
| 1.5       | 37.09  | 14.12 | 21.18     | 2.22      |
| 2.5       | 11.46  | 4.36  | 10.91     | 3.22      |
| 3.5       | 4.44   | 1.69  | 5.92      | 4.22      |
| 4.5       | 3.8    | 1.45  | 6.51      | 5.22      |
|           | 262.63 | 100   | -72.04    |           |

| Phi Class |        |           |           |           |
|-----------|--------|-----------|-----------|-----------|
| Midpoint  | Dev*2  | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
| -5.5      | 22.84  | 386.21    | -1845.94  | 8822.87   |
| -4.5      | 14.29  | 0.00      | 0.00      | 0.00      |
| -3.5      | 7.73   | 13.86     | -38.52    | 107.06    |
| -2.5      | 3.17   | 10.49     | -18.67    | 33.23     |
| -1.5      | 0.61   | 5.50      | -4.29     | 3.34      |
| -0.5      | 0.05   | 0.93      | 0.20      | 0.05      |
| 0.5       | 1.49   | 42.02     | 51.28     | 62.58     |
| 1.5       | 4.93   | 69.63     | 154.60    | 343.26    |
| 2.5       | 10.37  | 45.25     | 145.74    | 469.32    |
| 3.5       | 17.81  | 30.11     | 127.09    | 536.35    |
| 4.5       | 27.25  | 39.43     | 205.85    | 1074.61   |
|           | 643.43 | -1222.66  | 11452.67  |           |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% \cdot \text{Midpt}) / 100 \\ &= -0.720386 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) \cdot (\text{Dev}^2)) / 100 \\ &= 6.4343146 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 2.5365950$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) \cdot (\text{Dev}^3)) / 100$$

$$= -12.22660$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= -0.749122$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) \cdot (\text{Dev}^4)) / 100$$

$$= 114.52667$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 2.7663178$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 81.5-82.5

| Phi Class | Wt (g) | Wt %  | Midpt*Wt% | Deviation |
|-----------|--------|-------|-----------|-----------|
| Midpoint  |        |       |           | Mpt-Mean  |
| -5.5      | 0      | 0.00  | 0.00      | -5.75     |
| -4.5      | 0      | 0.00  | 0.00      | -4.75     |
| -3.5      | 7.65   | 3.26  | -11.41    | -3.75     |
| -2.5      | 12.33  | 5.25  | -13.14    | -2.75     |
| -1.5      | 18.22  | 7.76  | -11.65    | -1.75     |
| -0.5      | 47.26  | 20.14 | -10.07    | -0.75     |
| 0.5       | 88.2   | 37.58 | 18.79     | 0.25      |
| 1.5       | 41.02  | 17.48 | 26.22     | 1.25      |
| 2.5       | 12.1   | 5.16  | 12.89     | 2.25      |
| 3.5       | 4.63   | 1.97  | 6.91      | 3.25      |
| 4.5       | 3.26   | 1.39  | 6.25      | 4.25      |
|           | 234.67 | 100   | 24.80     |           |

| Phi Class | Dev*2  | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------|--------|-----------|-----------|-----------|
| Midpoint  |        |           |           |           |
| -5.5      | 33.04  | 0.00      | 0.00      | 0.00      |
| -4.5      | 22.54  | 0.00      | 0.00      | 0.00      |
| -3.5      | 14.05  | 45.79     | -171.63   | 643.27    |
| -2.5      | 7.55   | 39.68     | -109.03   | 299.62    |
| -1.5      | 3.06   | 23.72     | -41.47    | 72.48     |
| -0.5      | 0.56   | 11.27     | -8.43     | 6.30      |
| 0.5       | 0.06   | 2.39      | 0.60      | 0.15      |
| 1.5       | 1.57   | 27.40     | 34.31     | 42.95     |
| 2.5       | 5.07   | 26.15     | 58.89     | 132.62    |
| 3.5       | 10.58  | 20.87     | 67.85     | 220.66    |
| 4.5       | 18.08  | 25.12     | 106.79    | 454.09    |
|           | 222.38 | -62.11    | 1872.15   |           |

First Moment:

$$\text{Mean} = \frac{\text{Sum}(\text{Wt}\% * \text{Midpt})}{100}$$

$$= 0.2479865$$

Second Moment:

$$\text{Dispersion} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^2))}{100}$$

$$= 2.2237862$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.4912364$$

$$\text{Third Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^3))}{100}$$

$$= -0.621126$$

$$\text{Skewness} = \frac{\text{Third Moment}}{(\text{Standard deviation}^3)}$$

$$= -0.187301$$

$$\text{Fourth Moment} = \frac{\text{Sum}((\text{Wt}\%) * (\text{Dev}^4))}{100}$$

$$= 18.721518$$

$$\text{Kurtosis} = \frac{\text{Fourth Moment}}{(\text{Standard Deviation}^4)}$$

$$= 3.7857766$$

# Method of Moments Grain Size Analysis

RMA 33085

Sample 84.75-85.00

| Phi Class<br>Midpoint | Wt (g) | Wt %  | Midpt*Wt% | Deviation<br>Mpt-Mean |
|-----------------------|--------|-------|-----------|-----------------------|
| -5.5                  | 0      | 0.00  | 0.00      | -6.68                 |
| -4.5                  | 0      | 0.00  | 0.00      | -5.68                 |
| -3.5                  | 0      | 0.00  | 0.00      | -4.68                 |
| -2.5                  | 1.96   | 1.41  | -3.52     | -3.68                 |
| -1.5                  | 8.16   | 5.87  | -8.80     | -2.68                 |
| -0.5                  | 20.45  | 14.70 | -7.35     | -1.68                 |
| 0.5                   | 26.5   | 19.05 | 9.53      | -0.68                 |
| 1.5                   | 41.23  | 29.64 | 44.46     | 0.32                  |
| 2.5                   | 30.6   | 22.00 | 55.00     | 1.32                  |
| 3.5                   | 6.1    | 4.39  | 15.35     | 2.32                  |
| 4.5                   | 4.1    | 2.95  | 13.26     | 3.32                  |
|                       |        | 139.1 | 100       | 117.92                |

| Phi Class<br>Midpoint | Dev*2 | Wt%*Dev*2 | Wt%*Dev*3 | Wt%*Dev*4 |
|-----------------------|-------|-----------|-----------|-----------|
| -5.5                  | 44.61 | 0.00      | 0.00      | 0.00      |
| -4.5                  | 32.25 | 0.00      | 0.00      | 0.00      |
| -3.5                  | 21.90 | 0.00      | 0.00      | 0.00      |
| -2.5                  | 13.54 | 19.07     | -70.18    | 258.20    |
| -1.5                  | 7.18  | 42.11     | -112.82   | 302.27    |
| -0.5                  | 2.82  | 41.46     | -69.61    | 116.90    |
| 0.5                   | 0.46  | 8.79      | -5.97     | 4.05      |
| 1.5                   | 0.10  | 3.05      | 0.98      | 0.31      |
| 2.5                   | 1.74  | 38.38     | 50.69     | 66.94     |
| 3.5                   | 5.39  | 23.62     | 54.82     | 127.21    |
| 4.5                   | 11.03 | 32.50     | 107.94    | 358.44    |
|                       |       | 208.98    | -44.16    | 1234.33   |

First Moment:

$$\begin{aligned} \text{Mean} &= \text{Sum}(\text{Wt}\% * \text{Midpt}) / 100 \\ &= 1.1792235 \end{aligned}$$

Second Moment:

$$\begin{aligned} \text{Dispersion} &= \text{Sum}((\text{Wt}\%) * (\text{Dev}^2)) / 100 \\ &= 2.0897696 \end{aligned}$$

Square Root of Second Moment:

$$\text{Standard Deviation} = 1.4456035$$

$$\text{Third Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^3)) / 100$$

$$= -0.441640$$

$$\text{Skewness} = \text{Third Moment} / (\text{Standard deviation}^3)$$

$$= -0.146191$$

$$\text{Fourth Moment} = \text{Sum}((\text{Wt}\%) * (\text{Dev}^4)) / 100$$

$$= 12.343332$$

$$\text{Kurtosis} = \text{Fourth Moment} / (\text{Standard Deviation}^4)$$

$$= 2.8264127$$

# APPENDIX B. LABORATORY HYDRAULIC CONDUCTIVITY ESTIMATES

| Core # | Depth interval (ft) <sup>1</sup> | Hydraulic Conductivity Estimates (x10 <sup>-2</sup> cm/sec) |               |                 |             |
|--------|----------------------------------|---|---------------|-----------------|-------------|
|        |                                  | HAZEN   | MASCH & DENNY | SUMMERS & WEBER | PERMEAMETER |
| 1      | 59.50-61.00                      | 8.41  | 0.99          | 3.5             | 3.45        |
| 1      | 61.00-62.00                      | 19.36   | 1.89          | 8.8             |             |
| 1      | 62.00-63.50                      | 10.89   | 0.99          | 8.8             | 0.90        |
| 1      | 69.25-70.25                      | 7.29  | 0.80          | 5.3             | 3.75        |
| 1      | 70.25-71.25                      | 14.44   | 2.13          | 5.3             |             |
| 1      | 71.25-72.00                      | 2.56  | 1.89          | 3.2             | 0.77        |
| 1      | 74.00-75.00                      | 3.61  | 0.85          | 3.5             | 2.27        |
| 1      | 75.00-76.00                      | 9.00  | 1.70          | 3.2             |             |
| 1      | 76.00-77.00                      | 7.29  | 1.89          | 1.8             | 2.10        |
| 1      | 77.00-78.00                      | 6.76  | 3.22          | 1.4             |             |
| 1      | 78.00-79.00                      | 6.76  | 3.50          | 0.7             | 2.61        |
| 1      | 79.00-80.00                      | 1.96  | 2.41          | 0.7             |             |
| 1      | 80.00-81.00                      | 7.84  | 1.89          | 1.8             | 2.48        |
| 1      | 81.00-81.75                      | 10.89   | 1.23          | 7.9             | 1.55        |
| 1      | 81.75-82.75                      | 16.00   | 1.70          | 1.4             | 1.19        |
| 1      | 82.75-83.75                      | 7.84  | 0.85          | 5.3             |             |
| 1      | 84.00-85.25                      | 3.61  | 2.32          | 1.4             | 2.18        |
| 1      | 85.25-86.25                      | 5.29  | 0.85          | 3.5             | 1.58        |
| 1      | 86.25-87.25                      | 0.49  | 0.40          | 1.4             |             |
| 1      | 87.25-88.50                      | 0.64  | 0.38          | 3.5             | 0.01        |
| 2      | 56.50-57.50                      | 3.61  | 0.95          | 3.2             |             |
| 2      | 57.50-58.50                      | 9.00  | 1.07          | 4.4             |             |
| 2      | 58.50-59.50                      | 14.44   | 0.95          | 5.3             |             |
| 2      | 59.50-60.50                      | 20.25   | 0.71          | 10.6            |             |
| 2      | 60.50-61.50                      | 10.89   | 0.71          | 8.8             |             |
| 2      | 64.00-65.00                      | 6.25  | 1.42          | 3.2             |             |
| 2      | 65.00-66.00                      | 25.00   | 0.76          | 10.6            |             |
| 2      | 66.00-67.00                      | 43.56   | 1.42          | 17.6            |             |
| 2      | 67.00-68.00                      | 29.16   | 2.60          | 14.1            |             |
| 3      | 59.80-61.05                      | 10.89   | 0.99          | 3.5             |             |
| 3      | 61.05-62.30                      | 9.00  | 0.57          | 3.5             |             |
| 3      | 64.80-65.80                      | 12.96   | 0.90          | 14.1            |             |
| 3      | 65.80-66.80                      | 24.01   | 1.18          | 10.6            |             |
| 3      | 66.80-67.80                      | 19.36   | 1.18          | 10.6            |             |
| 3      | 67.80-69.80                      | 18.49   | 0.80          | 12.3            |             |
| 3      | 69.80-70.80                      | 9.00  | 2.56          | 2.8             |             |
| 3      | 70.80-71.80                      | 36.00   | 1.18          | 12.3            |             |
| 3      | 71.80-72.80                      | 31.36   | 0.43          | 16.9            |             |
| 3      | 72.80-74.30                      | 1.69  | 0.14          | 7.1             |             |
| 3      | 74.80-75.80                      | 2.10  | 2.36          | 0.9             |             |
| 3      | 75.80-76.80                      | 3.80  | 0.94          | 1.8             |             |
| 3      | 76.80-77.80                      | 6.00  | 3.77          | 0.9             |             |
| 3      | 77.80-78.80                      | 3.60  | 3.30          | 0.9             |             |
| 3      | 79.80-80.80                      | 6.25  | 4.72          | 0.9             |             |
| 3      | 80.80-81.80                      | 4.40  | 3.30          | 0.9             |             |
| 3      | 81.80-82.80                      | 8.70  | 0.38          | 7.1             |             |
| 3      | 82.80-83.80                      | 7.29  | 1.18          | 2.7             |             |
| 3      | 86.05-86.30                      | 2.10  | 0.99          | 1.8             |             |

(1) All depths relative to a ground elevation of 5176.4 ft

# Hazen's Method for Estimating Hydraulic Conductivity

Core #1 = Injection well 33080

| Interval |        | D10   | K          | K/Kmax |
|----------|--------|-------|------------|--------|
| Top      | Bottom | (cm)  | (E-2 cm/s) |        |
| 59.50    | 61.00  | 0.029 | 8.41       | 0.19   |
| 61.00    | 62.00  | 0.044 | 19.36      | 0.44   |
| 62.00    | 63.50  | 0.033 | 10.89      | 0.25   |
| 69.25    | 70.25  | 0.027 | 7.29       | 0.17   |
| 70.25    | 71.25  | 0.038 | 14.44      | 0.33   |
| 71.25    | 72.00  | 0.016 | 2.56       | 0.06   |
| 74.00    | 75.00  | 0.019 | 3.61       | 0.08   |
| 75.00    | 76.00  | 0.030 | 9.00       | 0.21   |
| 76.00    | 77.00  | 0.027 | 7.29       | 0.17   |
| 77.00    | 78.00  | 0.026 | 6.76       | 0.16   |
| 78.00    | 79.00  | 0.026 | 6.76       | 0.16   |
| 79.00    | 80.00  | 0.014 | 1.96       | 0.04   |
| 80.00    | 81.00  | 0.028 | 7.84       | 0.18   |
| 81.00    | 81.75  | 0.033 | 10.89      | 0.25   |
| 81.75    | 82.75  | 0.040 | 16.00      | 0.37   |
| 82.75    | 83.75  | 0.028 | 7.84       | 0.18   |
| 84.00    | 85.25  | 0.019 | 3.61       | 0.08   |
| 85.25    | 86.25  | 0.023 | 5.29       | 0.12   |
| 86.25    | 87.25  | 0.007 | 0.49       | 0.01   |
| 87.25    | 88.50  | 0.008 | 0.64       | 0.01   |

Core #2 = 2 feet adjacent to injection well 33080

| Interval |        | D10   | K          | K/Kmax |
|----------|--------|-------|------------|--------|
| Top      | Bottom | (cm)  | (E-2 cm/s) |        |
| 56.50    | 57.50  | 0.019 | 3.61       | 0.08   |
| 57.50    | 58.50  | 0.030 | 9.00       | 0.21   |
| 58.50    | 59.50  | 0.038 | 14.44      | 0.33   |
| 59.50    | 60.50  | 0.045 | 20.25      | 0.46   |
| 60.50    | 61.50  | 0.033 | 10.89      | 0.25   |
| 64.00    | 65.00  | 0.025 | 6.25       | 0.14   |
| 65.00    | 66.00  | 0.050 | 25.00      | 0.57   |
| 66.00    | 67.00  | 0.066 | 43.56      | 1.00   |
| 67.00    | 68.00  | 0.054 | 29.16      | 0.67   |

# Hazen's Method for Estimating Hydraulic Conductivity

Core #3 = Extraction well 33085

| Interval<br>Top | Bottom | D10<br>(cm) | K<br>(E-2 cm/s) | K/Kmax |
|-----------------|--------|-------------|-----------------|--------|
| 58.50           | 59.75  | 0.033       | 10.89           | 0.25   |
| 59.75           | 61.00  | 0.030       | 9.00            | 0.21   |
| 63.50           | 64.50  | 0.036       | 12.96           | 0.30   |
| 64.50           | 65.50  | 0.049       | 24.01           | 0.55   |
| 65.50           | 66.50  | 0.044       | 19.36           | 0.44   |
| 66.50           | 68.50  | 0.043       | 18.49           | 0.42   |
| 68.50           | 69.50  | 0.030       | 9.00            | 0.21   |
| 69.50           | 70.50  | 0.060       | 36.00           | 0.83   |
| 70.50           | 71.50  | 0.056       | 31.36           | 0.72   |
| 71.50           | 73.00  | 0.013       | 1.69            | 0.04   |
| 73.50           | 74.50  | 0.015       | 2.10            | 0.05   |
| 74.50           | 75.50  | 0.020       | 3.80            | 0.09   |
| 75.50           | 76.50  | 0.025       | 6.00            | 0.14   |
| 76.50           | 77.50  | 0.019       | 3.60            | 0.08   |
| 78.50           | 79.50  | 0.025       | 6.25            | 0.14   |
| 79.50           | 80.50  | 0.021       | 4.40            | 0.10   |
| 80.50           | 81.50  | 0.030       | 8.70            | 0.20   |
| 81.50           | 82.50  | 0.027       | 7.29            | 0.17   |
| 84.75           | 85.00  | 0.014       | 2.10            | 0.04   |

# Masch and Denny Technique for Estimating Hydraulic Conductivity

## Grain Size Parameters:

Core #1 = Injection well 33080

Interval

| Top   | Bottom | D50  | DISP | D5   | D16  | D84 | D95 |
|-------|--------|------|------|------|------|-----|-----|
| 59.50 | 61.00  | -0.4 | 1.50 | -2.9 | -1.9 | 1.0 | 2.2 |
| 61.00 | 62.00  | -1.2 | 1.42 | -3.2 | -2.7 | 0.2 | 1.4 |
| 62.00 | 63.50  | -1.2 | 1.60 | -3.3 | -2.9 | 0.3 | 2.0 |
| 69.25 | 70.25  | -0.4 | 1.64 | -3.2 | -2.5 | 0.9 | 2.0 |
| 70.25 | 71.25  | -0.8 | 1.34 | -3.0 | -2.2 | 0.5 | 1.4 |
| 71.25 | 72.00  | -0.7 | 1.38 | -2.5 | -1.5 | 0.7 | 3.0 |
| 74.00 | 75.00  | -0.2 | 1.61 | -2.8 | -1.9 | 1.4 | 2.4 |
| 75.00 | 76.00  | -0.1 | 1.31 | -3.0 | -1.5 | 1.0 | 1.5 |
| 76.00 | 77.00  | 0    | 1.24 | -2.4 | -1.2 | 1.1 | 2.0 |
| 77.00 | 78.00  | 0.2  | 1.07 | -1.5 | -0.7 | 1.2 | 2.4 |
| 78.00 | 79.00  | 0.1  | 1.08 | -1.4 | -0.8 | 1.2 | 2.4 |
| 79.00 | 80.00  | 0.6  | 1.07 | -0.5 | -0.2 | 2.0 | 2.9 |
| 80.00 | 81.00  | 0    | 1.23 | -2.4 | -1.3 | 1.0 | 2.0 |
| 81.00 | 81.75  | -0.9 | 1.53 | -3.2 | -2.6 | 0.5 | 1.8 |
| 81.75 | 82.75  | 0.3  | 1.25 | -2.1 | -0.8 | 1.4 | 2.5 |
| 82.75 | 83.75  | -0.7 | 1.67 | -3.2 | -2.5 | 0.8 | 2.4 |
| 84.00 | 85.25  | 0.4  | 1.13 | -1.6 | -0.7 | 1.4 | 2.4 |
| 85.25 | 86.25  | -0.1 | 1.63 | -3.1 | -2.1 | 1.2 | 2.2 |
| 86.25 | 87.25  | 0.5  | 2.08 | -2.5 | -1.8 | 2.6 | 4.0 |
| 87.25 | 88.50  | -0.5 | 2.17 | -2.9 | -2.2 | 2.4 | 3.8 |

## Hydraulic Conductivity Estimates:

Core #1 = Injection well 33080

Interval  
Top Bottom K K K/Kmax  
gal/d\*ft2 10-2cm/s

| Top   | Bottom | K   | K    | K/Kmax |
|-------|--------|-----|------|--------|
| 59.50 | 61.00  | 210 | 0.99 | 0.21   |
| 61.00 | 62.00  | 400 | 1.89 | 0.40   |
| 62.00 | 63.50  | 210 | 0.99 | 0.21   |
| 69.25 | 70.25  | 170 | 0.80 | 0.17   |
| 70.25 | 71.25  | 450 | 2.13 | 0.45   |
| 71.25 | 72.00  | 400 | 1.89 | 0.40   |
| 74.00 | 75.00  | 180 | 0.85 | 0.18   |
| 75.00 | 76.00  | 360 | 1.70 | 0.36   |
| 76.00 | 77.00  | 400 | 1.89 | 0.40   |
| 77.00 | 78.00  | 680 | 3.22 | 0.68   |
| 78.00 | 79.00  | 740 | 3.50 | 0.74   |
| 79.00 | 80.00  | 510 | 2.41 | 0.51   |
| 80.00 | 81.00  | 400 | 1.89 | 0.40   |
| 81.00 | 81.75  | 260 | 1.23 | 0.26   |
| 81.75 | 82.75  | 360 | 1.70 | 0.36   |
| 82.75 | 83.75  | 180 | 0.85 | 0.18   |
| 84.00 | 85.25  | 490 | 2.32 | 0.49   |
| 85.25 | 86.25  | 180 | 0.85 | 0.18   |
| 86.25 | 87.25  | 85  | 0.40 | 0.09   |
| 87.25 | 88.50  | 80  | 0.38 | 0.08   |

# Masch and Denny Technique for Estimating Hydraulic Conductivity

## Grain Size Parameters:

Core #2 = 2 feet from injection well 33080

| Interval | Top   | Bottom | D50  | DISP | D5   | D16  | D84  | D95 |
|----------|-------|--------|------|------|------|------|------|-----|
|          | 56.50 | 57.50  | 0.0  | 1.57 | -3.0 | -1.5 | 1.4  | 2.6 |
|          | 57.50 | 58.50  | -0.4 | 1.54 | -3.4 | -2.2 | 0.8  | 1.8 |
|          | 58.50 | 59.50  | -0.8 | 1.59 | -4.0 | -2.6 | 0.5  | 1.4 |
|          | 59.50 | 60.50  | -1.5 | 1.80 | -4.8 | -3.3 | 0.2  | 1.3 |
|          | 60.50 | 61.50  | -1.0 | 1.73 | -4.1 | -2.9 | 0.5  | 1.7 |
|          | 64.00 | 65.00  | -0.3 | 1.40 | -2.4 | -1.6 | 1.1  | 2.4 |
|          | 65.00 | 66.00  | -1.5 | 1.75 | -4.5 | -3.3 | 0.2  | 1.3 |
|          | 66.00 | 67.00  | -2.4 | 1.60 | -4.4 | -3.8 | -0.6 | 0.9 |
|          | 67.00 | 68.00  | -1.8 | 1.41 | -3.3 | -3.0 | -0.1 | 1.2 |

## Hydraulic Conductivity Estimates:

Core #2 = 2 feet from injection well 33080

| Interval | Top   | Bottom | K<br>gal/d*ft <sup>2</sup> | K<br>10-2cm/s | K/Kmax |
|----------|-------|--------|----------------------------|---------------|--------|
|          | 56.50 | 57.50  | 200                        | 0.95          | 0.20   |
|          | 57.50 | 58.50  | 225                        | 1.07          | 0.23   |
|          | 58.50 | 59.50  | 200                        | 0.95          | 0.20   |
|          | 59.50 | 60.50  | 150                        | 0.71          | 0.15   |
|          | 60.50 | 61.50  | 150                        | 0.71          | 0.15   |
|          | 64.00 | 65.00  | 300                        | 1.42          | 0.30   |
|          | 65.00 | 66.00  | 160                        | 0.76          | 0.16   |
|          | 66.00 | 67.00  | 300                        | 1.42          | 0.30   |
|          | 67.00 | 68.00  | 550                        | 2.60          | 0.55   |



# Masch and Denny Technique for Estimating Hydraulic Conductivity

## Grain Size Parameters:

Core #3 = Extraction well 33085

Interval

| Top   | Bottom | D50  | DISP | D5   | D16  | D84  | D95 |
|-------|--------|------|------|------|------|------|-----|
| 58.50 | 59.75  | -0.3 | 1.51 | -3.7 | -2.1 | 0.8  | 1.5 |
| 59.75 | 61.00  | -0.2 | 1.83 | -5.0 | -2.2 | 1.0  | 1.8 |
| 63.50 | 64.50  | -1.8 | 1.68 | -3.6 | -3.0 | 0.4  | 1.9 |
| 64.50 | 65.50  | -1.6 | 1.58 | -3.8 | -3.0 | 0.1  | 1.5 |
| 65.50 | 66.50  | -1.5 | 1.59 | -3.8 | -3.0 | 0.2  | 1.4 |
| 66.50 | 68.50  | -1.6 | 1.75 | -4.1 | -3.3 | 0.3  | 1.5 |
| 68.50 | 69.50  | -0.5 | 1.24 | -2.2 | -1.5 | 0.9  | 2.0 |
| 69.50 | 70.50  | -1.8 | 1.63 | -4.5 | -3.3 | -0.1 | 1.0 |
| 70.50 | 71.50  | -2.2 | 2.06 | -5.6 | -4.2 | -0.1 | 1.2 |
| 71.50 | 73.00  | -0.9 | 2.91 | -5.6 | -4.2 | 2.0  | 3.4 |
| 73.50 | 74.50  | 0.3  | 1.15 | -1.5 | -0.8 | 1.5  | 2.4 |
| 74.50 | 75.50  | -0.3 | 1.52 | -2.8 | -1.8 | 1.0  | 2.8 |
| 75.50 | 76.50  | 0.0  | 0.97 | -1.8 | -1.0 | 0.8  | 1.8 |
| 76.50 | 77.50  | -0.3 | 1.11 | -1.8 | -1.3 | 1.0  | 1.8 |
| 78.50 | 79.50  | -0.3 | 1.02 | -1.8 | -1.3 | 0.8  | 1.7 |
| 79.50 | 80.50  | -0.3 | 1.10 | -1.8 | -1.3 | 0.8  | 2.0 |
| 80.50 | 81.50  | -1.0 | 3.03 | -8.0 | -6.0 | 0.3  | 1.7 |
| 81.50 | 82.50  | -0.7 | 1.46 | -3.8 | -2.0 | 0.5  | 1.8 |
| 84.75 | 85.00  | 0.3  | 1.49 | -2.4 | -1.4 | 1.6  | 2.5 |

## Hydraulic Conductivity Estimates:

Core #3 = Extraction well 33085

Interval

| Top   | Bottom | K<br>gal/d*ft <sup>2</sup> | K<br>10-2cm/s | K/Kmax |
|-------|--------|----------------------------|---------------|--------|
| 58.50 | 59.75  | 210                        | 0.99          | 0.21   |
| 59.75 | 61.00  | 120                        | 0.57          | 0.12   |
| 63.50 | 64.50  | 190                        | 0.90          | 0.19   |
| 64.50 | 65.50  | 250                        | 1.18          | 0.25   |
| 65.50 | 66.50  | 250                        | 1.18          | 0.25   |
| 66.50 | 68.50  | 170                        | 0.80          | 0.17   |
| 68.50 | 69.50  | 540                        | 2.56          | 0.54   |
| 69.50 | 70.50  | 250                        | 1.18          | 0.25   |
| 70.50 | 71.50  | 90                         | 0.43          | 0.09   |
| 71.50 | 73.00  | 30                         | 0.14          | 0.03   |
| 73.50 | 74.50  | 500                        | 2.36          | 0.50   |
| 74.50 | 75.50  | 200                        | 0.94          | 0.20   |
| 75.50 | 76.50  | 800                        | 3.77          | 0.80   |
| 76.50 | 77.50  | 700                        | 3.30          | 0.70   |
| 78.50 | 79.50  | 1000                       | 4.72          | 1.00   |
| 79.50 | 80.50  | 700                        | 3.30          | 0.70   |
| 80.50 | 81.50  | 80                         | 0.38          | 0.08   |
| 81.50 | 82.50  | 250                        | 1.18          | 0.25   |
| 84.75 | 85.00  | 210                        | 0.99          | 0.21   |

# Summer and Weber's Method for Estimating Hydraulic Conductivity

Grain Size Parameters:

Core #1 = Injection Well 33080

| Interval<br>Top | Bottom | % Fine | % Sand | % Gravel |
|-----------------|--------|--------|--------|----------|
| 59.50           | 61.00  | 1.2    | 77.6   | 21.2     |
| 61.00           | 62.00  | 0.9    | 56.6   | 42.5     |
| 62.00           | 63.50  | 1.1    | 53.5   | 45.4     |
| 69.25           | 70.25  | 0.7    | 74.1   | 25.2     |
| 70.25           | 71.25  | 0.3    | 68.3   | 31.4     |
| 71.25           | 72.00  | 2.2    | 81.7   | 16.1     |
| 74.00           | 75.00  | 1.0    | 77.4   | 21.6     |
| 75.00           | 76.00  | 0.7    | 83.3   | 16.0     |
| 76.00           | 77.00  | 0.8    | 88.8   | 10.4     |
| 77.00           | 78.00  | 1.8    | 93.3   | 4.9      |
| 78.00           | 79.00  | 1.5    | 95.2   | 3.3      |
| 79.00           | 80.00  | 1.9    | 97.4   | 0.7      |
| 80.00           | 81.00  | 0.8    | 88.3   | 10.9     |
| 81.00           | 81.75  | 1.0    | 61.7   | 37.3     |
| 81.75           | 82.75  | 1.4    | 91.2   | 7.4      |
| 82.75           | 83.75  | 1.9    | 69.0   | 29.1     |
| 84.00           | 85.25  | 1.2    | 93.3   | 5.5      |
| 85.25           | 86.25  | 1.2    | 77.5   | 21.3     |
| 86.25           | 87.25  | 8.7    | 71.7   | 19.6     |
| 87.25           | 88.50  | 6.8    | 64.7   | 28.5     |

Hydraulic Conductivity Estimates:

Core #1 = Injection Well 33080

| Interval<br>Top | Bottom | K<br>ft/d | K<br>10-2cm/s | K/Kmax |
|-----------------|--------|-----------|---------------|--------|
| 59.50           | 61.00  | 100       | 3.5           | 0.20   |
| 61.00           | 62.00  | 250       | 8.8           | 0.50   |
| 62.00           | 63.50  | 250       | 8.8           | 0.50   |
| 69.25           | 70.25  | 150       | 5.3           | 0.30   |
| 70.25           | 71.25  | 150       | 5.3           | 0.30   |
| 71.25           | 72.00  | 90        | 3.2           | 0.18   |
| 74.00           | 75.00  | 100       | 3.5           | 0.20   |
| 75.00           | 76.00  | 90        | 3.2           | 0.18   |
| 76.00           | 77.00  | 50        | 1.8           | 0.10   |
| 77.00           | 78.00  | 40        | 1.4           | 0.08   |
| 78.00           | 79.00  | 20        | 0.7           | 0.04   |
| 79.00           | 80.00  | 20        | 0.7           | 0.04   |
| 80.00           | 81.00  | 50        | 1.8           | 0.10   |
| 81.00           | 81.75  | 225       | 7.9           | 0.45   |
| 81.75           | 82.75  | 40        | 1.4           | 0.08   |
| 82.75           | 83.75  | 150       | 5.3           | 0.30   |
| 84.00           | 85.25  | 40        | 1.4           | 0.08   |
| 85.25           | 86.25  | 100       | 3.5           | 0.20   |
| 86.25           | 87.25  | 40        | 1.4           | 0.08   |
| 87.25           | 88.50  | 100       | 3.5           | 0.20   |

# Summer and Weber's Method for Estimating Hydraulic Conductivity

## Grain Size Parameters:

Core #2 = 2 feet adjacent to injection well 33080

Interval

| Top   | Bottom | % Fine | % Sand | % Gravel |
|-------|--------|--------|--------|----------|
| 56.50 | 57.50  | 2.0    | 82.8   | 15.2     |
| 57.50 | 58.50  | 1.1    | 74.9   | 24.0     |
| 58.50 | 59.50  | 0.9    | 67.3   | 31.8     |
| 59.50 | 60.50  | 0.7    | 49.0   | 50.3     |
| 60.50 | 61.50  | 0.9    | 59.9   | 39.2     |
| 64.00 | 65.00  | 1.3    | 82.0   | 16.7     |
| 65.00 | 66.00  | 0.6    | 48.4   | 51.0     |
| 66.00 | 67.00  | 0.5    | 27.6   | 71.9     |
| 67.00 | 68.00  | 0.5    | 40.7   | 58.8     |

## Hydraulic Conductivity Estimates:

Core #2 = 2 feet adjacent to injection well 33080

Interval

| Top   | Bottom | K<br>ft/d | K<br>10-2cm/s | K/Kmax |
|-------|--------|-----------|---------------|--------|
| 56.50 | 57.50  | 90        | 3.2           | 0.18   |
| 57.50 | 58.50  | 125       | 4.4           | 0.25   |
| 58.50 | 59.50  | 150       | 5.3           | 0.30   |
| 59.50 | 60.50  | 300       | 10.6          | 0.60   |
| 60.50 | 61.50  | 250       | 8.8           | 0.50   |
| 64.00 | 65.00  | 90        | 3.2           | 0.18   |
| 65.00 | 66.00  | 300       | 10.6          | 0.60   |
| 66.00 | 67.00  | 500       | 17.6          | 1.00   |
| 67.00 | 68.00  | 400       | 14.1          | 0.80   |

# Summer and Weber's Method for Estimating Hydraulic Conductivity

## Grain Size Parameters:

Core #3 = Extraction Well 33085

| Interval | Top   | Bottom | % Fine | % Sand | % Gravel |
|----------|-------|--------|--------|--------|----------|
|          | 58.50 | 59.75  | 0.4    | 76.9   | 22.7     |
|          | 59.75 | 61.00  | 0.8    | 77.9   | 21.3     |
|          | 63.50 | 64.50  | 0.6    | 38.9   | 60.5     |
|          | 64.50 | 65.50  | 0.6    | 47.5   | 51.9     |
|          | 65.50 | 66.50  | 0.5    | 48.8   | 50.7     |
|          | 66.50 | 68.50  | 0.7    | 45.9   | 53.4     |
|          | 68.50 | 69.50  | 0.6    | 83.8   | 15.6     |
|          | 69.50 | 70.50  | 0.5    | 42.6   | 56.9     |
|          | 70.50 | 71.50  | 0.6    | 35.5   | 63.9     |
|          | 71.50 | 73.00  | 4.0    | 52.3   | 43.7     |
|          | 73.50 | 74.50  | 1.4    | 97.8   | 0.8      |
|          | 74.50 | 75.50  | 1.2    | 88.7   | 10.1     |
|          | 75.50 | 76.50  | 1.1    | 95.7   | 3.3      |
|          | 76.50 | 77.50  | 2.2    | 93.2   | 4.6      |
|          | 78.50 | 79.50  | 0.6    | 96.2   | 3.2      |
|          | 79.50 | 80.50  | 2.4    | 95.0   | 2.6      |
|          | 80.50 | 81.50  | 1.5    | 67.5   | 31.1     |
|          | 81.50 | 82.50  | 1.4    | 82.3   | 16.3     |
|          | 84.75 | 85.00  | 3.0    | 87.0   | 10.0     |

## Hydraulic Conductivity Estimates:

Core #3 = Extraction Well 33085

| Interval | Top   | Bottom | K<br>ft/d | K<br>10-2cm/s | K/Kmax |
|----------|-------|--------|-----------|---------------|--------|
|          | 58.50 | 59.75  | 100       | 3.5           | 0.20   |
|          | 59.75 | 61.00  | 100       | 3.5           | 0.20   |
|          | 63.50 | 64.50  | 400       | 14.1          | 0.80   |
|          | 64.50 | 65.50  | 300       | 10.6          | 0.60   |
|          | 65.50 | 66.50  | 300       | 10.6          | 0.60   |
|          | 66.50 | 68.50  | 350       | 12.3          | 0.70   |
|          | 68.50 | 69.50  | 80        | 2.8           | 0.16   |
|          | 69.50 | 70.50  | 350       | 12.3          | 0.70   |
|          | 70.50 | 71.50  | 450       | 16.9          | 0.96   |
|          | 71.50 | 73.00  | 200       | 7.1           | 0.40   |
|          | 73.50 | 74.50  | 25        | 0.9           | 0.05   |
|          | 74.50 | 75.50  | 50        | 1.8           | 0.10   |
|          | 75.50 | 76.50  | 25        | 0.9           | 0.05   |
|          | 76.50 | 77.50  | 25        | 0.9           | 0.05   |
|          | 78.50 | 79.50  | 25        | 0.9           | 0.05   |
|          | 79.50 | 80.50  | 25        | 0.9           | 0.05   |
|          | 80.50 | 81.50  | 200       | 7.1           | 0.40   |
|          | 81.50 | 82.50  | 75        | 2.7           | 0.15   |
|          | 84.75 | 85.00  | 50        | 1.8           | 0.10   |

**APPENDIX C. LOCATION AND CONSTRUCTION OF WELLS**

| <u>Well<br/>#</u> | <u>Well<br/>Type</u> | <u>Ground<br/>Elevation</u> | <u>Distance<br/>from 33080</u> | <u>Screened<br/>Depth</u> | <u>Bentonite<br/>Seal Depth</u> | <u>Depth<br/>to water</u> |
|-------------------|----------------------|-----------------------------|--------------------------------|---------------------------|---------------------------------|---------------------------|
| 33080             | Injection            | 5176.4                      | 0                              | 52.5-87.5                 | 43.5-48.5                       | 56.8                      |
| 33082             | Drive Pt B           | 5176.0                      | 9.13                           | 69.0-69.5                 | ----                            | 56.2                      |
| 33083             | Drive Pt C           | 5176.0                      | 9.13                           | 78.0-78.5                 | ----                            | 56.2                      |
| 33084             | Drive Pt D           | 5176.0                      | 9.13                           | 84.0-84.5                 | ----                            | 56.2                      |
| 33085             | Extraction           | 5175.1                      | 27.61                          | 54.5-86.0                 | 47.0-52.0                       | 55.2                      |
| 33086             | Monitoring           | 5175.7                      | 17.09                          | 56.0-86.0                 | 49.0-54.0                       | 55.8                      |
| 33087             | Drive Pt A           | 5176.1                      | 11.75                          | 65.5-66.0                 | 49.0-54.0                       | 56.1                      |

FIELD LOG OF BORING

SHEET 1 OF 8

| PROJECT NAME<br>Rocky Mountain Arsenal  |                    | TASK NUMBER<br>48   |                            | SITE TYPE<br>BORE                          |   | SITE ID<br>33080                      |                                    |                          |       |                             |             |                                |
|---|--------------------|---|----------------------------|--|---|---------------------------------------|------------------------------------|--------------------------|-------|-----------------------------|-------------|--------------------------------|
| DRILLING COMPANY<br>Custom Auger  |                    | DRILLER<br>F. PARKS   |                            | DATE AND TIME STARTED<br>87286 0829        |   | DATE AND TIME COMPLETED<br>87294 1604 |                                    |                          |       |                             |             |                                |
| DRILLING EQUIPMENT METHOD<br>CME hollow stem auger / piston drive sampler (s) |                    |   |                            | COMPLETION DEPTH<br>87.5 ft 2669 cm        |   | WATER LEVEL<br>57.5 ft 1753 cm        |                                    |                          |       |                             |             |                                |
| SIZE AND TYPE OF BIT<br>8 inch  |                    |   |                            | HYDROGEOLOGIST / DATE<br>J. Martin / 87294 |   | CHECKED BY / DATE                     |                                    |                          |       |                             |             |                                |
| DEPTH<br>ft   | SAMPLE<br>INTERVAL | DESCRIPTION<br>(COLOR, TEXTURE,<br>STRUCTURE)   | ESTIMATED PERCENTAGE<br>OF |  |   |                                       | MOISTURE<br>CLASSIFICATION<br>USCS | CONSISTENCY<br>/ DENSITY | COLOR | COMMENTS<br>(SAMPLE NUMBER) |             |                                |
|   |                    |   | VERY COARSE<br>/ GRAVEL    | SAND<br>COARSE MEDIUM FINE                 |   |                                       |                                    |                          |       |                             | SILT / CLAY |                                |
| 0   | 0                  | 0-91 Yellowish brown silty<br>fine sand, roots  | -                          | -  | - | 60                                    | 10%                                | ML                       | DRY   | VL                          | 100%        | Logged<br>silt/clay from<br>0- |
| 1   | 30                 |   |                            |  |   |                                       |                                    |                          |       |                             |             |                                |
| 2   | 61                 |   |                            |  |   |                                       |                                    |                          |       |                             |             |                                |
| 3   | 91                 | 41-152 Yellowish brn<br>fine sand, minor silt   | -                          | -  | - | 90                                    | 10%                                | ML                       | LM    | VL                          | 100%        |                                |
| 4   | 122                | 152-183 Yellowish brn<br>clay, fine sand, trace<br>off, ex. grains, mica<br>clay in balls | -                          | 1  | - | 95                                    | 7/4                                | ML                       | LM    | L                           | 100%        |                                |
| 5   | 153                |   |                            |  |   |                                       |                                    |                          |       |                             |             |                                |
| 6   | 183                | 183-305 - Same  |                            |  |   |                                       |                                    |                          |       |                             |             |                                |
| 7   | 213                |   |                            |  |   |                                       |                                    |                          |       |                             |             |                                |
| 8   | 244                |   |                            |  |   |                                       |                                    |                          |       |                             |             |                                |
| 9   | 274                | 274-305<br>CaCO <sub>3</sub> in small nodules   |                            |  |   |                                       |                                    |                          |       |                             |             |                                |
| 10  | 305                |   |                            |  |   |                                       |                                    |                          |       |                             |             |                                |

EBASCO SERVICES INCORPORATED  
ENVIRONMENTAL PROGRAM AT ROCKY MOUNTAIN ARSENAL

FIELD LOG OF BORING

| DEPTH |     | SAMPLE<br>INTERVAL | DESCRIPTION<br>INTERVAL | RECOVERY<br>(cm/cm) | DESCRIPTION<br>(COLOR, TEXTURE,<br>STRUCTURE)   | ESTIMATED PERCENTAGE<br>OF |        |        |      |   | SILT/CLAY | SOIL<br>CLASSIFICATION<br>USCS | MOISTURE | CONSISTENCY/<br>DENSITY | COLOR | COMMENTS<br>(SAMPLE NUMBER) |
|-------|-----|--------------------|-------------------------|---------------------|---|----------------------------|--------|--------|------|---|-----------|--------------------------------|----------|-------------------------|-------|-----------------------------|
| (1)   | (2) |                    |                         |                     |   | VERT COARSE<br>/ SPAN      | SAND   |        |      |   |           |                                |          |                         |       |                             |
|       | cm  |                    |                         |                     |   |                            | COARSE | MEDIUM | FINE |   |           |                                |          |                         |       |                             |
| 10    | 305 |                    |                         |                     | 305-350 Yellowish brown<br>med-ck sandy granular<br>gravel, small pebbles, poorly<br>sorted                               | 40                         | 30     | 30     | -    | 7 | GP        | LM                             | VL       | 10YR 7/6                |       |                             |
| 11    | 335 |                    |                         |                     | 350-427 Brownish yellow<br>v. ck to med sand minor<br>granules and small pebbles<br>moderately sorted, subangular         | 10                         | 30     | 60     | -    | 7 | GP        | LM                             | VL       | 10YR 7/6                |       |                             |
| 12    | 366 |                    |                         |                     |   |                            |        |        |      |   |           |                                |          |                         |       |                             |
| 13    | 396 |                    |                         |                     |   |                            |        |        |      |   |           |                                |          |                         |       |                             |
| 14    | 427 |                    |                         |                     | 427-518 Yellowish brn<br>coarse sand, minor to<br>trace granules, well<br>sorted, subrounded<br>grains                    | 5                          | 95     | -      | -    | 7 | GW        | LM                             | VL       | 10YR 7/4                |       |                             |
| 15    | 457 |                    |                         |                     |   |                            |        |        |      |   |           |                                |          |                         |       |                             |
| 16    | 488 |                    |                         |                     |   |                            |        |        |      |   |           |                                |          |                         |       |                             |
| 17    | 518 |                    |                         |                     | 518-579 Brownish yellow<br>coarse sand, minor granules<br>trace fines, well to medly<br>well sorted, subrounded<br>grains | 5                          | 93     | -      | 2    | 7 | GW        | LM                             | VL       | 10YR 7/6                |       |                             |
| 18    | 549 |                    |                         |                     |   |                            |        |        |      |   |           |                                |          |                         |       |                             |
| 19    | 579 |                    |                         |                     | 579-599 - Same<br>599-610 brownish yellow<br>med. to coarse sandy<br>gravel w/ minor sm pebbles<br>poorly sorted          | 10                         | 55     | 35     | -    | 7 | GP        | LM                             | VL       | 10YR 7/6                |       |                             |
| 20    | 610 |                    |                         |                     | 610-732 Lt yellowish brn<br>fine to med. sand, trace<br>of granules, minor coarse   | 3                          | 7      | 60     | 30   | 7 | SP        | LM                             | VL       | 10YR 7/4                |       |                             |
| 21    | 640 |                    |                         |                     |   |                            |        |        |      |   |           |                                |          |                         |       |                             |
| 22    | 670 |                    |                         |                     |   |                            |        |        |      |   |           |                                |          |                         |       |                             |
| 23    | 701 |                    |                         |                     |   |                            |        |        |      |   |           |                                |          |                         |       |                             |



EBASCO SERVICES INCORPORATED  
ENVIRONMENTAL PROGRAM AT ROCKY MOUNTAIN ARSENAL

FIELD LOG OF BORING

| DEPTH |      | SAMPLE<br>INTERVAL | DESCRIPTION<br>INTERVAL | RECOVERY<br>(cm/cm) | DESCRIPTION<br>(COLOR, TEXTURE,<br>STRUCTURE)  | ESTIMATED PERCENTAGE<br>OF |        |      |    |             | SOIL<br>CLASSIFICATION<br>USCS | MOISTURE | CONSISTENCY/<br>DENSITY | COLOR   | COMMENTS<br>(SAMPLE NUMBER) |
|-------|------|--------------------|-------------------------|---------------------|--|----------------------------|--------|------|----|-------------|--------------------------------|----------|-------------------------|---------|-----------------------------|
| ft    | cm   |                    |                         |                     |  | VERY COARSE<br>/ GRAVEL    | SAND   |      |    | SILT / CLAY |                                |          |                         |         |                             |
|       |      |                    |                         |                     |  | COARSE                     | MEDIUM | FINE |    |             |                                |          |                         |         |                             |
| 23    | 701  |                    |                         |                     |  |                            |        |      |    |             |                                |          |                         |         |                             |
| 24    | 732  |                    |                         |                     | 732-884 Same.  |                            |        |      |    |             |                                |          |                         |         |                             |
| 25    | 762  |                    |                         |                     |  |                            |        |      |    |             |                                |          |                         |         |                             |
| 26    | 792  |                    |                         |                     |  |                            |        |      |    |             |                                |          |                         |         |                             |
|       | 823  |                    |                         |                     | 823 Driller notes augers<br>are binding. Possibly clayey   |                            |        |      |    |             |                                |          |                         |         |                             |
| 28    | 853  |                    |                         |                     |  |                            |        |      |    |             |                                |          |                         |         |                             |
| 29    | 884  |                    |                         |                     | 884-1034 Yellowish brown<br>med, coarse & very coarse<br>sandy gravel, minor<br>granules, in frequent<br>pebbles (conglomerate - poorly<br>cemented, coarse sand &<br>pebbles) ~ 1" diam or<br>less, poorly sorted<br>no pebbles well cemented | 10/5                       | 20     | 65   | -  | 7/-         | GP                             | LM       | VL                      | 10125/4 |                             |
| 30    | 914  |                    |                         |                     |  |                            |        |      |    |             |                                |          |                         |         |                             |
| 31    | 945  |                    |                         |                     |  |                            |        |      |    |             |                                |          |                         |         |                             |
| 32    | 975  |                    |                         |                     |  |                            |        |      |    |             |                                |          |                         |         |                             |
| 33    | 1006 |                    |                         |                     | 1006-1067 (estimated)<br>large pebbles in cobbles<br>(volcanic and metamorphic)<br>in origin (chert-petrified wood)  |                            |        |      |    |             |                                |          |                         |         |                             |
|       | 1036 |                    |                         |                     |  |                            |        |      |    |             |                                |          |                         |         |                             |
| 35    | 1067 |                    |                         |                     | 1067-1189 Clayey sand<br>and silt, in balls in<br>cobbles Yellowish brown  | -                          | -      | -    | 70 | 20/10       | CL-<br>ML                      | LM       | SO                      | 10125/4 |                             |

EBASCO SERVICES INCORPORATED  
ENVIRONMENTAL PROGRAM AT ROCKY MOUNTAIN ARSENAL

FIELD LOG OF BORING

| DEPTH |      | SAMPLE<br>INTERVAL | DESCRIPTION<br>INTERVAL | RECOVERY<br>(cm/cm) | DESCRIPTION<br>(COLOR, TEXTURE,<br>STRUCTURE)  | ESTIMATED PERCENTAGE<br>OF |        |        |      | SILT/CLAY        | SOIL<br>CLASSIFICATION<br>USCS | MOISTURE | CONSISTENCY/<br>DENSITY | COLOR | COMMENTS<br>(SAMPLE NUMBER) |      |
|-------|------|--------------------|-------------------------|---------------------|--|----------------------------|--------|--------|------|------------------|--------------------------------|----------|-------------------------|-------|-----------------------------|------|
| ft    | cm   |                    |                         |                     |  | VERY COARSE<br>/ GRAVEL    | SAND   |        |      |                  |                                |          |                         |       |                             | FINE |
|       |      |                    |                         |                     |  |                            | COARSE | MEDIUM | FINE |                  |                                |          |                         |       |                             |      |
| 36    | 1097 |                    |                         |                     | along with pea gravel<br>Note: driller felt every<br>binding ~ 35' but did<br>not feel any gravel<br>or large pebbles. |                            |        |        |      |                  |                                |          |                         |       |                             |      |
| 37    | 1128 |                    |                         |                     |  |                            |        |        |      |                  |                                |          |                         |       |                             |      |
| 38    | 1158 |                    |                         |                     |  |                            |        |        |      |                  |                                |          |                         |       |                             |      |
| 39    | 1189 |                    |                         |                     | 1189-1341 Yellowish brown<br>clayey silt. Dry to<br>42 (1280)  | -                          | -      | -      | -    | 60%<br>cl-<br>ml | in                             | So       | 10474                   |       |                             |      |
|       | 1219 |                    |                         |                     |  |                            |        |        |      |                  |                                |          |                         |       |                             |      |
| 41    | 1250 |                    |                         |                     |  |                            |        |        |      |                  |                                |          |                         |       |                             |      |
| 42    | 1280 |                    |                         |                     | 42 (1280-1341) Driller<br>notes clay more<br>moist and easier to<br>penetrate.   |                            |        |        |      |                  |                                |          |                         |       |                             |      |
| 43    | 1311 |                    |                         |                     |  |                            |        |        |      |                  |                                |          |                         |       |                             |      |
| 44    | 1341 |                    |                         |                     | 1341-1448 clayey silt<br>soft (driller note)   | -                          | -      | -      | -    | 60%<br>cl-<br>ml | in                             | So       | 10474                   |       |                             |      |
| 45    | 1372 |                    |                         |                     |  |                            |        |        |      |                  |                                |          |                         |       |                             |      |
| 46    | 1402 |                    |                         |                     |  |                            |        |        |      |                  |                                |          |                         |       |                             |      |
|       | 1433 |                    |                         |                     |  |                            |        |        |      |                  |                                |          |                         |       |                             |      |
|       | 1463 |                    |                         |                     | 1448-1494 clayey silt<br>hard again (driller<br>note)  | -                          | -      | -      | -    | 60%<br>cl-<br>ml | in                             | So       | 10474                   |       |                             |      |
| 48    | 1494 |                    |                         |                     |  |                            |        |        |      |                  |                                |          |                         |       |                             |      |

FIELD LOG OF BORING

| DEPTH |      | SAMPLE<br>INTERVAL | DESCRIPTION<br>(COLOR, TEXTURE,<br>STRUCTURE)  | ESTIMATED PERCENTAGE<br>OF |                |                |              |     | SILT/CLAY | SOIL<br>CLASSIFICATION<br>USCS | MOISTURE | CONSISTENCY/<br>DENSITY | COLOR    | COMMENTS<br>(SAMPLE NUMBER) |
|-------|------|--------------------|--|----------------------------|----------------|----------------|--------------|-----|-----------|--------------------------------|----------|-------------------------|----------|-----------------------------|
| ft    | cm   |                    |  | VERY COARSE<br>GRAVEL      | COARSE<br>SAND | MEDIUM<br>SAND | FINE<br>SAND |     |           |                                |          |                         |          |                             |
| 49    | 1494 |                    | 1616 nm<br>1494-1617 Same  |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 50    | 1525 |                    |  |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 51    | 1595 |                    |  |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 52    | 1586 |                    |  |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 53    | 1616 |                    | 1616-1753 Yellowish brn<br>coarse sand w/ minor<br>granules & v. coarse gravel<br>clayey in zones, some<br>medium, poorly sorted | 10                         | 60             | 25             | -            | 7/5 | GP        | V                              | moist    | L                       | 10TR 5/4 |                             |
| 54    | 1697 |                    |  |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 55    | 1672 |                    |  |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 56    | 1700 |                    |  |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 57    | 1730 |                    |  |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 58    | 1753 |                    | 1753 Water table.<br>(approximate)   |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 59    | 1769 |                    | 1753-1799 Coarse<br>sandy and granular<br>gravel   |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 60    | 1799 |                    | 1799-1952 Same<br>percentages not<br>recorded due<br>to difficulty discern-<br>ing grain sizes through<br>plastic and water.     |                            |                |                |              |     |           |                                |          |                         |          | N 8541                      |
| 61    | 1830 |                    |  |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 62    | 1860 |                    |  |                            |                |                |              |     |           |                                |          |                         |          |                             |
| 63    | 1891 |                    | Coarse to V. coarse sandy<br>granular pebbly gravel<br>w/ few medium grained black<br>silt                                       |                            |                |                |              |     |           |                                |          |                         |          |                             |

SHEET 5 of 8

EBASCO SERVICES INCORPORATED  
ENVIRONMENTAL PROGRAM AT ROCKY MOUNTAIN ARSENAL

FIELD LOG OF BORING

| DEPTH |      | SAMPLE<br>INTERVAL | DESCRIPTION<br>INTERVAL | RECOVERY<br>(cm/cm) | DESCRIPTION<br>(COLOR, TEXTURE,<br>STRUCTURE)   | ESTIMATED PERCENTAGE<br>OF |        |        |      |             | SOIL<br>CLASSIFICATION<br>USCS | MOISTURE | CONSISTENCY/<br>DENSITY | COLOR | CONTENTS<br>(SAND, SILT, CLAY) |
|-------|------|--------------------|-------------------------|---------------------|---|----------------------------|--------|--------|------|-------------|--------------------------------|----------|-------------------------|-------|--------------------------------|
| ft    | cm   |                    |                         |                     |   | VERY COARSE<br>GRAVEL      | SAND   |        |      | SILT / CLAY |                                |          |                         |       |                                |
|       |      |                    |                         |                     |   |                            | COARSE | MEDIUM | FINE |             |                                |          |                         |       |                                |
| 62    | 1891 |                    |                         |                     |   |                            |        |        |      |             |                                |          |                         |       |                                |
| 63    | 1921 |                    |                         |                     |   |                            |        |        |      |             |                                |          |                         |       |                                |
| 64    | 1952 |                    |                         |                     | Clay line at tip<br>1952-2104 No<br>recording - Very fine<br>sandy pebble gravel<br>(assumed) |                            |        |        |      |             |                                |          |                         |       |                                |
| 65    | 1983 |                    |                         |                     |   |                            |        |        |      |             |                                |          |                         |       |                                |
| 66    | 2013 |                    |                         |                     |   |                            |        |        |      |             |                                |          |                         |       |                                |
| 67    | 2043 |                    |                         |                     |   |                            |        |        |      |             |                                |          |                         |       |                                |
| 68    | 2074 |                    |                         |                     |   |                            |        |        |      |             |                                |          |                         |       |                                |
| 69    | 2104 |                    |                         |                     | 2104 - 2257<br>8 1/5% Same gravel<br>w/ less fines  |                            |        |        |      |             |                                |          |                         |       |                                |
| 70    | 2135 |                    |                         |                     | No percentages<br>recorded  |                            |        |        |      |             |                                |          |                         |       |                                |
| 71    | 2165 |                    |                         |                     |   |                            |        |        |      |             |                                |          |                         |       |                                |
| 72    | 2196 |                    |                         |                     |   |                            |        |        |      |             |                                |          |                         |       |                                |
| 73    | 2226 |                    |                         |                     |   |                            |        |        |      |             |                                |          |                         |       |                                |
| 74    | 2257 |                    |                         |                     | 45% 2257-2287<br>Same   |                            |        |        |      |             |                                |          |                         |       |                                |
| 75    | 2287 |                    |                         |                     |   |                            |        |        |      |             |                                |          |                         |       |                                |

EBASCO SERVICES INCORPORATED  
ENVIRONMENTAL PROGRAM AT ROCKY MOUNTAIN ARSENAL

FIELD LOG OF BORING

| DEPTH |      | SAMPLE<br>INTERVAL | DESCRIPTION<br>INTERVAL | RECOVERY<br>(cm/cm) | DESCRIPTION<br>(COLOR, TEXTURE,<br>STRUCTURE)                    | ESTIMATED PERCENTAGE<br>OF |        |        |      |  | SILT/CLAY | SOIL<br>CLASSIFICATION<br>USCS | MOISTURE | CONSISTENCY/<br>DENSITY | COLOR | COMMENTS<br>(SAMPLE NUMBER) |
|-------|------|--------------------|-------------------------|---------------------|--|----------------------------|--------|--------|------|--|-----------|--------------------------------|----------|-------------------------|-------|-----------------------------|
| ft    | cm   |                    |                         |                     |  | VERY COARSE<br>/GRAVEL     | SAND   |        |      |  |           |                                |          |                         |       |                             |
|       |      |                    |                         |                     |  |                            | COARSE | MEDIUM | FINE |  |           |                                |          |                         |       |                             |
| -75   | 2287 |                    |                         |                     | 2287-2409 silty fine<br>sand minor med. +<br>clay. if any.       |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -76   | 2318 |                    |                         |                     |  |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -77   | 2340 |                    |                         |                     |  |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -78   | 2379 |                    |                         |                     |  |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -79   | 2409 |                    |                         |                     | 90% Layers of gravelly<br>sand and fine<br>fine sand             |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -80   | 2440 |                    |                         |                     |  |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -81   | 2470 |                    |                         |                     |  |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -82   | 2501 |                    |                         |                     |  |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -83   | 2531 |                    |                         |                     |  |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -84   | 2562 |                    |                         |                     | 90% FAIRLY UNIFORM<br>FINE GRAINED<br>SILTY SAND                 |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -85   | 2592 |                    |                         |                     | AT ~87' MARK   |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -86   | 2623 |                    |                         |                     | ABRUPT CHANGE<br>TO CLAY.  |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -87   | 2653 |                    |                         |                     | IN SHOE AT BOTTOM<br>OF CORE SAMPLER                             |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -88   | 2683 |                    |                         |                     | NOTICED SOME LG.<br>GRAINING SAND BEGINNING<br>TO MIX IN W/ CLAY |                            |        |        |      |  |           |                                |          |                         |       |                             |
| -89   | 2713 |                    |                         |                     |  |                            |        |        |      |  |           |                                |          |                         |       |                             |

FIELD LOG OF BORING


|                   |                  |
|-------------------|------------------|
| SITE TYPE<br>BONE | SITE ID<br>33080 |
|-------------------|------------------|

SHEET 8 OF 8

| DEPTH<br>ft | cm   | SAMPLE<br>INTERVAL | DESCRIPTION<br>INTERVAL | RECOVERY<br>(cm/cm) | DESCRIPTION<br>(COLOR, TEXTURE,<br>STRUCTURE) | ESTIMATED PERCENTAGE<br>OF |                |                |              |             | SOIL<br>CLASSIFICATION<br>USCS | MOISTURE | CONSISTENCY/<br>DENSITY | COLOR | COMMENTS<br>(SAMPLE NUMBER) |
|-------------|------|--------------------|-------------------------|---------------------|---|----------------------------|----------------|----------------|--------------|-------------|--------------------------------|----------|-------------------------|-------|-----------------------------|
|             |      |                    |                         |                     |   | VERY COARSE<br>/ GRAVEL    | COARSE<br>SAND | MEDIUM<br>SAND | FINE<br>SAND | SILT / CLAY |                                |          |                         |       |                             |
| 89          | 2774 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |
| 90          | 2775 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |
| 91          | 2775 |                    |                         |                     | Well set at 87.5'<br>Drilled to 92'           |                            |                |                |              |             |                                |          |                         |       |                             |
|             | 2806 |                    |                         |                     | Bottom of hole                                |                            |                |                |              |             |                                |          |                         |       |                             |
| 93          | 2826 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |
| 94          | 2867 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |
| 95          | 2872 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |
| 96          | 2928 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |
| 97          | 2958 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |
| 98          | 2969 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |
|             | 3049 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |
| 100         | 3050 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |
| 101         | 3060 |                    |                         |                     |   |                            |                |                |              |             |                                |          |                         |       |                             |

EBASCO SERVICES INCORPORATED  
ENVIRONMENTAL PROGRAM AT ROCKY MOUNTAIN ARSENAL

WELL CONSTRUCTION LOG

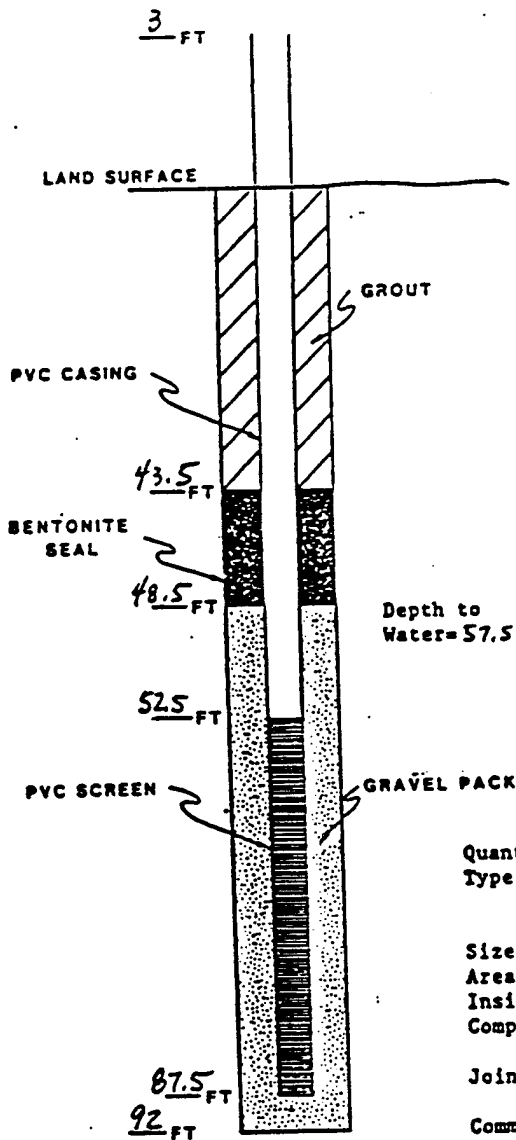

Task No.: 48 Geologist: NM  
Well Number: 33080 Checked By: \_\_\_\_\_

Drilling Summary

Total Depth of Bore: 92 Ft.  
Borehole Diameter: 11.25 in Fe nm  
Drilling Company: Custom Argus  
Driller: Frank Parks  
Rig: CMF 55  
Bits: Hollow Stem Argus

Construction Time Log

|                   | Start Date | Start Time | Finish Date | Finish Time |
|-------------------|------------|------------|-------------|-------------|
| Drilling:         | 10/14      | 0829       | 10/21       | 1604        |
| Screen Placement: | 10/22      | 1000       | 10/22       | 1050        |
| Filter Placement: | 10/22      | 1050       | 10/22       | 1309        |
| Seal Placement:   | 10/22      | 1500       | 10/22       | 1515        |
| Grouting:         | 10/23      | 0900       | 10/23       | 1030        |

Well Construction Material

Quantity: 3 batches \* Grout  
Type: 1 spp  
Seals: 2.25 buckets \* Filter  
Vulcan pellets 14 bags  
(Bentonite) 10.20 Colo.  
Silica Sand

Size: 0.075 Screen  
Area/Ft.: 55  
Inside diameter: 4"  
Comp: PVC

Config: \_\_\_\_\_  
Outside Diameter: 4.25"  
Manufacturer: Ardenck

Joints and Centralizers: \* Flush joint threaded

Comments: \* 1 batch = 3.3 lb bentonite, 16 bags cement  
\* 2 buckets = 1/4" diam Vulcan pellets 0.25 buckets: 1/2" dia  
\* Cement-bentonite mixture - Southwestern Portland  
Cement and Quick Gel Bentonite

Measuring Point is  
Ground Surface unless  
otherwise noted

R. L. STOLLAR & ASSOCIATES, INC.  
WELL LOG

Project No. UCLA  
Well/Boring No. 53085  
CombarKey No. \_\_\_\_\_

|   |                                       |                                      |   |                                   |  |          |
|---|---------------------------------------|--------------------------------------|---|-----------------------------------|--|----------|
| Project Name and Location <u>UCLA - WEST TIER</u>   |                                       | Elevation _____                      | Coordinates _____                         |                                   | Township _____ Range _____ Section <u>33</u> |          |
| Drilling Company <u>CUSTOM AUGER</u>                |                                       | Driller <u>F. PARKS</u>              | Date and Time Started <u>5/15/85 0830</u> |                                   | Date and Time Completed <u>5/21/85 1700</u>  |          |
| Drilling Equipment <u>CME-55</u>                    |                                       | Total Drilled Depth <u>86.5' BOS</u> |   | Completion Depth <u>86.6' RES</u> |  |          |
| Drilling Method <u>HOLLOW STEM AUGER</u>            |                                       | Boring Diameter <u>11" 00</u>        | Sampler _____                             | No of Samples _____               | Cal _____                                    | SS _____ |
| Size and Type of Casing <u>4" SCH 40 RUSH JOINT</u> |                                       | Water Elevation _____                | First <u>55</u>                           | Completion _____                  | 24 Hrs _____                                 |          |
| Type of Perforation <u>20 SLOT</u>                  | From <u>5.1</u> To <u>86</u> (FI-BGS) | Pack Size and Type <u>8 1/2"</u>     | From <u>52</u> To <u>86.9</u> (FI-BGS)    |                                   |  |          |
| Type of Seal <u>CEMENT GRANKLES</u>                 | From <u>47</u> To <u>52</u> (FI-BGS)  | Hydrogeologist <u>G. STAMENSON</u>   | Checked By/Date _____                     |                                   |  |          |

| Depth (feet) | Description   | Lithology | Piezometer Installation | Water Content | Estimate % of |    |    | Grain Count | Remarks (Drill Rate, Odor, Sample No., etc.) |
|--------------|---|-----------|-------------------------|---------------|---------------|----|----|-------------|--|
|              |   |           |                         |               | GR            | SA | FI |             |  |
| 5            | CLAYEY SILTY SAND<br>YELLOW-BRN.; POORLY SORTED;<br>SUBANGULAR; DRY TO MOIST;<br>W/SOME CALCICHE @ 6' BOS;<br>W/SOME GRAVEL LENSES @ 18-20' &<br>+ 36-37'; ROOTS NEAR SURFACE |           |                         |               |               |    |    |             | EASY<br>DRILLING<br>NO OBST.                 |
| 10           |   |           |                         |               |               |    |    |             |  |
| 15           |   |           |                         |               |               |    |    |             |  |
| 20           |   |           |                         |               |               |    |    |             |  |
| 25           |   |           |                         |               |               |    |    |             |  |
| 30           |   |           |                         |               |               |    |    |             |  |
| 35           |   |           |                         |               |               |    |    |             |  |

FORM 172

Page 1 of 2



R. L. STOLLAR & ASSOCIATES, INC.  
WELL LOG (Continued)

Project No. \_\_\_\_\_  
Well/Boring No. 33085

| Depth<br>(feet) | Description   | USCS<br>Symbol | Lithology | Piezometer<br>Installation | Water<br>Content | Estimate<br>% of |    |    | Remarks<br>(Drill Rate, Odr.<br>Sample No., etc.) |
|-----------------|---|----------------|-----------|----------------------------|------------------|------------------|----|----|---|
|                 |   |                |           |                            |                  | GR               | SA | FI |   |
| 37'             | CLAY ; BROWN ; VERY<br>PLASTIC ; MOIST  | CL             |           | CEMENT<br>BLACK PVC        |                  |                  | 5  | 95 | TIGHT<br>FRACTION                                 |
| 40              |   |                |           | CEMENT                     |                  |                  |    |    |   |
| 45              |   |                |           | 2" BENTONITE               |                  |                  |    |    |   |
| 50              |   |                |           | BENTONITE                  |                  |                  |    |    |   |
| 55              | GRAVELLY COARSE SAND - WET;<br>SUBANGULAR; POOR SORT<br>LT. TAN BROWN; SOME SALT<br>W/SOME FINE SANDS & COBBLES | SP             |           |                            |                  | 15               | 80 | 5  | 42/5<br>BENTON<br>W/PISTON<br>SAMPLER             |
| 60              |   |                |           |                            |                  |                  |    |    |   |
| 65              |   |                |           | SAND                       |                  |                  |    |    | 13/5  |
| 70              |   |                |           | SAND                       |                  |                  |    |    |   |
| 75              |   |                |           |                            |                  |                  |    |    | FISHED<br>FOR<br>15' SAMPLER                      |

FORM 172

Page 2 of 3

R. L. STOLLAR & ASSOCIATES, INC.  
WELL LOG (Continued)

Project No. 33085  
Well/Boring No. 33085

| Depth<br>(feet) | Description                  | USCS<br>Symbol | Lithology | Piezometer<br>Installation | Water<br>Content | Estimate<br>% of |    |    | Flow<br>Control | Remarks<br>(Drift Rate, Odor,<br>Sample No., etc.) |
|-----------------|------------------------------|----------------|-----------|----------------------------|------------------|------------------|----|----|-----------------|--|
|                 |                              |                |           |                            |                  | GR               | SA | FI |                 |  |
| 80              |                              |                |           |                            |                  |                  |    |    |                 |  |
| 85              | CLAY - BROWN; WET<br>PLASTIC |                | CL        |                            |                  |                  |    |    |                 | TD = 86.5'<br>BVS                                  |
| 90              |                              |                |           |                            |                  |                  |    |    |                 |  |

FORM 173

Page 3 of 3

R. L. STOLLAR & ASSOCIATES, INC.  
WELL LOG

Project No. UCLA  
Well/Boring No. 53086  
Comborkey No. \_\_\_\_\_

|   |                           |                                      |  |                                      |  |    |
|---|---------------------------|--------------------------------------|--|--------------------------------------|--|----|
| Project Name and Location<br><u>UCLA - WEST TREE</u>    |                           | Elevation                            | Coordinates                                  |                                      | Township Range Section<br><u>33</u>            |    |
| Drilling Company<br><u>CUSTOM AUGER</u>                 |                           | Driller<br><u>F. PARKS</u>           | Date and Time Started<br><u>5/24/88 1500</u> |                                      | Date and Time Completed<br><u>5/27/88 1430</u> |    |
| Drilling Equipment<br><u>CME-55</u>                     |                           | Total Drift Depth<br><u>90'</u>      |  | Completion Depth<br><u>86' BGS</u>   |  |    |
| Drilling Method<br><u>HOLLOW STEM AUGER</u>             |                           | Boring Diameter<br><u>11" OD</u>     | Sampler                                      | No of Samples                        | Cal  | SS |
| Size and Type of Casing<br><u>2" SCH 40 FLUSH JOINT</u> |                           | Water Elevation                      | First  | Completion                           | 24 Hrs   |    |
| Type of Penetration                                     | <u>20 SLOT</u>            | From <u>56</u> To <u>86</u> (FI-BGS) | Pack Size and Type<br><u>8/12</u>            | From <u>54</u> To <u>86</u> (FI-BGS) |  |    |
| Type of Seal  | <u>BENTONITE GRANKLES</u> | From <u>49</u> To <u>54</u> (FI-BGS) | Hydrogeologist<br><u>B. STOLLAR</u>          | Checked By/Date                      |  |    |

| Depth (feet) | Description  | Lithology | Piezometer Installation | Water Content | Estimate % of |    |    | Base | Remarks (Drill Rate, Odor, Sample No., etc.) |
|--------------|--|-----------|-------------------------|---------------|---------------|----|----|------|--|
|              |  |           |                         |               | GR            | SA | FI |      |  |
| 5            | CLAYEY SILTY SAND<br>YELLOW-BRN.; POORLY SORTED;<br>SUBANGULAR; DRY TO MOIST;<br>W/SOME CALICHE @ 6' BGS;<br>W/SOME GRAVEL LENSES @ 18-20'<br>+ 36-37'; ROOTS NEAR SURFACE | SM        |                         |               | 5             | 80 | 15 |      | Early<br>Drilling<br>No 0000s                |
| 10           |  |           |                         |               |               |    |    |      |  |
| 15           |  |           |                         |               |               |    |    |      |  |
| 20           |  |           |                         |               |               |    |    |      |  |
| 25           |  |           |                         |               |               |    |    |      |  |
| 30           |  |           |                         |               |               |    |    |      |  |
| 35           |  |           |                         |               |               |    |    |      |  |

FORM 172

Page 1 of 3

R. L. STOLLAR & ASSOCIATES, INC.  
WELL LOG (Continued)

Project No. \_\_\_\_\_  
Well/Boring No. 33086

| Depth<br>(feet) | Description  | SPC<br>Interval | Lithology | Pneumometer<br>Installation | Water<br>Content | Estimate<br>% of |    |    | Grain<br>Size | Remarks<br>(Drill Rate, Odor,<br>Sample No., etc.) |
|-----------------|--|-----------------|-----------|-----------------------------|------------------|------------------|----|----|---------------|--|
|                 |  |                 |           |                             |                  | GR               | SA | FI |               |  |
| 37'             | CLAY ; BROWN ; VERY<br>PLASTIC ; MOIST   |                 | CL        |                             |                  |                  |    |    |               | TIGHT<br>FRACTION                                  |
| 40              |  |                 |           | CEMENT                      |                  |                  |    |    |               |  |
| 45              |  |                 |           | 2" BLACK PVC                |                  |                  |    |    |               |  |
| 50              |  |                 |           | CEMENT                      |                  |                  |    |    |               |  |
| 55              | GRAVELLY COARSE SAND - WET;<br>SUBANGULAR; POOR SORT<br>LT. TAN BROWN; SOME SLT<br>W/SOME FINE SANDS & COBBLES |                 | SP        | BEHAVIOR                    |                  | 15               | 80 | 5  | 42/15         | BEGIN<br>w/PISTON<br>SAMPLE                        |
| 60              |  |                 |           | SAND                        |                  |                  |    |    | 13/15         |  |
| 65              |  |                 |           | SAND                        |                  |                  |    |    |               |  |
| 70              |  |                 |           |                             |                  |                  |    |    |               |  |
| 75              |  |                 |           |                             |                  |                  |    |    |               | FIXED<br>FOR<br>SAMPLE                             |

FORM 72

Page 2 of 3

R. L. STOLLAR & ASSOCIATES, INC.  
WELL LOG (Continued)

Project No.

Well/Boring No.

33086

| Depth<br>(feet) | Description                  | USCS<br>Symbol | Lithology | Piezometer<br>Installation | Flow<br>meters<br>C.O. | Estimate<br>% of |    |    | Gravel<br>%<br>C.O. | Remarks<br>(Drill Rate, Odor,<br>Sample No., etc.) |
|-----------------|------------------------------|----------------|-----------|----------------------------|------------------------|------------------|----|----|---------------------|--|
|                 |                              |                |           |                            |                        | GR               | SA | FI |                     |  |
| 80              |                              |                |           |                            |                        |                  |    |    |                     |  |
| 85              | CLAY - BROWN, WET<br>PLASTIC | CL             |           |                            |                        |                  |    |    |                     |  |
| 90              |                              |                |           |                            |                        |                  |    |    |                     |  |

TD = 90' LOG

POP4172

Page 3 of 3

R. L. STOLLAR & ASSOCIATES, INC.  
WELL LOG

Project No. UCLA  
Well/Boring No. 53087  
Combs/Key No. \_\_\_\_\_

|  |  |                              |             |  |          |  |       |  |                      |                 |  |
|--|--|------------------------------|-------------|--|----------|--|-------|--|----------------------|-----------------|--|
| Project Name and Location<br><u>UCLA - WEST TREE</u> |  | Elevation                    | Coordinates |  | Township |  | Range |  | Section<br><u>33</u> |                 |  |
| Drilling Company<br><u>CUSTOM AUGER</u>              |  | Driller<br><u>F. PARKS</u>   |             | Date and Time Started<br><u>8/31/88 0700</u> |          | Date and Time Completed<br><u>5/31/88 1500</u> |       |  |                      |                 |  |
| Drilling Equipment<br><u>CME-55</u>                  |  | Boring Diameter<br><u>00</u> |             | Total Drilled Depth<br><u>57'00"</u>         |          | Completion Depth<br><u>86'00"</u>              |       |  |                      |                 |  |
| Drilling Method<br><u>HOLLOW STEM AUGER</u>          |  | Sampler                      |             | No of Samples                                |          | Cat  |       | SS                                     |                      |                 |  |
| Size and Type of Casing<br><u>SCM 40 RUSH JOINT</u>  |  | Water Elevation              |             | First  |          | Completion                                     |       | 24 Hrs                                 |                      |                 |  |
| Type of Perforation<br><u>20 SLOT</u>                |  | From<br><u>65.5</u>          |             | To<br><u>66</u>                              |          | (F-BGS)  |       | Pack See mt. Type<br><u>NATIVE</u>     |                      | From To (F-BGS) |  |
| Type of Seal<br><u>CEMENTITE GRANKLES</u>            |  | From<br><u>49</u>            |             | To<br><u>59</u>                              |          | (F-BGS)  |       | Hydrogeologist<br><u>G. S. STOLLAR</u> |                      | Checked By/Date |  |

| Depth<br>(feet) | Description  | Lithology | Piezometer<br>Installation | Water<br>Content | Estimate<br>% of |    |    | Gravel<br>% of | Remarks<br>(Drill Rate, Etc.,<br>Sample No., etc.) |
|-----------------|--|-----------|----------------------------|------------------|------------------|----|----|----------------|--|
|                 |  |           |                            |                  | GR               | SA | FI |                |  |
| 5               | CLAYEY SILTY SAND<br>YELLOW-BRN.; POORLY SORTED;<br>SUBANGULAR; DRY TO MOIST;<br>W/SOME CALICHE @ 6'00"<br>W/SOME GRAVEL LENSES @ 18-20'<br>+ 36-37'; ROOTS NEAR SURFACE |           |                            |                  |                  | 5  | 00 | 15             | EASY<br>DRILLING<br>NO OBDS                        |
| 10              |  |           |                            |                  |                  |    |    |                |  |
| 15              |  |           |                            |                  |                  |    |    |                |  |
| 20              |  |           |                            |                  |                  |    |    |                |  |
| 25              |  |           |                            |                  |                  |    |    |                |  |
| 30              |  |           |                            |                  |                  |    |    |                |  |
| 35              |  |           |                            |                  |                  |    |    |                |  |

FORM 12

Page 1 of 2

R. L. STOLLAR & ASSOCIATES, INC.  
WELL LOG (Continued)

Project No.

Well/Boring No. 33087

| Depth<br>(feet) | Description  | USCS<br>Symbol | Lithology | Piezometer<br>Installation | Well<br>Content | Estimate<br>% of |    |    | Remarks<br>(Drill Rate, Color,<br>Sample No., etc.) |
|-----------------|--|----------------|-----------|----------------------------|-----------------|------------------|----|----|---|
|                 |  |                |           |                            |                 | GR               | SA | FI |   |
| 37'             | CLAY ; BROWN ; VERY<br>PLASTIC ; MOIST   | CL             |           |                            |                 |                  | 5  | 95 | TIGHT<br>FILLING                                    |
| 40              |  |                |           |                            |                 |                  |    |    |   |
| 45              |  |                |           |                            |                 |                  |    |    |   |
| 50              |  |                |           |                            |                 |                  |    |    |   |
| 55              | GRAVELLY COARSE SAND - WET;<br>SUBANGULAR; POOR SORT<br>LT. TAN BROWN; SOME S&T<br>W/SOME FINE SANDS & COBBLES | SP             |           |                            |                 | 15               | 80 | 5  |   |
| 60              |  |                |           |                            |                 |                  |    |    |   |
| 65              |  |                |           |                            |                 |                  |    |    |   |
| 70              |  |                |           |                            |                 |                  |    |    |   |
| 75              |  |                |           |                            |                 |                  |    |    |   |

FORM 172

Page 2 of 2

APPENDIX D. SOLUTE CONCENTRATIONS IN WATER SAMPLES



ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
INJECTION WELL

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| I1     | 0.12         | 59.50           | 0.44         | 1.5          |
| I2     | 0.95         | 62.10           |              |              |
| I3     | 1.40         | 49.76           |              |              |
| I4     | 1.70         | 53.50           |              |              |
| I5     | 2.65         | 60.60           |              |              |
| I6     | 2.75         |                 |              |              |
| I7     | 3.47         | 60.50           |              |              |
| I8     | 5.20         | 57.90           |              |              |
| I9     | 6.35         | 59.40           |              |              |
| I10    | 7.22         | 61.12           |              |              |
| I11    | 7.77         | 54.30           |              |              |
| I12    | 9.00         | 15.60           |              |              |
| I13    | 10.00        | 56.10           |              |              |
| I14    | 10.35        | 57.70           |              |              |
| I15    | 11.33        | 55.20           |              |              |
| I16    | 13.17        | 65.00           |              |              |
| I17    | 14.77        | 62.40           |              |              |
| I18    | 16.90        | 59.80           |              |              |
| I19    | 18.4         |                 |              |              |
| I20    | 19.40        | 70.50           |              |              |
| I21    | 20.50        | 61.20           | 0.32         | 1.42         |
| I22    | 21.66        |                 |              |              |
| I23    | 22.2         |                 |              |              |
| I24    | 23.00        | 67.40           |              |              |
| I25    | 23.30        |                 |              |              |
| I26    | 24.30        | 80.60           |              |              |
| I27    | 25.50        | 90.00           |              |              |
| I28    | 26.50        | 70.40           |              |              |
| I29    | 27.20        | 69.02           |              |              |
| I30    | 27.60        | 0.85            |              |              |
| I31    | 28.40        | 1.08            |              |              |
| I32    | 29.35        |                 |              |              |
| I34    | 31.80        | 2.53            |              |              |
| I35    | 33.80        | 2.78            |              |              |
| I36    | 35.90        |                 |              |              |
| I37    | 37.00        |                 |              |              |
| I38    | 38.40        | 4.74            |              |              |
| I39    | 39.50        |                 | 0.15         | 1.17         |
| I40    | 40.50        |                 |              |              |
| I41    | 41.60        |                 |              |              |
| I42    | 42.70        | 6.44            |              |              |
| I43    | 43.8         |                 |              |              |
| I44    | 44.8         |                 |              |              |
| I45    | 45.80        | 7.41            |              |              |
| I46    | 46.8         |                 |              |              |
| I47    | 47.80        | 8.90            |              |              |
| I48    | 48.9         |                 |              |              |
| I49    | 49.90        | 10.00           |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
INJECTION WELL

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| I50    | 50.90        | 10.50           |              |              |
| I51    | 51.90        | 9.90            |              |              |
| I52    | 53.10        | 10.40           | 0.6          | 1.01         |
| I53    | 53.90        | 11.19           |              |              |
| I54    | 54.90        | 11.50           |              |              |
| I55    | 55.90        | 11.70           |              |              |
| I56    | 56.83        |                 |              |              |
| I57    | 58.00        | 10.90           |              |              |
| I58    | 59           |                 |              |              |
| I59    | 60.00        | 10.60           |              |              |
| I60    | 61.3         |                 |              |              |
| I61    | 62.30        | 10.20           |              |              |
| I62    | 63.50        | 10.20           |              |              |
| I63    | 64.56        |                 |              |              |
| I64    | 65.60        | 9.20            |              |              |
| I65    | 66.53        |                 |              |              |
| I66    | 67.40        | 8.86            |              |              |
| I67    | 68.33        |                 |              |              |
| I68    | 69.30        | 8.38            |              |              |
| I69    | 70.35        |                 |              |              |
| I70    | 71.40        | 7.50            |              |              |
| I71    | 72.38        |                 |              |              |
| I72    | 73.30        | 7.00            |              |              |
| I73    | 74.33        |                 |              |              |
| I74    | 75.50        | 6.70            |              |              |
| I75    | 76.58        |                 |              |              |
| I76    | 77.60        | 5.30            |              |              |
| I77    | 78.6         |                 |              |              |
| I78    | 79.60        | 5.85            |              |              |
| I79    | 80.71        |                 | 0            | 0.86         |
| I80    | 82.10        | 4.62            |              |              |
| I81    | 84.16        |                 |              |              |
| I82    | 86.35        |                 |              |              |
| I83    | 88.40        | 3.65            |              |              |
| I84    | 90.41        |                 |              |              |
| I85    | 92.30        | 3.61            |              |              |
| I86    | 94.38        |                 |              |              |
| I87    | 96.30        | 3.30            |              |              |
| I88    | 98.35        |                 |              |              |
| I89    | 100.30       | 3.30            | 0            | 0.79         |
| I90    | 104.43       |                 |              |              |
| I91    | 108.60       | 2.46            |              |              |
| I92    | 112.5        |                 |              |              |
| I93    | 116.50       | 1.95            |              |              |
| I94    | 120.33       |                 | 0            | 0.82         |
| I95    | 124.30       | 1.70            |              |              |
| I96    | 129.00       | 1.40            |              |              |
| I97    | 133          |                 |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
INJECTION WELL

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| I98    | 137.10       | 1.30            |              |              |
| I99    | 141.13       |                 | 0            | 0.77         |
| I100   | 145.10       | 1.10            |              |              |
| I101   | 149.13       |                 |              |              |
| I102   | 153.10       | 0.94            |              |              |
| I103   | 157.10       | 0.90            |              |              |
| I104   | 161.20       | 0.80            | 0            | 0.75         |
| I105   | 165.75       |                 |              |              |
| I106   | 171.40       | 0.70            |              |              |
| I107   | 175.43       |                 |              |              |
| I108   | 179.58       |                 |              |              |
| I109   | 183.4        |                 |              |              |
| I110   | 187.58       | 0.71            |              |              |
| I111   | 191.88       |                 |              |              |
| I112   | 195.5        |                 |              |              |
| I113   | 199.71       |                 |              |              |
| I114   | 204.35       |                 | 0            | 0.7          |
| I115   | 208.25       |                 |              |              |
| I116   | 212.36       |                 |              |              |
| I117   | 216.61       | 0.46            |              |              |
| I118   | 220.58       |                 |              |              |
| I119   | 224.2        |                 | 0            | 0.69         |
| I120   | 230.13       |                 |              |              |
| I121   | 236.35       | 0.38            |              |              |
| I122   | 242.38       | 0.34            |              |              |
| I123   | 254.40       | 0.30            |              |              |
| I124   | 266.3        |                 | 0            | 0.79         |
| I125   | 278.45       |                 |              |              |
| I126   | 290.26       |                 |              |              |
| I127   | 302.2        |                 | 0            | 0.58         |
| I128   | 315.85       |                 |              |              |
| I129   | 332.63       |                 |              |              |
| I130   | 357.66       |                 | 0.07         | 0.92         |
| I131   | 405.83       |                 | 0            | 0.53         |
| I132   | 431.83       |                 | 0.25         | 1.14         |
| I133   | 477.55       |                 |              |              |
| I134   | 501.96       |                 |              |              |
| I135   | 535.26       |                 |              |              |
| I136   | 630.18       |                 | 0            | 0.47         |
| I137-A | 652.65       |                 | 1            | 1            |
| I137   | 652.65       |                 | 0.01         | 0            |
| I138   | 701.45       |                 |              |              |
| I139   | 769.05       |                 | 0            | 0.45         |
| I140   | 821.50       |                 |              |              |
| I141   | 864.90       |                 |              |              |
| I142   | 944.70       |                 | 0            | 0.47         |
| I143   | 991.70       |                 |              |              |
| I144   | 1033.40      |                 |              |              |
| I145   | 1104.00      |                 | 0            | 0.41         |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
DRIVE POINT A

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| A1     | 1.37         |                 | 37.306       | 44.513       |
| A2     | 3.90         | 0.01            |              |              |
| A3     | 7.40         | 0.01            | 34.134       | 40.79        |
| A4     | 8.57         |                 |              |              |
| A5     | 10.60        | 0.54            |              |              |
| A5     | 10.6         |                 | 35.494       | 42.5         |
| A6     | 12.55        |                 | 32.801       | 40.886       |
| A7     | 14.90        | 7.37            |              |              |
| A8     | 17.1         | 11.83           | 28.557       | 36.03        |
| A9     | 18.30        | 13.9            |              |              |
| A10    | 19.50        | 21.4            |              |              |
| A11    | 20.60        | 19.6            | 24.727       | 33.009       |
| A12    | 21.75        | 21.8            |              |              |
| A13    | 23.20        | 25.67           |              |              |
| A14    | 24.4         | 27.4            | 17.879       | 25.194       |
| A15    | 25.50        | 32.26           |              |              |
| A16    | 26.50        | 38              |              |              |
| A17    | 28.30        | 36.96           | 13.585       | 18.89        |
| A18    | 29.50        | 39.9            | 11.768       | 16.791       |
| A19    | 31.80        | 44.6            |              |              |
| A20    | 33.90        | 46.6            | 6.494        | 9.799        |
| A22    | 37.1         |                 | 6.614        | 10.044       |
| A23    | 38.40        | 49.8            |              |              |
| A24    | 39.60        |                 | 5.324        | 7.993        |
| A25    | 40.80        |                 |              |              |
| A26    | 42.10        | 51.7            |              |              |
| A27    | 42.90        | 45.8            |              |              |
| A28    | 44.2         | 50.5            | 3.835        | 5.4          |
| A29    | 45.20        |                 |              |              |
| A30    | 46.2         | 46.8            | 3.261        | 4.597        |
| A31    | 47.20        | 47.3            |              |              |
| A32    | 48.3         | 44.6            | 3.324        | 4.771        |
| A33    | 49.30        | 45.3            |              |              |
| A34    | 50.30        | 42.5            | 2.487        | 3.867        |
| A35    | 51.40        | 40.7            |              |              |
| A36    | 52.50        | 36.6            | 2.776        | 4.224        |
| A37    | 53.50        |                 |              |              |
| A38    | 54.60        | 36.93           | 2.51         | 4.093        |
| A39    | 55.40        | 34.34           |              |              |
| A40    | 56.80        | 26.4            | 2.465        | 3.995        |
| A41    | 57.60        | 23.6            |              |              |
| A42    | 58.60        | 24.2            |              |              |
| A43    | 59.70        | 21.15           |              |              |
| A44    | 60.93        |                 | 1.814        | 3.022        |
| A45    | 61.80        | 16.6            |              |              |
| A46    | 62.80        | 15.6            | 1.806        | 2.988        |
| A47    | 63.90        | 14.2            |              |              |
| A48    | 64.80        | 12.9            | 1.799        | 2.918        |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
DRIVE POINT A

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| A49    | 65.70        | 10.9            |              |              |
| A50    | 66.80        | 11.7            |              |              |
| A51    | 67.64        | 11.2            | 1.463        | 2.54         |
| A52    | 68.70        | 11              |              |              |
| A53    | 69.70        | 10.9            |              |              |
| A54    | 70.90        | 10.9            | 1.789        | 3.1          |
| A55    | 71.90        | 9.1             |              |              |
| A56    | 72.90        | 10.5            | 1.416        | 2.559        |
| A57    | 73.90        | 10.3            |              |              |
| A58    | 75.10        | 10.2            |              |              |
| A59    | 76.50        | 9.1             |              |              |
| A60    | 77.30        | 9.1             | 2.361        | 3.888        |
| A61    | 78.50        | 10.6            |              |              |
| A62    | 79.40        | 10.3            | 2.323        | 3.799        |
| A63    | 80.40        | 10.6            |              |              |
| A64    | 82.33        |                 | 2.761        | 4.548        |
| A65    | 84.60        | 9               |              |              |
| A66    | 86.38        |                 | 2.123        | 3.661        |
| A67    | 88.30        | 9.1             |              |              |
| A68    | 90.38        |                 | 2.141        | 3.61         |
| A69    | 92.40        | 9.1             |              |              |
| A70    | 94.48        |                 |              |              |
| A71    | 96.50        | 8.28            | 2.151        | 3.609        |
| A72    | 98.53        |                 |              |              |
| A73    | 100.60       | 7.7             | 2.136        | 3.517        |
| A74    | 104.80       | 6.8             |              |              |
| A75    | 108.50       | 5.5             | 1.757        | 3.044        |
| A76    | 112.70       | 4.7             |              |              |
| A77    | 116.90       | 3.99            | 2.402        | 3.648        |
| A78    | 120.30       | 3.83            |              |              |
| A79    | 124.30       | 3.4             | 2.503        | 3.771        |
| A80    | 129.10       | 2.8             |              |              |
| A81    | 133.00       | 2.3             | 2.763        | 4.045        |
| A82    | 137.20       | 2.3             |              |              |
| A83    | 140.90       | 2.1             | 2.652        | 3.86         |
| A84    | 144.60       | 2.1             |              |              |
| A85    | 148.70       | 1.8             | 2.76         | 4.173        |
| A86    | 152.70       | 1.6             |              |              |
| A87    | 156.70       | 1.7             | 2.934        | 4.55         |
| A88    | 160.70       | 1.6             |              |              |
| A89    | 165.81       |                 | 3.332        | 5.007        |
| A90    | 171.50       | 1.2             |              |              |
| A91    | 175.55       |                 | 3.483        | 5.236        |
| A92-A  | 179.80       | 1.1             | 2.7          | 3.8          |
| A93    | 183.65       |                 | 3.715        | 5.487        |
| A94-A  | 187.40       | 0.95            | 2.7          | 3.9          |
| A95    | 191.36       |                 |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
 DRIVE POINT A

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| A96    | 195.13       |                 | 3.508        | 5.238        |
| A97    | 199.36       | 0.77            |              |              |
| A98    | 204.41       |                 |              |              |
| A99    | 208.45       | 0.67            | 5.2          | 8.2          |
| A100   | 212.55       |                 |              |              |
| A101   | 216.71       | 0.62            | 3.933        | 6.137        |
| A102   | 220.56       |                 |              |              |
| A103   | 224.23       | 0.6             | 3.947        | 6.059        |
| A104   | 230.31       |                 |              |              |
| A105   | 236.58       | 0.49            |              |              |
| A106   | 242.53       | 0.41            | 4.263        | 6.512        |
| A107   | 254.56       | 0.36            | 4.286        | 6.708        |
| A108   | 266.46       |                 |              |              |
| A109   | 278.63       |                 | 4.5          | 8.2          |
| A110   | 290.35       | 0.1             |              |              |
| A111   | 302.28       |                 | 10.336       | 14.636       |
| A112   | 315.96       |                 |              |              |
| A113   | 326.25       |                 |              |              |
| A114   | 342.33       | 0.07            | 4.865        | 7.306        |
| A115   | 357.81       |                 | 4.41         | 7.12         |
| A116   | 388.33       |                 |              |              |
| A117   | 406.00       |                 | 9.1          | 13.7         |
| A118   | 429.91       |                 |              |              |
| A119   | 477.53       |                 | 12.078       | 17.93        |
| A120   | 502.05       |                 |              |              |
| A121   | 535.30       |                 | 12.953       | 18.385       |
| A122   | 607.91       |                 | 36.758       | 44.381       |
| A123   | 630.16       |                 | 38.102       | 48.688       |
| A124-A | 652.41       |                 | 17.6         | 37.8         |
| A124   | 652.41       |                 | 25.998       | 35.527       |
| A125   | 944.75       |                 |              |              |
| A126   | 769.05       |                 |              |              |
| A127   | 821.50       |                 |              |              |
| A128   | 864.90       |                 |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
 DRIVE POINT B

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| B1     | 1.63         |                 | 44.21        | 50.46        |
| B2     | 4.00         | 0.01            |              |              |
| B3     | 6.5          |                 | 42.41        | 47.23        |
| B4     | 8.68         |                 |              |              |
| B5     | 10.80        | 0.01            |              |              |
| B6     | 13.4         |                 | 37.77        | 42.7         |
| B7     | 15.40        | 0.01            |              |              |
| B8     | 18.40        | 0.02            | 49.35        | 56.00        |
| B9     | 21.91        |                 |              |              |
| B10    | 24.00        | 0.02            |              |              |
| B11    | 26.06        |                 |              |              |
| B12    | 29           |                 | 39.96        | 44.82        |
| B13    | 31.90        | 0.15            |              |              |
| B14    | 34.05        | 0.2             |              |              |
| B15    | 37.31        |                 |              |              |
| B16    | 38.55        |                 | 42.09        | 47.55        |
| B17    | 40.93        |                 |              |              |
| B18    | 42.83        |                 | 39.86        | 46.41        |
| B19    | 44.80        | 0.3             |              |              |
| B20    | 46.86        |                 |              |              |
| B21    | 49           |                 | 38.81        | 45.77        |
| B22    | 51.03        |                 |              |              |
| B23    | 53.30        | 0.3             |              |              |
| B24    | 54.83        |                 |              |              |
| B25    | 57.03        |                 | 41.83        | 48.11        |
| B26    | 58.95        |                 |              |              |
| B27    | 61.05        |                 |              |              |
| B28    | 63.30        | 0.2             | 40.57        | 46.43        |
| B29    | 65.35        |                 |              |              |
| B30    | 67.30        | 0.13            |              |              |
| B31    | 69.30        | 0.14            | 36.98        | 43.28        |
| B32    | 71.35        |                 |              |              |
| B33    | 73.41        |                 |              |              |
| B34    | 75.66        |                 | 36.9         | 43.96        |
| B35    | 77.50        | 0.1             |              |              |
| B36    | 79.98        |                 |              |              |
| B37    | 83.70        | 0.1             |              |              |
| B38    | 87.35        |                 | 37.79        | 42.97        |
| B39    | 91.35        |                 |              |              |
| B40    | 95.40        | 0.06            | 37.49        | 43.94        |
| B41    | 99.56        |                 |              |              |
| B42    | 103.70       | 0.04            |              |              |
| B43    | 107.56       |                 | 40.52        | 47.82        |
| B44    | 111.43       |                 |              |              |
| B45    | 115.41       |                 |              |              |
| B46    | 118.40       | 0.02            |              |              |
| B47    | 120.50       | 0.03            | 29.51        | 18.86        |
| B48    | 124.83       |                 |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
DRIVE POINT B

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| B49    | 129.20       | 0.02            |              |              |
| B50    | 133.18       |                 |              |              |
| B51    | 137.30       | 0.02            |              |              |
| B52    | 141.08       |                 | 39.73        | 45.62        |
| B53    | 144.80       | 0.02            |              |              |
| B54    | 148.81       |                 |              |              |
| B55    | 152.90       | 0.02            |              |              |
| B56    | 156.80       | 0.02            |              |              |
| B57    | 160.90       | 0.01            | 40.63        | 46.46        |
| B58    | 165.93       |                 |              |              |
| B59    | 171.60       | 0.01            |              |              |
| B60    | 175.65       |                 |              |              |
| B61-A  | 179.90       | 0.01            | 28.20        | 32.20        |
| B62    | 183.8        |                 | 41.1         | 48.89        |
| B63-A  | 187.60       | 0.01            | 30.10        | 34.80        |
| B64    | 191.51       |                 |              |              |
| B65    | 195.23       |                 |              |              |
| B66    | 199.48       |                 |              |              |
| B67    | 204.53       |                 | 39.12        | 45.8         |
| B68    | 208.58       |                 |              |              |
| B69    | 212.66       |                 |              |              |
| B70    | 216.83       | 0.01            |              |              |
| B71    | 220.7        |                 | 40.7         | 47.75        |
| B72    | 222.36       | 0.01            |              |              |
| B73    | 230.41       |                 |              |              |
| B74    | 236.68       | 0.01            |              |              |
| B75    | 242.63       | 0.01            | 41.07        | 47.46        |
| B76    | 248.20       | 0.01            |              |              |
| B77    | 254.70       | 0               |              |              |
| B78    | 260.98       | 0.02            |              |              |
| B79    | 266.55       |                 |              |              |
| B80    | 272.36       | 0.01            |              |              |
| B81    | 278.75       |                 | 39.59        | 47.41        |
| B82    | 284.53       | 0.01            |              |              |
| B83    | 290.48       | 0.01            |              |              |
| B84    | 296.7        |                 |              |              |
| B85    | 302.4        |                 | 40.54        | 48.01        |
| B86    | 308.3        |                 | 41.45        | 48.2         |
| B87-A  | 316.08       | 0.01            | 21.40        | 42.20        |
| B87    | 316.08       |                 | 40.17        | 47.96        |
| B88    | 320.68       |                 | 41.38        | 49.91        |
| B89    | 326.36       | 0.01            | 41.75        | 49.26        |
| B90-A  | 332.5        |                 | 22.7         | 48.8         |
| B91    | 342.46       |                 | 41.12        | 47.4         |
| B92    | 357.93       |                 | 41           | 48.79        |
| B93    | 388.33       |                 | 42.69        | 50.64        |
| B94    | 406.33       |                 | 40.54        | 48.27        |
| B95    | 432.16       |                 | 43.22        | 52.03        |



ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
 DRIVE POINT B

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| B96    | 477.65       |                 |              |              |
| B97    | 502.16       |                 |              |              |
| B98    | 535.53       |                 | 38.775       | 48.572       |
| B99    | 607.96       |                 | 41.18        | 46.85        |
| B100   | 630.28       |                 | 40.952       | 50.102       |
| B101-A | 652.55       |                 | 22.40        | 47.20        |
| B102   | 701.45       |                 | 40.16        | 47.78        |
| B103   | 769.10       |                 | 39.25        | 46.69        |
| B104   | 797.45       |                 | 39.56        | 47.12        |
| B105   | 821.47       |                 |              |              |
| B106   | 864.90       |                 | 38.78        | 46.57        |
| B107   | 945.00       |                 | 38.97        | 46.10        |
| B108   | 991.70       |                 | 39.06        | 46.48        |
| B109   | 1033.40      |                 | 41.00        | 49.88        |
| B110   | 1104.8       |                 | 39.68        | 49.35        |
| B111   | 1179.2       |                 | 40.54        | 49.32        |
| B112   | 1213         |                 | 35.82        | 43.71        |
| B113   | 1216.77      |                 | 36.85        | 50.03        |
| B114   | 1222.3       |                 | 40.94        | 49.06        |
| B115   | 1225.5       |                 | 42.11        | 51.23        |
| B116   | 1228.2       |                 | 44.18        | 53.15        |
| B117   | 1231.4       |                 | 40.37        | 49.57        |
| B118   | 1234.7       |                 | 37.06        | 45.83        |
| B119   | 1236         |                 | 36.52        | 44.36        |
| B120   | 1237         |                 | 33.46        | 40.48        |
| B121   | 1238.1       |                 | 31.64        | 38.81        |
| B122   | 1239.5       |                 |              |              |
| B123   | 1240.9       |                 | 34.57        | 41.51        |
| B124   | 1242.8       |                 |              |              |
| B125   | 1244.7       |                 | 33.67        | 39.74        |
| B125   | 1244.7       |                 |              |              |
| B126   | 1247.3       |                 | 31.97        | 37.9         |
| B127   | 1249.5       |                 | 32.76        | 40.16        |
| B128   | 1251.5       |                 | 33.82        | 40.72        |
| B129   | 1254.1       |                 | 34.96        | 43.37        |
| B130   | 1257.3       |                 | 33.26        | 44.78        |
| B131   | 1260.8       |                 | 32.91        | 39.77        |
| B132   | 1263.9       |                 | 32.75        | 39.56        |
| B133   | 1266.43      |                 | 31.5         | 37.46        |
| B134   | 1270.95      |                 |              |              |
| B135   | 1274.1       |                 |              |              |
| B136   | 1276         |                 | 33.19        | 39.78        |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
DRIVE POINT C

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| C1     | 2.1          |                 | 30.74        | 25.99        |
| C2     | 4.15         | 0.02            |              |              |
| C3     | 6.63         |                 | 33.08        | 27.85        |
| C4     | 8.8          |                 |              |              |
| C5     | 10.90        | 0.01            |              |              |
| C6     | 13.5         |                 | 31.33        | 26.59        |
| C7     | 15.50        | 0.04            |              |              |
| C8     | 18.50        | 0.01            | 32.18        | 27.22        |
| C9     | 22.08        |                 |              |              |
| C10    | 24.20        | 0.01            | 34.69        | 29.59        |
| C11    | 26.2         |                 |              |              |
| C12    | 29.76        |                 |              |              |
| C13    | 32.00        | 0.01            | 34.46        | 29.36        |
| C14    | 37.33        |                 | 30.62        | 27.32        |
| C15    | 39.78        |                 |              |              |
| C16    | 42.25        |                 | 32.73        | 28.76        |
| C17    | 44.60        | 0.01            |              |              |
| C18    | 46.58        |                 |              |              |
| C19    | 48.58        |                 | 33.82        | 29.51        |
| C20    | 50.63        |                 |              |              |
| C21    | 53.03        |                 | 32.81        | 29.31        |
| C22    | 54.46        |                 |              |              |
| C23    | 56.60        | 0.03            | 34.26        | 30.07        |
| C24    | 58.73        |                 |              |              |
| C25    | 61.16        |                 | 35.95        | 32.39        |
| C26    | 63.4         |                 |              |              |
| C27    | 65.5         |                 | 32.42        | 29.08        |
| C28    | 67.40        | 0.02            |              |              |
| C29    | 69.50        | 0.02            | 33.58        | 30.38        |
| C30    | 71.51        |                 |              |              |
| C31    | 73.56        |                 | 31.39        | 28.89        |
| C32    | 75.86        |                 |              |              |
| C33    | 77.80        | 0.02            | 34.19        | 31.44        |
| C34    | 79.8         |                 |              |              |
| C35    | 83.53        |                 | 33.41        | 31.1         |
| C36    | 87.20        | 0.01            |              |              |
| C37    | 91.2         |                 | 33.56        | 32.06        |
| C38    | 95.30        | 0.04            |              |              |
| C39    | 99.48        |                 | 33.34        | 31.96        |
| C40    | 103.60       | 0.08            |              |              |
| C41    | 107.45       |                 | 33.88        | 33.26        |
| C42    | 111.55       |                 |              |              |
| C43    | 115.50       | 0.24            | 34.92        | 34.21        |
| C44    | 118.5        |                 |              |              |
| C45    | 120.80       | 0.62            | 34.07        | 33.48        |
| C46    | 125.00       | 1.22            |              |              |
| C47    | 129.30       | 1.64            | 32.81        | 31.74        |
| C48    | 133.30       | 2               |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
 DRIVE POINT C

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| C49    | 137.40       | 2.3             | 30.80        | 30.33        |
| C50    | 141.20       | 2.7             |              |              |
| C51    | 144.90       | 3.2             | 29.39        | 28.66        |
| C52    | 148.90       | 3.96            |              |              |
| C53    | 153.00       | 4.8             | 25.06        | 24.65        |
| C54    | 156.90       | 4.9             |              |              |
| C55    | 161.00       | 5.3             | 21.40        | 20.8         |
| C56    | 166.00       | 5.24            |              |              |
| C57    | 170.00       | 5.6             |              |              |
| C58    | 171.80       | 5.8             |              |              |
| C59-A  | 175.70       |                 | 12.20        | 11.1         |
| C60    | 180.10       | 5.7             | 13.68        | 13.57        |
| C61    | 183.91       |                 |              |              |
| C62-A  | 187.80       | 5.38            | 9.40         | 8.4          |
| C62    | 187.8        |                 | 10.62        | 10.42        |
| C63    | 191.7        |                 |              |              |
| C64    | 195.30       | 4.3             | 7.73         | 7.89         |
| C65    | 199.55       | 4.51            |              |              |
| C66    | 204.63       |                 | 7.45         | 7.64         |
| C67    | 208.60       | 3.89            |              |              |
| C68    | 212.75       |                 | 6.43         | 6.64         |
| C69    | 216.80       | 3.3             |              |              |
| C70    | 220.8        |                 | 5.36         | 5.64         |
| C71    | 224.46       | 2.88            |              |              |
| C72    | 230.55       |                 | 4.76         | 4.96         |
| C73    | 236.80       | 2.38            |              |              |
| C74    | 242.80       | 1.96            | 3.96         | 4.25         |
| C75    | 248.30       | 1.82            |              |              |
| C76    | 254.80       | 1.66            | 3.34         | 3.61         |
| C77    | 261.10       | 1.62            |              |              |
| C78    | 266.68       | 1.57            | 2.75         | 3.08         |
| C79    | 272.46       |                 |              |              |
| C80    | 278.88       |                 | 2.44         | 2.71         |
| C81    | 284.63       | 1.21            |              |              |
| C82    | 290.58       |                 | 2.01         | 2.43         |
| C83    | 296.85       |                 |              |              |
| C84    | 302.51       |                 | 2.1          | 2.49         |
| C85    | 308.43       |                 |              |              |
| C86-A  | 316.21       |                 | 2.00         | 2.5          |
| C86    | 316.21       |                 | 3.23         | 3.56         |
| C87    | 320.8        |                 |              |              |
| C88    | 326.50       | 1.28            |              |              |
| C89-A  | 332.58       |                 | 1.30         | 2.3          |
| C90    | 342.56       | 0.47            | 1.81         | 2.19         |
| C91    | 358.01       |                 |              |              |
| C92    | 388.33       | 0.19            |              |              |
| C93    | 406.33       |                 | 1.07         | 1.39         |
| C94    | 432.25       | 0.12            |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
 DRIVE POINT C

| SAMPLE     | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|------------|--------------|-----------------|--------------|--------------|
| C95        | 477.73       |                 |              |              |
| C96        | 502.26       | 0.16            | 1.36         | 1.62         |
| C97        | 535.65       |                 | 1.82         | 2.04         |
| C98        | 608.06       | 0.09            | 1.091        | 1.181        |
| C99        | 630.4        |                 | 1.125        | 1.206        |
| C99        | 630.4        |                 | 0.89         | 1.36         |
| C100-A     | 652.66       |                 | 1.00         | 1            |
| C99 (MISL) | 652.66       |                 | 0.98         | 1.103        |
| C100       | 701.45       | 0.07            |              |              |
| C101       | 769.05       |                 |              |              |
| C102       | 821.50       | 0               |              |              |
| C103       | 864.90       | 0               |              |              |
| C104       | 945.10       |                 |              |              |
| C105       | 991.9        |                 |              |              |
| C106       | 1033.4       | 0               |              |              |
| C107       | 1104.96      | 0               |              |              |
| C108       | 652.66       |                 |              |              |
| C109       | 1179.3       | 0               |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
 DRIVE POINT D

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| D1     | 2.18         |                 | 26.01        | 17.02        |
| D2     | 4.30         | 0.41            |              |              |
| D3     | 6.70         | 0.34            | 23.67        | 15.41        |
| D4     | 8.90         | 0.33            |              |              |
| D5     | 11           | 0.3             | 25.22        | 16.21        |
| D6     | 12.67        |                 |              |              |
| D7     | 15.7         | 0.33            | 23.76        | 15.47        |
| D8     | 17.18        |                 |              |              |
| D9     | 18.65        |                 |              |              |
| D10    | 19.60        | 0.34            | 22.09        | 14.28        |
| D11    | 20.71        |                 |              |              |
| D12    | 22.10        | 0.3             | 22.94        | 15.26        |
| D13    | 23.31        |                 |              |              |
| D14    | 24.60        | 0.3             |              |              |
| D15    | 25.61        |                 |              |              |
| D16    | 26.70        | 0.29            | 24.58        | 16.05        |
| D17    | 29.60        | 0.28            |              |              |
| D18    | 32.30        | 0.28            |              |              |
| D19    | 34.20        | 0.31            | 23.35        | 15.08        |
| D20    | 37.5         |                 |              |              |
| D21    | 39.88        |                 |              |              |
| D22    | 42.30        | 0.24            | 25.20        | 16.16        |
| D23    | 44.70        | 0.21            |              |              |
| D24    | 46.68        |                 |              |              |
| D25    | 48.75        |                 | 26.35        | 17.1         |
| D26    | 50.70        | 0.22            |              |              |
| D27    | 53.11        |                 |              |              |
| D28    | 54.68        |                 |              |              |
| D29    | 56.88        |                 | 26.6         | 17.11        |
| D30    | 58.81        |                 |              |              |
| D31    | 61.16        |                 |              |              |
| D32    | 63.50        | 0.26            | 25.02        | 15.81        |
| D33    | 65.6         |                 |              |              |
| D34    | 67.50        | 0.42            |              |              |
| D35    | 69.60        | 0.6             | 23.27        | 14.58        |
| D36    | 71.6         |                 |              |              |
| D37    | 73.66        |                 |              |              |
| D38    | 75.95        |                 | 23.2         | 15.3         |
| D39    | 78.00        | 1.6             |              |              |
| D40    | 80.13        |                 |              |              |
| D41    | 83.80        | 3.2             |              |              |
| D42    | 84.85        |                 | 23.02        | 14.47        |
| D43    | 87.80        | 4.06            |              |              |
| D44    | 89.81        |                 | 18.56        | 12.02        |
| D45    | 91.90        | 5.44            |              |              |
| D46    | 94.01        |                 | 21.55        | 13.85        |
| D47    | 96.00        | 6.3             |              |              |
| D48    | 98.00        | 5.97            | 20.62        | 12.99        |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
DRIVE POINT D

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| D49    | 100.03       |                 |              |              |
| D50    | 103.80       | 6.7             | 22.72        | 13.74        |
| D51    | 107.60       | 5.9             |              |              |
| D52    | 111.60       | 5.9             | 21.01        | 13.46        |
| D53    | 115.60       | 5.7             |              |              |
| D54    | 118.60       | 6.5             | 20.95        | 13.30        |
| D55    | 121.50       | 3.9             |              |              |
| D56    | 125.40       | 6.8             | 20.95        | 13.71        |
| D57    | 129.50       | 5.53            |              |              |
| D58    | 133.30       | 5.2             | 20.73        | 13.29        |
| D59    | 137.50       | 4.8             |              |              |
| D60    | 141.30       | 4.7             | 18.17        | 11.85        |
| D61    | 145.00       | 4.6             |              |              |
| D62    | 149.00       | 4.1             | 15.31        | 9.86         |
| D63    | 153.10       | 3.8             |              |              |
| D64    | 157.10       | 4.3             | 15.24        | 10.11        |
| D65    | 161.10       | 4.1             |              |              |
| D66    | 166.10       | 3.7             | 14.08        | 9.30         |
| D67    | 170.10       | 3.1             |              |              |
| D68    | 171.90       | 3               | 14.01        | 9.26         |
| D69-A  | 175.83       |                 | 10.00        | 5.70         |
| D70    | 180.20       | 2.92            | 14.57        | 9.66         |
| D71    | 184          |                 |              |              |
| D72-A  | 188.00       | 2.76            | 10.20        | 5.90         |
| D72    | 188          |                 | 11.51        | 7.69         |
| D73    | 191.8        |                 |              |              |
| D74    | 195.40       | 2               | 11.74        | 7.78         |
| D75    | 199.66       |                 |              |              |
| D76    | 204.71       |                 | 10.91        | 7.46         |
| D77    | 208.80       | 1.97            |              |              |
| D78    | 212.85       |                 | 10.43        | 7.26         |
| D79    | 217.01       | 1.8             |              |              |
| D80    | 220.9        |                 | 10.01        | 6.85         |
| D81    | 224.33       | 1.67            |              |              |
| D82    | 230.63       |                 | 8.82         | 6.17         |
| D83    | 236.83       | 1.5             |              |              |
| D84    | 242.88       | 1.32            | 8.36         | 5.87         |
| D85    | 248.33       | 1.15            |              |              |
| D86    | 254.91       | 1.21            | 8.50         | 5.99         |
| D87    | 261.23       | 1.2             |              |              |
| D88    | 266.78       |                 | 7.34         | 5.03         |
| D89    | 272.33       |                 |              |              |
| D90    | 278.98       |                 | 6.53         | 4.6          |
| D91    | 284.75       | 1.01            |              |              |
| D92    | 290.71       |                 | 5.76         | 4.17         |
| D93    | 296.91       |                 |              |              |
| D94    | 302.6        |                 | 5.48         | 4            |
| D95    | 308.5        | 0.49            |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
 DRIVE POINT D

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| D96-A  | 316.30       |                 | 2.90         | 3.50         |
| D97    | 320.86       |                 | 5.34         | 3.89         |
| D98    | 326.33       | 1.08            |              |              |
| D99-A  | 332.66       |                 | 4.00         | 4.70         |
| D99    | 332.66       |                 | 6.13         | 4.39         |
| D100   | 342.65       |                 |              |              |
| D101   | 358.13       | 0.29            | 5.2          | 3.79         |
| D102   | 388.33       |                 |              |              |
| D103   | 406.33       | 0.34            | 4.14         | 3.02         |
| D104   | 432.36       | 0.31            |              |              |
| D105   | 477.83       |                 |              |              |
| D106   | 502.35       | 0.15            |              |              |
| D107   | 535.7        |                 |              |              |
| D108   | 608.16       | 0.13            | 0.772        | 0.419        |
| D109   | 630.45       |                 |              |              |
| D110-A | 652.75       |                 | 1.00         | 1.00         |
| D110   | 652.75       | 0.1             | 0.37         | 0.17         |
| D111   | 864.9        | 0               |              |              |
| D112   | 701.4        | 0               |              |              |
| D113   | 945.2        |                 |              |              |
| D114   | 991.9        |                 |              |              |
| D115   | 1033.4       | 0               |              |              |
| D116   | 1105         |                 |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
FULLY PENETRATING MONITORING WELL

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| ML1    | 2.47         | 0.01            |              |              |
| MM1    | 2.83         | 0.02            |              |              |
| MU1    | 6.23         | 0.06            |              |              |
| M3     | 7.40         | 0.31            | 30.68        | 40.25        |
| M4     | 9.70         | 1.71            |              |              |
| M5     | 11.70        | 4.90            |              |              |
| M6     | 13.30        | 7.30            | 28.47        | 36.06        |
| M7     | 14.80        | 11.80           |              |              |
| M8     | 16.95        | 20.03           | 23.10        | 29.76        |
| M9     | 18.15        | 23.10           |              |              |
| M10    | 19.30        | 25.20           |              |              |
| M11    | 20.4         | 28.8            | 19.378       | 24.519       |
| M12    | 21.60        | 32.30           |              |              |
| M13    | 23.70        | 35.50           | 16.03        | 20.21        |
| M14    | 25.40        | 36.60           |              |              |
| M15    | 26.70        | 32.60           |              |              |
| M16    | 28.80        | 35.60           |              |              |
| M17    | 31.65        | 38.20           | 13.15        | 16.86        |
| M18    | 33.20        | 46.60           |              |              |
| M19    | 35.40        | 48.90           | 9.72         | 12.55        |
| M20    | 36.9         |                 |              |              |
| M21    | 38.80        | 33.05           |              |              |
| M22    | 40.30        | 41.70           | 7.33         | 9.49         |
| M23    | 42.00        | 32.80           |              |              |
| M24    | 43.50        | 29.60           | 8.93         | 11.69        |
| M25    | 45.10        | 18.90           |              |              |
| M26    | 46.20        | 22.20           | 10.40        | 13.18        |
| M27    | 47.50        | 18.10           |              |              |
| M28    | 49.00        | 17.52           |              |              |
| M29    | 50.20        | 15.76           |              |              |
| M30    | 51.40        | 16.30           |              |              |
| M31    | 52.70        | 14.40           | 10.44        | 13.53        |
| M32    | 54.10        | 15.55           |              |              |
| M33    | 55.30        | 15.68           | 7.87         | 10.27        |
| M34    | 56.20        | 14.57           |              |              |
| M35    | 57.50        | 13.90           |              |              |
| M36    | 58.40        | 11.49           |              |              |
| M37    | 59.70        | 11.90           | 9.76         | 12.54        |
| M38    | 60.80        | 10.20           |              |              |
| M39    | 61.80        | 10.10           |              |              |
| M40    | 63.00        | 9.20            |              |              |
| M41    | 64.00        | 10.70           | 8.76         | 11.30        |
| M42    | 65.00        | 10.50           |              |              |
| M43    | 66.20        | 8.80            | 9.89         | 12.86        |
| M44    | 67.10        | 9.70            |              |              |
| M45    | 67.9         | 8.8             | 9.111        | 11.898       |
| M46    | 69.00        | 9.70            |              |              |
| M47    | 70.40        | 8.80            | 8.12         | 10.30        |



ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
FULLY PENETRATING MONITORING WELL

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| M48    | 71.80        | 8.90            |              |              |
| M49    | 77.30        | 9.20            | 7.10         | 9.04         |
| M50    | 79.00        | 10.30           |              |              |
| M51    | 80.50        | 9.80            | 5.05         | 6.55         |
| M52    | 81.70        | 9.50            |              |              |
| M53    | 84           |                 | 3.987        | 5.35         |
| M54    | 86.80        | 6.61            |              |              |
| M55    | 89.1         |                 | 7.774        | 9.849        |
| M56    | 92.00        | 6.20            |              |              |
| M57    | 94.66        |                 | 6.097        | 7.939        |
| M58    | 96.70        | 5.94            |              |              |
| M59    | 99.33        |                 | 5.673        | 7.613        |
| M60    | 104.60       | 4.90            |              |              |
| M61    | 108.28       |                 | 4.916        | 7.084        |
| M62    | 112.43       |                 |              |              |
| M63    | 116.80       | 3.20            | 3.78         | 5.43         |
| M64    | 121.68       |                 |              |              |
| M65    | 125.50       | 2.40            | 9.60         | 12.65        |
| M66    | 129.60       | 2.10            |              |              |
| M67    | 133.63       |                 | 9.263        | 12.164       |
| M68    | 137.60       | 1.70            |              |              |
| M69    | 141.8        |                 | 9.391        | 12.612       |
| M70    | 145.30       | 1.30            |              |              |
| M71    | 149.33       |                 | 7.87         | 10.667       |
| M72    | 153.30       | 1.10            |              |              |
| M73    | 157.30       | 1.20            | 10.42        | 13.99        |
| M74    | 161.00       | 1.10            |              |              |
| M75    | 166.1        |                 |              |              |
| M76    | 171.80       | 0.80            | 10.72        | 14.40        |
| M77-A  | 175.70       |                 | 9.70         | 11.00        |
| M78    | 179.80       | 0.81            | 12.09        | 16.00        |
| M79    | 183.73       |                 |              |              |
| M80-A  | 187.66       | 0.71            | 10.30        | 11.40        |
| M80    | 187.66       |                 | 11.863       | 15.299       |
| M81    | 191.66       |                 |              |              |
| M82    | 195.63       |                 | 9.767        | 13.062       |
| M83    | 199.68       | 0.59            |              |              |
| M84    | 204.66       |                 | 11.501       | 14.895       |
| M85    | 208.55       |                 | 15.40        | 18.75        |
| M86    | 212.51       | 0.51            | 10.60        | 14.44        |
| M87    | 216.66       |                 |              |              |
| M88    | 220.85       |                 | 11.215       | 15.163       |
| M89    | 224.40       | 0.42            |              |              |
| M90    | 230.46       |                 | 11.106       | 14.568       |
| M91    | 236.55       | 0.38            |              |              |
| M92    | 242.58       | 0.31            | 11.22        | 14.92        |
| M93    | 254.60       | 0.27            |              |              |
| M94    | 266.61       |                 | 11.681       | 15.333       |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
FULLY PENETRATING MONITORING WELL

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| M95    | 278.68       |                 | 15.30        | 19.14        |
| M96    | 290.63       |                 | 10.985       | 15.12        |
| M97    | 302.46       |                 |              |              |
| M98    | 316.11       |                 | 11.792       | 15.72        |
| M99    | 326.33       |                 | 12.213       | 15.97        |
| M100   | 342.50       |                 | 13.90        | 17.25        |
| M101   | 357.95       |                 |              |              |
| M102   | 406.1        |                 | 12.548       | 16.83        |
| M103   | 432.08       |                 |              |              |
| M104   | 477.76       |                 |              |              |
| M105   | 502.23       |                 |              |              |
| M106   | 535.56       |                 | 13.18        | 17.79        |
| M107   | 608.03       |                 | 20.289       | 25.0915      |
| M108   | 630.31       |                 | 17.01        | 21.57        |
| M109-A | 652.70       |                 | 8.60         | 17.50        |
| M109   | 652.70       |                 | 15.14        | 19.52        |
| M110   | 701.50       |                 |              |              |
| M111   | 769.10       |                 |              |              |
| M112   | 821.50       |                 |              |              |
| M113   | 864.90       |                 |              |              |
| M114   | 944.90       |                 |              |              |
| M115   | 992.10       |                 |              |              |
| M116   | 1033.40      |                 |              |              |
| M117   | 1105.10      |                 |              |              |
| M118   | 1179.30      |                 |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
EXTRACTION WELL

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| S1     | 0.36         | 0.04            | 37.14        | 40.09        |
| S2     | 2.75         |                 |              |              |
| S3     | 6.40         | 0.05            |              |              |
| S4     | 10.4         |                 |              |              |
| S5     | 13.22        |                 |              |              |
| S6     | 14.80        | 0.08            |              |              |
| S7     | 16.93        |                 |              |              |
| S8     | 18.30        | 0.15            |              |              |
| S9     | 19.43        |                 |              |              |
| S10    | 20.6         |                 |              |              |
| S11    | 21.66        |                 |              |              |
| S12    | 22.2         |                 |              |              |
| S13    | 23.00        | 0.27            |              |              |
| S14    | 24.20        | 0.43            | 35.85        | 38.73        |
| S15    | 25.60        | 0.65            |              |              |
| S16    | 26.60        | 0.77            |              |              |
| S17    | 27.63        |                 |              |              |
| S18    | 28.47        | 1.22            |              |              |
| S19    | 29.35        | 1.57            |              |              |
| S21    | 31.70        | 2.3             |              |              |
| S22    | 33.80        | 2.91            |              |              |
| S23    | 35.9         |                 |              |              |
| S24    | 37.00        | 4.2             |              |              |
| S25    | 38.5         |                 |              |              |
| S26    | 39.60        | 4.99            | 31.47        | 34.33        |
| S27    | 40.6         |                 |              |              |
| S28    | 41.6         |                 |              |              |
| S29    | 42.70        | 6.28            |              |              |
| S30    | 43.8         |                 |              |              |
| S31    | 44.80        | 7               |              |              |
| S32    | 45.8         |                 |              |              |
| S33    | 46.9         |                 |              |              |
| S34    | 47.90        | 8.26            |              |              |
| S35    | 48.90        | 8.3             |              |              |
| S36    | 49.9         |                 |              |              |
| S37    | 50.90        | 9.58            |              |              |
| S38    | 51.90        | 9.4             |              |              |
| S39    | 53.10        | 9.72            |              |              |
| S40    | 53.90        | 11.07           |              |              |
| S41    | 54.90        | 10.98           |              |              |
| S42    | 56.00        | 11.16           |              |              |
| S43    | 56.83        |                 |              |              |
| S44    | 58.00        | 10.37           |              |              |
| S45    | 59           |                 |              |              |
| S46    | 60.31        |                 | 30.91        | 34.58        |
| S47    | 61.30        | 10.4            |              |              |
| S48    | 62.35        |                 |              |              |
| S49    | 63.60        | 9.52            |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
EXTRACTION WELL

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| S50    | 64.55        |                 |              |              |
| S51    | 65.60        | 9.1             |              |              |
| S52    | 66.51        |                 |              |              |
| S53    | 67.40        | 8.6             |              |              |
| S54    | 68.33        |                 |              |              |
| S55    | 69.40        | 8.2             |              |              |
| S56    | 70.4         |                 |              |              |
| S57    | 71.40        | 7.4             |              |              |
| S58    | 72.41        |                 |              |              |
| S59    | 73.40        | 6.7             |              |              |
| S60    | 74.41        |                 |              |              |
| S61    | 75.50        | 6.3             |              |              |
| S62    | 76.58        |                 |              |              |
| S63    | 77.70        | 5.6             |              |              |
| S64    | 78.68        |                 |              |              |
| S65    | 79.60        | 5.53            |              |              |
| S66    | 80.63        |                 | 29.2         | 32.65        |
| S67    | 82.20        | 5.1             |              |              |
| S68    | 84.50        | 3.91            |              |              |
| S69    | 86.35        |                 |              |              |
| S70    | 88.30        | 3.71            |              |              |
| S71    | 90.4         |                 |              |              |
| S72    | 92.30        | 3.41            |              |              |
| S73    | 94.38        |                 |              |              |
| S74    | 96.40        | 3.3             |              |              |
| S75    | 98.45        |                 |              |              |
| S76    | 100.50       | 3.1             | 27.04        | 30.75        |
| S77    | 104.51       |                 |              |              |
| S78    | 108.50       | 2.27            |              |              |
| S79    | 112.4        |                 |              |              |
| S80    | 116.40       | 1.92            |              |              |
| S81    | 120.60       | 1.19            |              |              |
| S82    | 124.65       |                 |              |              |
| S83    | 129.10       | 1.44            |              |              |
| S84    | 133.11       |                 |              |              |
| S85    | 137.10       | 1.1             |              |              |
| S86    | 141.25       |                 | 28.18        | 31.47        |
| S87    | 145.20       | 0.99            |              |              |
| S88    | 149.26       |                 |              |              |
| S89    | 153.20       | 0.85            |              |              |
| S90    | 157.20       | 0.9             |              |              |
| S91    | 161.30       | 0.8             | 28.13        | 31.48        |
| S92    | 166.2        |                 |              |              |
| S93    | 171.50       | 0.7             |              |              |
| S94    | 175.46       |                 |              |              |
| S95    | 179.68       |                 |              |              |
| S96    | 183.46       |                 | 27.57        | 31.06        |
| S97    | 187.76       |                 |              |              |

ROCKY MOUNTAIN ARSENAL INJECTION-EXTRACTION EXPERIMENT  
EXTRACTION WELL

| SAMPLE | TIME<br>(hr) | IODIDE<br>(ppm) | TCA<br>(ppb) | TCE<br>(ppb) |
|--------|--------------|-----------------|--------------|--------------|
| S98    | 191.91       | 0.54            |              |              |
| S99    | 195.58       |                 |              |              |
| S100   | 199.73       |                 |              |              |
| S101   | 204.35       |                 | 27.61        | 31.92        |
| S102   | 208.31       |                 |              |              |
| S103   | 212.41       |                 |              |              |
| S104   | 216.83       | 0.42            |              |              |
| S105   | 220.63       |                 | 28.74        | 32.69        |
| S106   | 224.55       |                 |              |              |
| S107   | 230.18       |                 |              |              |
| S108   | 236.41       | 0.37            |              |              |
| S109   | 242.41       | 0.31            | 28.37        | 32.96        |
| S110   | 254.41       | 0.29            |              |              |
| S111   | 266.33       |                 |              |              |
| S112   | 278.5        |                 |              |              |
| S113   | 290.3        |                 | 27.71        | 32.37        |
| S114   | 302.23       |                 |              |              |
| S115   | 315.91       |                 |              |              |
| S116   | 332.43       |                 |              |              |
| S117   | 357.68       |                 | 28.27        | 33.11        |
| S118   | 405.83       |                 |              |              |
| S119   | 431.83       |                 | 32.00        | 36.10        |
| S120   | 477.56       |                 | 28.05        | 32.79        |
| S121   | 501.95       |                 | 27.97        | 32.69        |
| S122   | 535.23       |                 | 26.791       | 32.024       |
| S123   | 630.2        |                 | 31.17        | 36.55        |
| S124-A | 652.61       |                 | 16.50        | 31.60        |
| S124   | 652.61       |                 | 29.79        | 36.16        |
| S125   | 701.45       |                 |              |              |
| S126   | 769.05       |                 | 24.91        | 29.35        |
| S127   | 821.47       |                 |              |              |
| S128   | 864.92       |                 |              |              |
| S129   | 944.63       |                 | 24.95        | 29.70        |
| S130   | 991.72       |                 |              |              |
| S131   | 1033.40      |                 |              |              |
| S132   | 1104.00      |                 | 22.68        | 27.62        |

APPENDIX E. CALCULATIONS OF PULSE BREAKTHROUGH MEANS

## Injection Well

## Iodide Data

| Sample | t     | I     | delt t | delt | I*delt | Cum. Area |
|--------|-------|-------|--------|------|--------|-----------|
| I1     | 0.12  | 59.50 | 0.12   | 0.54 | 31.83  | 31.8325   |
| I2     | 0.95  | 62.10 | 0.83   | 0.64 | 39.74  | 71.57649  |
| I3     | 1.40  | 49.76 | 0.45   | 0.38 | 18.66  | 90.23649  |
| I4     | 1.70  | 53.50 | 0.30   | 0.63 | 33.44  | 123.6739  |
| I5     | 2.65  | 60.60 | 0.95   | 0.89 | 53.63  | 177.3049  |
| I7     | 3.47  | 60.50 | 0.82   | 1.28 | 77.14  | 254.4424  |
| I8     | 5.20  | 57.90 | 1.73   | 1.44 | 83.38  | 337.8184  |
| I9     | 6.35  | 59.40 | 1.15   | 1.01 | 59.99  | 397.8125  |
| I10    | 7.22  | 61.12 | 0.87   | 0.71 | 43.40  | 441.2077  |
| I11    | 7.77  | 54.30 | 0.55   | 1.39 | 75.48  | 516.6846  |
| I13    | 10.00 | 56.10 | 2.23   | 1.29 | 72.37  | 589.0536  |
| I14    | 10.35 | 57.70 | 0.35   | 0.67 | 38.37  | 627.4241  |
| I15    | 11.33 | 55.20 | 0.98   | 1.41 | 77.83  | 705.2561  |
| I16    | 13.17 | 65.00 | 1.84   | 1.72 | 111.80 | 817.0561  |
| I17    | 14.77 | 62.40 | 1.60   | 1.86 | 116.38 | 933.4322  |
| I18    | 16.90 | 59.80 | 2.13   | 2.31 | 138.44 | 1071.869  |
| I20    | 19.40 | 70.50 | 2.50   | 1.80 | 126.90 | 1198.769  |
| I21    | 20.50 | 61.20 | 1.10   | 1.80 | 110.16 | 1308.929  |
| I24    | 23.00 | 67.40 | 2.50   | 1.90 | 128.06 | 1436.989  |
| I26    | 24.30 | 80.60 | 1.30   | 1.25 | 100.75 | 1537.739  |
| I27    | 25.50 | 90.00 | 1.20   | 1.10 | 99.00  | 1636.739  |
| I28    | 26.50 | 70.40 | 1.00   | 0.85 | 59.84  | 1696.579  |
| I29    | 27.20 | 69.02 | 0.70   | 0.55 | 37.96  | 1734.540  |
| I30    | 27.60 | 0.85  | 0.40   | 0.60 | 0.51   | 1735.050  |
| I31    | 28.40 | 1.08  | 0.80   | 2.10 | 2.27   | 1737.318  |
| I34    | 31.80 | 2.53  | 3.40   | 2.70 | 6.83   | 1744.149  |
| I35    | 33.80 | 2.78  | 2.00   | 3.30 | 9.18   | 1753.329  |
| I38    | 38.40 | 4.74  | 4.60   | 4.45 | 21.09  | 1774.422  |
| I42    | 42.70 | 6.44  | 4.30   | 3.70 | 23.83  | 1798.250  |
| I45    | 45.80 | 7.41  | 3.10   | 2.55 | 18.90  | 1817.146  |
| I47    | 47.80 | 8.90  | 2.00   | 2.05 | 18.25  | 1835.391  |
| I49    | 49.90 | 10.00 | 2.10   | 1.55 | 15.50  | 1850.891  |
| I50    | 50.90 | 10.50 | 1.00   | 1.00 | 10.50  | 1861.391  |
| I51    | 51.90 | 9.90  | 1.00   | 1.10 | 10.89  | 1872.281  |
| I52    | 53.10 | 10.40 | 1.20   | 1.00 | 10.40  | 1882.681  |
| I53    | 53.90 | 11.19 | 0.80   | 0.90 | 10.07  | 1892.752  |
| I54    | 54.90 | 11.50 | 1.00   | 1.00 | 11.50  | 1904.252  |
| I55    | 55.90 | 11.70 | 1.00   | 1.55 | 18.13  | 1922.387  |
| I57    | 58.00 | 10.90 | 2.10   | 2.05 | 22.34  | 1944.732  |
| I59    | 60.00 | 10.60 | 2.00   | 2.15 | 22.79  | 1967.522  |
| I61    | 62.30 | 10.20 | 2.30   | 1.75 | 17.85  | 1985.372  |
| I62    | 63.50 | 10.20 | 1.20   | 1.65 | 16.83  | 2002.202  |
| I64    | 65.60 | 9.20  | 2.10   | 1.95 | 17.94  | 2020.142  |
| I66    | 67.40 | 8.86  | 1.80   | 1.85 | 16.39  | 2036.533  |
| I68    | 69.30 | 8.38  | 1.90   | 2.00 | 16.76  | 2053.293  |
| I70    | 71.40 | 7.50  | 2.10   | 2.00 | 15.00  | 2068.293  |
| I72    | 73.30 | 7.00  | 1.90   | 2.05 | 14.35  | 2082.643  |
| I74    | 75.50 | 6.70  | 2.20   | 2.15 | 14.40  | 2097.048  |
| I76    | 77.60 | 5.30  | 2.10   | 2.05 | 10.86  | 2107.913  |

## Injection Well

## Iodide Data

| Sample | t      | I    | delt t | delt  | I*delt | Cum. Area |
|--------|--------|------|--------|-------|--------|-----------|
| I78    | 79.60  | 5.85 | 2.00   | 2.25  | 13.16  | 2121.075  |
| I80    | 82.10  | 4.62 | 2.50   | 4.40  | 20.33  | 2141.403  |
| I83    | 88.40  | 3.65 | 6.30   | 5.10  | 18.62  | 2160.018  |
| I85    | 92.30  | 3.61 | 3.90   | 3.95  | 14.26  | 2174.278  |
| I87    | 96.30  | 3.30 | 4.00   | 4.00  | 13.20  | 2187.478  |
| I89    | 100.30 | 3.30 | 4.00   | 6.15  | 20.29  | 2207.773  |
| I91    | 108.60 | 2.46 | 8.30   | 8.10  | 19.93  | 2227.699  |
| I93    | 116.50 | 1.95 | 7.90   | 7.85  | 15.31  | 2243.006  |
| I95    | 124.30 | 1.70 | 7.80   | 6.25  | 10.63  | 2253.631  |
| I96    | 129.00 | 1.40 | 4.70   | 6.40  | 8.96   | 2262.591  |
| I98    | 137.10 | 1.30 | 8.10   | 8.05  | 10.47  | 2273.056  |
| I100   | 145.10 | 1.10 | 8.00   | 8.00  | 8.80   | 2281.856  |
| I102   | 153.10 | 0.94 | 8.00   | 6.00  | 5.64   | 2287.496  |
| I103   | 157.10 | 0.90 | 4.00   | 4.05  | 3.64   | 2291.141  |
| I104   | 161.20 | 0.80 | 4.10   | 7.15  | 5.72   | 2296.861  |
| I106   | 171.40 | 0.70 | 10.20  | 13.19 | 9.23   | 2306.094  |
| I110   | 187.58 | 0.71 | 16.18  | 22.61 | 16.05  | 2322.144  |
| I117   | 216.61 | 0.46 | 29.03  | 24.39 | 11.22  | 2333.361  |
| I121   | 236.35 | 0.38 | 19.74  | 12.89 | 4.90   | 2338.257  |
| I122   | 242.38 | 0.34 | 6.03   | 9.02  | 3.07   | 2341.326  |
| I123   | 254.40 | 0.30 | 12.02  | 6.01  | 1.80   | 2343.129  |

Area under Injection: 1734.540 (I1 to I29)  
 Total time of injection : 27.55  
 Average Injection : 62.95971

Area under Second Pulse: 608.5890 (I30 to I123)  
 Peak Concentration: 11.7

COM for 1st pulse: 14.77  
 1/2 Area: 867.2701

COM for both pulses: 19.56  
 1/2 Area: 1171.564



## Drive Point A

## Iodide Data

| Sample | t     | I     | delt t | delt | Area<br>I*delt | Cumulative<br>Area |
|--------|-------|-------|--------|------|----------------|--------------------|
| A2     | 3.90  | 0.01  | 3.90   | 3.70 | 0.04           | 0.04               |
| A3     | 7.40  | 0.01  | 3.50   | 3.35 | 0.03           | 0.07               |
| A5     | 10.60 | 0.54  | 3.20   | 3.75 | 2.03           | 2.10               |
| A7     | 14.90 | 7.37  | 4.30   | 3.25 | 23.95          | 26.05              |
| A8     | 17.10 | 11.83 | 2.20   | 1.70 | 20.11          | 46.16              |
| A9     | 18.30 | 13.9  | 1.20   | 1.20 | 16.68          | 62.84              |
| A10    | 19.50 | 21.4  | 1.20   | 1.15 | 24.61          | 87.45              |
| A11    | 20.60 | 19.6  | 1.10   | 1.13 | 22.05          | 109.50             |
| A12    | 21.75 | 21.8  | 1.15   | 1.30 | 28.34          | 137.84             |
| A13    | 23.20 | 25.67 | 1.45   | 1.32 | 34.01          | 171.85             |
| A14    | 24.40 | 27.4  | 1.20   | 1.15 | 31.51          | 203.36             |
| A15    | 25.50 | 32.26 | 1.10   | 1.05 | 33.87          | 237.23             |
| A16    | 26.50 | 38    | 1.00   | 1.40 | 53.20          | 290.43             |
| A17    | 28.30 | 36.96 | 1.80   | 1.50 | 55.44          | 345.87             |
| A18    | 29.50 | 39.9  | 1.20   | 1.75 | 69.83          | 415.70             |
| A19    | 31.80 | 44.6  | 2.30   | 2.20 | 98.12          | 513.82             |
| A20    | 33.90 | 46.6  | 2.10   | 3.30 | 153.78         | 667.60             |
| A23    | 38.40 | 49.8  | 4.50   | 4.10 | 204.18         | 871.78             |
| A26    | 42.10 | 51.7  | 3.70   | 2.25 | 116.33         | 988.10             |
| A27    | 42.90 | 45.8  | 0.80   | 1.05 | 48.09          | 1036.19            |
| A28    | 44.20 | 50.5  | 1.30   | 1.65 | 83.33          | 1119.52            |
| A30    | 46.20 | 46.8  | 2.00   | 1.50 | 70.20          | 1189.72            |
| A31    | 47.20 | 47.3  | 1.00   | 1.05 | 49.66          | 1239.38            |
| A32    | 48.30 | 44.6  | 1.10   | 1.05 | 46.83          | 1286.21            |
| A33    | 49.30 | 45.3  | 1.00   | 1.00 | 45.30          | 1331.51            |
| A34    | 50.30 | 42.5  | 1.00   | 1.05 | 44.63          | 1376.14            |
| A35    | 51.40 | 40.7  | 1.10   | 1.10 | 44.77          | 1420.91            |
| A36    | 52.50 | 36.6  | 1.10   | 1.60 | 58.56          | 1479.47            |
| A38    | 54.60 | 36.93 | 2.10   | 1.45 | 53.55          | 1533.02            |
| A39    | 55.40 | 34.34 | 0.80   | 1.10 | 37.77          | 1570.79            |
| A40    | 56.80 | 26.4  | 1.40   | 1.10 | 29.04          | 1599.83            |
| A41    | 57.60 | 23.6  | 0.80   | 0.90 | 21.24          | 1621.07            |
| A42    | 58.60 | 24.2  | 1.00   | 1.05 | 25.41          | 1646.48            |
| A43    | 59.70 | 21.15 | 1.10   | 1.60 | 33.84          | 1680.32            |
| A45    | 61.80 | 16.6  | 2.10   | 1.55 | 25.73          | 1706.05            |
| A46    | 62.80 | 15.6  | 1.00   | 1.05 | 16.38          | 1722.43            |
| A47    | 63.90 | 14.2  | 1.10   | 1.00 | 14.20          | 1736.63            |
| A48    | 64.80 | 12.9  | 0.90   | 0.90 | 11.61          | 1748.24            |
| A49    | 65.70 | 10.9  | 0.90   | 1.00 | 10.90          | 1759.14            |
| A50    | 66.80 | 11.7  | 1.10   | 0.97 | 11.35          | 1770.49            |
| A51    | 67.64 | 11.2  | 0.84   | 0.95 | 10.64          | 1781.13            |
| A52    | 68.70 | 11    | 1.06   | 1.03 | 11.33          | 1792.46            |
| A53    | 69.70 | 10.9  | 1.00   | 1.10 | 11.99          | 1804.45            |
| A54    | 70.90 | 10.9  | 1.20   | 1.10 | 11.99          | 1816.44            |
| A55    | 71.90 | 9.1   | 1.00   | 1.00 | 9.10           | 1825.54            |
| A56    | 72.90 | 10.5  | 1.00   | 1.00 | 10.50          | 1836.04            |

Drive Point A  
Iodide Data  
Sample

|      | t      | I    | delt t | delt  | Area<br>I*delt | Cumulative<br>Area |
|------|--------|------|--------|-------|----------------|--------------------|
| A57  | 73.90  | 10.3 | 1.00   | 1.10  | 11.33          | 1847.37            |
| A58  | 75.10  | 10.2 | 1.20   | 1.30  | 13.26          | 1860.63            |
| A59  | 76.50  | 9.1  | 1.40   | 1.10  | 10.01          | 1870.64            |
| A60  | 77.30  | 9.1  | 0.80   | 1.00  | 9.10           | 1879.74            |
| A61  | 78.50  | 10.6 | 1.20   | 1.05  | 11.13          | 1890.87            |
| A62  | 79.40  | 10.3 | 0.90   | 0.95  | 9.79           | 1900.66            |
| A63  | 80.40  | 10.6 | 1.00   | 2.60  | 27.56          | 1928.22            |
| A65  | 84.60  | 9    | 4.20   | 3.95  | 35.55          | 1963.77            |
| A67  | 88.30  | 9.1  | 3.70   | 3.90  | 35.49          | 1999.26            |
| A69  | 92.40  | 9.1  | 4.10   | 4.10  | 37.31          | 2036.57            |
| A71  | 96.50  | 8.28 | 4.10   | 4.10  | 33.95          | 2070.51            |
| A73  | 100.60 | 7.7  | 4.10   | 4.15  | 31.96          | 2102.47            |
| A74  | 104.80 | 6.8  | 4.20   | 3.95  | 26.86          | 2129.33            |
| A75  | 108.50 | 5.5  | 3.70   | 3.95  | 21.72          | 2151.05            |
| A76  | 112.70 | 4.7  | 4.20   | 4.20  | 19.74          | 2170.79            |
| A77  | 116.90 | 3.99 | 4.20   | 3.80  | 15.16          | 2185.96            |
| A78  | 120.30 | 3.83 | 3.40   | 3.70  | 14.17          | 2200.13            |
| A79  | 124.30 | 3.4  | 4.00   | 4.40  | 14.96          | 2215.09            |
| A80  | 129.10 | 2.8  | 4.80   | 4.35  | 12.18          | 2227.27            |
| A81  | 133.00 | 2.3  | 3.90   | 4.05  | 9.31           | 2236.58            |
| A82  | 137.20 | 2.3  | 4.20   | 3.95  | 9.08           | 2245.67            |
| A83  | 140.90 | 2.1  | 3.70   | 3.70  | 7.77           | 2253.44            |
| A84  | 144.60 | 2.1  | 3.70   | 3.90  | 8.19           | 2261.63            |
| A85  | 148.70 | 1.8  | 4.10   | 4.05  | 7.29           | 2268.92            |
| A86  | 152.70 | 1.6  | 4.00   | 4.00  | 6.40           | 2275.32            |
| A87  | 156.70 | 1.7  | 4.00   | 4.00  | 6.80           | 2282.12            |
| A88  | 160.70 | 1.6  | 4.00   | 7.40  | 11.84          | 2293.96            |
| A90  | 171.50 | 1.2  | 10.80  | 9.55  | 11.46          | 2305.42            |
| A92  | 179.80 | 1.1  | 8.30   | 7.95  | 8.74           | 2314.16            |
| A94  | 187.40 | 0.95 | 7.60   | 9.78  | 9.29           | 2323.45            |
| A97  | 199.36 | 0.77 | 11.96  | 10.53 | 8.10           | 2331.56            |
| A99  | 208.45 | 0.67 | 9.09   | 8.68  | 5.81           | 2337.37            |
| A101 | 216.71 | 0.62 | 8.26   | 7.89  | 4.89           | 2342.26            |
| A103 | 224.23 | 0.6  | 7.52   | 9.93  | 5.96           | 2348.22            |
| A105 | 236.58 | 0.49 | 12.35  | 9.15  | 4.48           | 2352.71            |
| A106 | 242.53 | 0.41 | 5.95   | 8.99  | 3.69           | 2356.39            |
| A107 | 254.56 | 0.36 | 12.03  | 23.91 | 8.61           | 2365.00            |
| A110 | 290.35 | 0.1  | 35.79  | 43.89 | 4.39           | 2369.39            |
| A114 | 342.33 | 0.07 | 51.98  | 25.99 | 1.82           | 2371.21            |

Total Area under both peaks: 2371.207  
COM for both peaks: 46.61  
1/2 Area: 1185.603

Area under Iodide front (A2 to A26): 988.1047  
COM for I front: 32.41  
1/2 Area: 494.0523

## Drive Point A

TCE Data

Sample

|     | t     | TCE    | delt t | delt  | Area<br>TCE*delt | Cumulative<br>Area |
|-----|-------|--------|--------|-------|------------------|--------------------|
| A1  | 1.37  | 44.513 | 1.37   | 4.385 | 195.1895         | 195.19             |
| A3  | 7.40  | 40.79  | 6.03   | 4.615 | 188.2458         | 383.44             |
| A5  | 10.6  | 42.5   | 3.2    | 2.575 | 109.4375         | 492.87             |
| A6  | 12.55 | 40.886 | 1.95   | 3.25  | 132.8795         | 625.75             |
| A8  | 17.1  | 36.03  | 4.55   | 4.025 | 145.0207         | 770.77             |
| A11 | 20.60 | 33.009 | 3.5    | 3.65  | 120.4828         | 891.26             |
| A14 | 24.4  | 25.194 | 3.8    | 3.85  | 96.9969          | 988.25             |
| A17 | 28.30 | 18.89  | 3.9    | 2.55  | 48.1695          | 1036.42            |
| A18 | 29.50 | 16.791 | 1.2    | 2.8   | 47.0148          | 1083.44            |
| A20 | 33.90 | 9.799  | 4.4    | 3.8   | 37.2362          | 1120.67            |
| A22 | 37.1  | 10.044 | 3.2    | 2.85  | 28.6254          | 1149.30            |
| A24 | 39.60 | 7.993  | 2.5    | 3.55  | 28.37515         | 1177.67            |
| A28 | 44.2  | 5.4    | 4.6    | 3.3   | 17.82            | 1195.49            |
| A30 | 46.2  | 4.597  | 2      | 2.05  | 9.42385          | 1204.92            |
| A32 | 48.3  | 4.771  | 2.1    | 2.05  | 9.78055          | 1214.70            |
| A34 | 50.30 | 3.867  | 2      | 2.1   | 8.1207           | 1222.82            |
| A36 | 52.50 | 4.224  | 2.2    | 2.15  | 9.0816           | 1231.90            |
| A38 | 54.60 | 4.093  | 2.1    | 2.15  | 8.79995          | 1240.70            |
| A40 | 56.80 | 3.995  | 2.2    | 2     | 7.99             | 1248.69            |
| A42 | 58.6  | 3.06   | 1.8    | 2.065 | 6.3189           | 1255.01            |
| A44 | 60.93 | 3.022  | 2.33   | 2.1   | 6.3462           | 1261.36            |
| A46 | 62.80 | 2.988  | 1.87   | 1.935 | 5.78178          | 1267.14            |
| A48 | 64.80 | 2.918  | 2      | 2.42  | 7.06156          | 1274.20            |
| A51 | 67.64 | 2.54   | 2.84   | 3.05  | 7.747            | 1281.95            |
| A54 | 70.90 | 3.1    | 3.26   | 2.63  | 8.153            | 1290.10            |
| A56 | 72.90 | 2.559  | 2      | 2     | 5.118            | 1295.22            |

Area under desorption curve: 1295.216  
 Maximum Concentration: 44.51 ppb  
 Equivalent pulse-mean =  $1295.22/44.51 = 29.10$  hr

## Drive Point A

| TCA Data<br>Sample | t     | TCA    | delt t | delt  | Area<br>TCA*delt | Cumulative<br>Area |
|--------------------|-------|--------|--------|-------|------------------|--------------------|
| A1                 | 1.37  | 37.306 | 1.37   | 4.385 | 163.59           | 163.59             |
| A3                 | 7.40  | 34.134 | 6.03   | 4.615 | 157.53           | 321.12             |
| A5                 | 10.6  | 35.494 | 3.2    | 2.575 | 91.40            | 412.51             |
| A6                 | 12.55 | 32.801 | 1.95   | 3.25  | 106.60           | 519.12             |
| A8                 | 17.1  | 28.557 | 4.55   | 4.025 | 114.94           | 634.06             |
| A11                | 20.60 | 24.727 | 3.5    | 3.65  | 90.25            | 724.31             |
| A14                | 24.4  | 17.879 | 3.8    | 3.85  | 68.83            | 793.15             |
| A17                | 28.30 | 13.585 | 3.9    | 2.55  | 34.64            | 827.79             |
| A18                | 29.50 | 11.768 | 1.2    | 2.8   | 32.95            | 860.74             |
| A20                | 33.90 | 6.494  | 4.4    | 3.8   | 24.68            | 885.41             |
| A22                | 37.1  | 6.614  | 3.2    | 2.85  | 18.85            | 904.26             |
| A24                | 39.60 | 5.324  | 2.5    | 3.55  | 18.90            | 923.16             |
| A28                | 44.2  | 3.835  | 4.6    | 3.3   | 12.66            | 935.82             |
| A30                | 46.2  | 3.261  | 2      | 2.05  | 6.69             | 942.51             |
| A32                | 48.3  | 3.324  | 2.1    | 2.05  | 6.81             | 949.32             |
| A34                | 50.30 | 2.487  | 2      | 2.1   | 5.22             | 954.54             |
| A36                | 52.50 | 2.776  | 2.2    | 2.15  | 5.97             | 960.51             |
| A38                | 54.60 | 2.51   | 2.1    | 2.15  | 5.40             | 965.91             |
| A40                | 56.80 | 2.465  | 2.2    | 2     | 4.93             | 970.84             |
| A42                | 58.6  | 1.887  | 1.8    | 2.065 | 3.90             | 974.73             |
| A44                | 60.93 | 1.814  | 2.33   | 2.1   | 3.81             | 978.54             |
| A46                | 62.80 | 1.806  | 1.87   | 1.935 | 3.49             | 982.04             |
| A48                | 64.80 | 1.799  | 2      | 2.42  | 4.35             | 986.39             |
| A51                | 67.64 | 1.463  | 2.84   | 3.05  | 4.46             | 990.85             |
| A54                | 70.90 | 1.789  | 3.26   | 2.63  | 4.71             | 995.56             |
| A56                | 72.90 | 1.416  | 2      | 2     | 2.83             | 998.39             |

Area under desorption curve: 998.3904  
Maximum Concentration: 37.31 ppb  
Equivalent pulse-mean=  $998.39/37.31 = 26.76$  hr

Drive Point C  
Iodide Data  
Sample

|     | t      | I    | delt t | delt  | Area<br>I*delt | Cumulative<br>Area |
|-----|--------|------|--------|-------|----------------|--------------------|
| C2  | 4.15   | 0.02 | 4.15   | 5.45  | 0.11           | 0.1090             |
| C5  | 10.90  | 0.01 | 6.75   | 5.68  | 0.06           | 0.1658             |
| C7  | 15.50  | 0.04 | 4.60   | 3.80  | 0.15           | 0.3178             |
| C8  | 18.50  | 0.01 | 3.00   | 4.35  | 0.04           | 0.3613             |
| C10 | 24.20  | 0.01 | 5.70   | 6.75  | 0.07           | 0.4288             |
| C13 | 32.00  | 0.01 | 7.80   | 10.20 | 0.10           | 0.5307             |
| C17 | 44.60  | 0.01 | 12.60  | 12.30 | 0.12           | 0.6537             |
| C23 | 56.60  | 0.03 | 12.00  | 11.40 | 0.34           | 0.9958             |
| C28 | 67.40  | 0.02 | 10.80  | 6.45  | 0.13           | 1.1248             |
| C29 | 69.50  | 0.02 | 2.10   | 5.20  | 0.10           | 1.2288             |
| C33 | 77.80  | 0.02 | 8.30   | 8.85  | 0.18           | 1.4058             |
| C36 | 87.20  | 0.01 | 9.40   | 8.75  | 0.09           | 1.4933             |
| C38 | 95.30  | 0.04 | 8.10   | 8.20  | 0.33           | 1.8213             |
| C40 | 103.60 | 0.08 | 8.30   | 10.10 | 0.81           | 2.6292             |
| C43 | 115.50 | 0.24 | 11.90  | 8.60  | 2.06           | 4.6933             |
| C45 | 120.80 | 0.62 | 5.30   | 4.75  | 2.95           | 7.6383             |
| C46 | 125.00 | 1.22 | 4.20   | 4.25  | 5.19           | 12.8233            |
| C47 | 129.30 | 1.64 | 4.30   | 4.15  | 6.81           | 19.6293            |
| C48 | 133.30 | 2    | 4.00   | 4.05  | 8.10           | 27.7292            |
| C49 | 137.40 | 2.3  | 4.10   | 3.95  | 9.08           | 36.8142            |
| C50 | 141.20 | 2.7  | 3.80   | 3.75  | 10.13          | 46.9392            |
| C51 | 144.90 | 3.2  | 3.70   | 3.85  | 12.32          | 59.2592            |
| C52 | 148.90 | 3.96 | 4.00   | 4.05  | 16.04          | 75.2972            |
| C53 | 153.00 | 4.8  | 4.10   | 4.00  | 19.20          | 94.4972            |
| C54 | 156.90 | 4.9  | 3.90   | 4.00  | 19.60          | 114.0972           |
| C55 | 161.00 | 5.3  | 4.10   | 4.55  | 24.12          | 138.2123           |
| C56 | 166.00 | 5.24 | 5.00   | 4.50  | 23.58          | 161.7923           |
| C57 | 170.00 | 5.6  | 4.00   | 2.90  | 16.24          | 178.0323           |
| C58 | 171.80 | 5.8  | 1.80   | 5.05  | 29.29          | 207.3223           |
| C60 | 180.10 | 5.7  | 8.30   | 8.00  | 45.60          | 252.9223           |
| C62 | 187.80 | 5.38 | 7.70   | 7.60  | 40.89          | 293.8103           |
| C64 | 195.30 | 4.3  | 7.50   | 5.88  | 25.26          | 319.0728           |
| C65 | 199.55 | 4.51 | 4.25   | 6.65  | 29.99          | 349.0643           |
| C67 | 208.60 | 3.89 | 9.05   | 8.63  | 33.55          | 382.6155           |
| C69 | 216.80 | 3.3  | 8.20   | 7.93  | 26.17          | 408.7845           |
| C71 | 224.46 | 2.88 | 7.66   | 10.00 | 28.80          | 437.5845           |
| C73 | 236.80 | 2.38 | 12.34  | 9.17  | 21.82          | 459.4091           |
| C74 | 242.80 | 1.96 | 6.00   | 5.75  | 11.27          | 470.6791           |
| C75 | 248.30 | 1.82 | 5.50   | 6.00  | 10.92          | 481.5991           |
| C76 | 254.80 | 1.66 | 6.50   | 6.40  | 10.62          | 492.2231           |
| C77 | 261.10 | 1.62 | 6.30   | 5.94  | 9.62           | 501.8459           |
| C78 | 266.68 | 1.57 | 5.58   | 11.76 | 18.47          | 520.3170           |
| C81 | 284.63 | 1.21 | 17.95  | 29.91 | 36.19          | 556.5081           |
| C88 | 326.50 | 1.28 | 41.87  | 28.96 | 37.08          | 593.5833           |
| C90 | 342.56 | 0.47 | 16.06  | 30.91 | 14.53          | 608.1133           |

## Drive Point C

## Iodide Data

| Sample | t      | I    | delt t | delt  | Area<br>I*delt | Cumulative<br>Area |
|--------|--------|------|--------|-------|----------------|--------------------|
| C92    | 388.33 | 0.19 | 45.77  | 44.85 | 8.52           | 616.6339           |
| C94    | 432.25 | 0.12 | 43.92  | 56.97 | 6.84           | 623.4697           |
| C96    | 502.26 | 0.16 | 70.01  | 87.90 | 14.06          | 637.5345           |
| C98    | 608.06 | 0.09 | 105.80 | 99.60 | 8.96           | 646.4980           |
| C100   | 701.45 | 0.07 | 93.39  | 93.39 | 6.54           | 653.0353           |

Total Area: 653.0353

COM: 199.08

1/2 Area: 326.5176

## Drive Point C

TCE Data

| Sample | t      | TCE   | delt t | delt  | Area<br>TCE*delt | Cumulative<br>Area |
|--------|--------|-------|--------|-------|------------------|--------------------|
| C1     | 2.1    | 25.99 | 2.10   | 4.37  | 113.45           |                    |
| C3     | 6.63   | 27.85 | 4.53   | 5.70  | 158.75           |                    |
| C6     | 13.5   | 26.59 | 6.87   | 5.94  | 157.81           |                    |
| C8     | 18.50  | 27.22 | 5.00   | 5.35  | 145.63           |                    |
| C10    | 24.20  | 29.59 | 5.70   | 6.75  | 199.73           |                    |
| C13    | 32.00  | 29.36 | 7.80   | 6.56  | 192.75           |                    |
| C14    | 37.33  | 27.32 | 5.33   | 5.13  | 140.02           |                    |
| C16    | 42.25  | 28.76 | 4.92   | 5.63  | 161.78           |                    |
| C19    | 48.58  | 29.51 | 6.33   | 5.39  | 159.06           |                    |
| C21    | 53.03  | 29.31 | 4.45   | 4.01  | 117.53           |                    |
| C23    | 56.60  | 30.07 | 3.57   | 4.06  | 122.23           |                    |
| C25    | 61.16  | 32.39 | 4.56   | 4.45  | 144.14           |                    |
| C27    | 65.5   | 29.08 | 4.34   | 4.17  | 121.26           |                    |
| C29    | 69.50  | 30.38 | 4.00   | 4.03  | 122.43           |                    |
| C31    | 73.56  | 28.89 | 4.06   | 4.15  | 119.89           |                    |
| C33    | 77.80  | 31.44 | 4.24   | 4.98  | 156.73           |                    |
| C35    | 83.53  | 31.1  | 5.73   | 6.70  | 208.37           |                    |
| C37    | 91.2   | 32.06 | 7.67   | 7.98  | 255.68           |                    |
| C39    | 99.48  | 31.96 | 8.28   | 8.13  | 259.68           |                    |
| C41    | 107.45 | 33.26 | 7.97   | 8.01  | 266.41           |                    |
| C43    | 115.50 | 34.21 | 8.05   | 6.68  | 228.35           | 228.3518           |
| C45    | 120.80 | 33.48 | 5.30   | 6.90  | 231.01           | 459.3638           |
| C47    | 129.30 | 31.74 | 8.50   | 8.30  | 263.44           | 722.8057           |
| C49    | 137.40 | 30.33 | 8.10   | 7.80  | 236.57           | 959.3795           |
| C51    | 144.90 | 28.66 | 7.50   | 7.80  | 223.55           | 1182.927           |
| C53    | 153.00 | 24.65 | 8.10   | 8.05  | 198.43           | 1381.360           |
| C55    | 161.00 | 20.8  | 8.00   | 13.55 | 281.84           | 1663.200           |
| C60    | 180.10 | 13.57 | 19.10  | 13.40 | 181.84           | 1845.038           |
| C62    | 187.8  | 10.42 | 7.70   | 7.60  | 79.19            | 1924.230           |
| C64    | 195.30 | 7.89  | 7.50   | 8.41  | 66.39            | 1990.624           |
| C66    | 204.63 | 7.64  | 9.33   | 8.72  | 66.66            | 2057.283           |
| C68    | 212.75 | 6.64  | 8.12   | 8.09  | 53.68            | 2110.968           |
| C70    | 220.8  | 5.64  | 8.05   | 8.90  | 50.20            | 2161.164           |
| C72    | 230.55 | 4.96  | 9.75   | 11.00 | 54.56            | 2215.724           |
| C74    | 242.80 | 4.25  | 12.25  | 12.13 | 51.53            | 2267.255           |
| C76    | 254.80 | 3.61  | 12.00  | 11.94 | 43.10            | 2310.358           |
| C78    | 266.68 | 3.08  | 11.88  | 12.04 | 37.08            | 2347.441           |
| C80    | 278.88 | 2.71  | 12.20  | 11.95 | 32.38            | 2379.826           |
| C82    | 290.58 | 2.43  | 11.70  | 11.81 | 28.71            | 2408.536           |
| C84    | 302.51 | 2.49  | 11.93  | 12.81 | 31.91            | 2440.446           |
| C86    | 316.21 | 3.56  | 13.70  | 20.03 | 71.29            | 2511.735           |
| C90    | 342.56 | 2.19  | 26.35  | 45.06 | 98.68            | 2610.416           |
| C93    | 406.33 | 1.39  | 63.77  | 79.85 | 110.99           | 2721.408           |
| C96    | 502.26 | 1.62  | 95.93  | 64.66 | 104.75           | 2826.157           |
| C97    | 535.65 | 2.04  | 33.39  | 52.90 | 107.92           | 2934.073           |

Drive Point C

TCE Data  
Sample            t                    TCE        delt t        delt    Area    Cumulative  
   TCE\*delt    Area

|           |        |       |       |       |       |          |
|-----------|--------|-------|-------|-------|-------|----------|
| C98       | 608.06 | 1.181 | 72.41 | 47.38 | 55.95 | 2990.023 |
| C99       | 630.4  | 1.36  | 22.34 | 22.30 | 30.33 | 3020.351 |
| C99(MISL) | 652.66 | 1.103 | 22.26 | 22.26 | 24.55 | 3044.903 |

Average Co for TCE (Cmax):            30.06066    (C1 to C43)  
Time averaged over:                    118.15

Desorption starts at:            111.475  
Total area under desorption curve:    3044.903

Equivalent pulse-mean =  $111.48 + (3044.90/30.06) = 212.77$  hr



## Drive Point C

TCA Data  
Sample

|     | t      | TCA   | delt t | delt  | Area<br>TCA*delt | Cumulative<br>Area |
|-----|--------|-------|--------|-------|------------------|--------------------|
| C1  | 2.1    | 30.74 | 2.10   | 4.37  | 134.18           |                    |
| C3  | 6.63   | 33.08 | 4.53   | 5.70  | 188.56           |                    |
| C6  | 13.5   | 31.33 | 6.87   | 5.94  | 185.94           |                    |
| C8  | 18.50  | 32.18 | 5.00   | 5.35  | 172.16           |                    |
| C10 | 24.20  | 34.69 | 5.70   | 6.75  | 234.16           |                    |
| C13 | 32.00  | 34.46 | 7.80   | 6.56  | 226.23           |                    |
| C14 | 37.33  | 30.62 | 5.33   | 5.13  | 156.93           |                    |
| C16 | 42.25  | 32.73 | 4.92   | 5.63  | 184.11           |                    |
| C19 | 48.58  | 33.82 | 6.33   | 5.39  | 182.29           |                    |
| C21 | 53.03  | 32.81 | 4.45   | 4.01  | 131.57           |                    |
| C23 | 56.60  | 34.26 | 3.57   | 4.06  | 139.27           |                    |
| C25 | 61.16  | 35.95 | 4.56   | 4.45  | 159.98           |                    |
| C27 | 65.5   | 32.42 | 4.34   | 4.17  | 135.19           |                    |
| C29 | 69.50  | 33.58 | 4.00   | 4.03  | 135.33           |                    |
| C31 | 73.56  | 31.39 | 4.06   | 4.15  | 130.27           |                    |
| C33 | 77.80  | 34.19 | 4.24   | 4.98  | 170.44           |                    |
| C35 | 83.53  | 33.41 | 5.73   | 6.70  | 223.85           |                    |
| C37 | 91.2   | 33.56 | 7.67   | 7.98  | 267.64           |                    |
| C39 | 99.48  | 33.34 | 8.28   | 8.13  | 270.89           |                    |
| C41 | 107.45 | 33.88 | 7.97   | 8.01  | 271.38           |                    |
| C43 | 115.50 | 34.92 | 8.05   | 6.68  | 233.09           | 233.09             |
| C45 | 120.80 | 34.07 | 5.30   | 6.90  | 235.08           | 468.17             |
| C47 | 129.30 | 32.81 | 8.50   | 8.30  | 272.32           | 740.50             |
| C49 | 137.40 | 30.80 | 8.10   | 7.80  | 240.24           | 980.74             |
| C51 | 144.90 | 29.39 | 7.50   | 7.80  | 229.24           | 1209.98            |
| C53 | 153.00 | 25.06 | 8.10   | 8.05  | 201.73           | 1411.71            |
| C55 | 161.00 | 21.40 | 8.00   | 13.55 | 289.97           | 1701.68            |
| C60 | 180.10 | 13.68 | 19.10  | 13.40 | 183.31           | 1884.99            |
| C62 | 187.8  | 10.62 | 7.70   | 7.60  | 80.71            | 1965.71            |
| C64 | 195.30 | 7.73  | 7.50   | 8.41  | 65.05            | 2030.75            |
| C66 | 204.63 | 7.45  | 9.33   | 8.72  | 65.00            | 2095.76            |
| C68 | 212.75 | 6.43  | 8.12   | 8.09  | 51.99            | 2147.74            |
| C70 | 220.8  | 5.36  | 8.05   | 8.90  | 47.70            | 2195.45            |
| C72 | 230.55 | 4.76  | 9.75   | 11.00 | 52.36            | 2247.81            |
| C74 | 242.80 | 3.96  | 12.25  | 12.13 | 48.02            | 2295.82            |
| C76 | 254.80 | 3.34  | 12.00  | 11.94 | 39.88            | 2335.70            |
| C78 | 266.68 | 2.75  | 11.88  | 12.04 | 33.11            | 2368.81            |
| C80 | 278.88 | 2.44  | 12.20  | 11.95 | 29.16            | 2397.97            |
| C82 | 290.58 | 2.01  | 11.70  | 11.81 | 23.75            | 2421.72            |
| C84 | 302.51 | 2.1   | 11.93  | 12.81 | 26.91            | 2448.63            |
| C86 | 316.21 | 3.23  | 13.70  | 20.03 | 64.68            | 2513.31            |
| C90 | 342.56 | 1.81  | 26.35  | 45.06 | 81.56            | 2594.87            |
| C93 | 406.33 | 1.07  | 63.77  | 79.85 | 85.44            | 2680.31            |
| C96 | 502.26 | 1.36  | 95.93  | 64.66 | 87.94            | 2768.24            |
| C97 | 535.65 | 1.82  | 33.39  | 52.90 | 96.28            | 2864.52            |

## Drive Point C

## TCA Data

| Sample    | t      | TCA   | delt t | delt  | Area<br>TCA*delt | Cumulative<br>Area |
|-----------|--------|-------|--------|-------|------------------|--------------------|
| C98       | 608.06 | 1.091 | 72.41  | 47.38 | 51.69            | 2916.21            |
| C99       | 630.4  | 0.89  | 22.34  | 22.30 | 19.85            | 2936.06            |
| C99(MISL) | 652.66 | 0.98  | 22.26  | 22.26 | 21.70            | 2957.76            |

Average Co for TCA (Cmax): 33.29188 (C1 to C43)  
Time averaged over: 118.15

Desorption starts at: 111.475  
Total area under desorption curve: 2957.759

Equivalent pulse-mean =  $111.48 + (2957.76/33.29) = 200.33$  hr

| Drive Point D<br>Iodide Data |        |      |        |       |        | Area | Cumulative |
|------------------------------|--------|------|--------|-------|--------|------|------------|
| Sample                       | t      | I    | delt t | delt  | I*delt |      | Area       |
| D2                           | 4.30   | 0.41 | 4.30   | 3.35  | 1.37   |      | 1.37       |
| D3                           | 6.70   | 0.34 | 2.40   | 2.30  | 0.78   |      | 2.16       |
| D4                           | 8.90   | 0.33 | 2.20   | 2.15  | 0.71   |      | 2.87       |
| D5                           | 11.00  | 0.3  | 2.10   | 3.40  | 1.02   |      | 3.89       |
| D7                           | 15.70  | 0.33 | 4.70   | 4.30  | 1.42   |      | 5.30       |
| D10                          | 19.60  | 0.34 | 3.90   | 3.20  | 1.09   |      | 6.39       |
| D12                          | 22.10  | 0.3  | 2.50   | 2.50  | 0.75   |      | 7.14       |
| D14                          | 24.60  | 0.3  | 2.50   | 2.30  | 0.69   |      | 7.83       |
| D16                          | 26.70  | 0.29 | 2.10   | 2.50  | 0.73   |      | 8.56       |
| D17                          | 29.60  | 0.28 | 2.90   | 2.80  | 0.78   |      | 9.34       |
| D18                          | 32.30  | 0.28 | 2.70   | 2.30  | 0.64   |      | 9.99       |
| D19                          | 34.20  | 0.31 | 1.90   | 5.00  | 1.55   |      | 11.54      |
| D22                          | 42.30  | 0.24 | 8.10   | 5.25  | 1.26   |      | 12.80      |
| D23                          | 44.70  | 0.21 | 2.40   | 4.20  | 0.88   |      | 13.68      |
| D26                          | 50.70  | 0.22 | 6.00   | 9.40  | 2.07   |      | 15.75      |
| D32                          | 63.50  | 0.26 | 12.80  | 8.40  | 2.18   |      | 17.93      |
| D34                          | 67.50  | 0.42 | 4.00   | 3.05  | 1.28   |      | 19.21      |
| D35                          | 69.60  | 0.6  | 2.10   | 5.25  | 3.15   |      | 22.36      |
| D39                          | 78.00  | 1.6  | 8.40   | 7.10  | 11.36  |      | 33.72      |
| D41                          | 83.80  | 3.2  | 5.80   | 4.90  | 15.68  |      | 49.40      |
| D43                          | 87.80  | 4.06 | 4.00   | 4.05  | 16.44  |      | 65.84      |
| D45                          | 91.90  | 5.44 | 4.10   | 4.10  | 22.30  |      | 88.15      |
| D47                          | 96.00  | 6.3  | 4.10   | 3.05  | 19.21  |      | 107.36     |
| D48                          | 98.00  | 5.97 | 2.00   | 3.90  | 23.28  |      | 130.65     |
| D50                          | 103.80 | 6.7  | 5.80   | 4.80  | 32.16  |      | 162.80     |
| D51                          | 107.60 | 5.9  | 3.80   | 3.90  | 23.01  |      | 185.81     |
| D52                          | 111.60 | 5.9  | 4.00   | 4.00  | 23.60  |      | 209.41     |
| D53                          | 115.60 | 5.7  | 4.00   | 3.50  | 19.95  |      | 229.36     |
| D54                          | 118.60 | 6.5  | 3.00   | 2.95  | 19.18  |      | 248.54     |
| D55                          | 121.50 | 3.9  | 2.90   | 3.40  | 13.26  |      | 261.80     |
| D56                          | 125.40 | 6.8  | 3.90   | 4.00  | 27.20  |      | 289.00     |
| D57                          | 129.50 | 5.53 | 4.10   | 3.95  | 21.84  |      | 310.84     |
| D58                          | 133.30 | 5.2  | 3.80   | 4.00  | 20.80  |      | 331.64     |
| D59                          | 137.50 | 4.8  | 4.20   | 4.00  | 19.20  |      | 350.84     |
| D60                          | 141.30 | 4.7  | 3.80   | 3.75  | 17.63  |      | 368.47     |
| D61                          | 145.00 | 4.6  | 3.70   | 3.85  | 17.71  |      | 386.18     |
| D62                          | 149.00 | 4.1  | 4.00   | 4.05  | 16.61  |      | 402.78     |
| D63                          | 153.10 | 3.8  | 4.10   | 4.05  | 15.39  |      | 418.17     |
| D64                          | 157.10 | 4.3  | 4.00   | 4.00  | 17.20  |      | 435.37     |
| D65                          | 161.10 | 4.1  | 4.00   | 4.50  | 18.45  |      | 453.82     |
| D66                          | 166.10 | 3.7  | 5.00   | 4.50  | 16.65  |      | 470.47     |
| D67                          | 170.10 | 3.1  | 4.00   | 2.90  | 8.99   |      | 479.46     |
| D68                          | 171.90 | 3    | 1.80   | 5.05  | 15.15  |      | 494.61     |
| D70                          | 180.20 | 2.92 | 8.30   | 8.05  | 23.51  |      | 518.12     |
| D72                          | 188.00 | 2.76 | 7.80   | 7.60  | 20.98  |      | 539.10     |
| D74                          | 195.40 | 2    | 7.40   | 10.40 | 20.80  |      | 559.90     |
| D77                          | 208.80 | 1.97 | 13.40  | 10.81 | 21.29  |      | 581.18     |
| D79                          | 217.01 | 1.8  | 8.21   | 7.76  | 13.98  |      | 595.16     |

Drive Point D  
Iodide Data  
Sample

|      | t      | I    | delt t | delt  | Area<br>I*delt | Cumulative<br>Area |
|------|--------|------|--------|-------|----------------|--------------------|
| D81  | 224.33 | 1.67 | 7.32   | 9.91  | 16.55          | 611.71             |
| D83  | 236.83 | 1.5  | 12.50  | 9.28  | 13.91          | 625.62             |
| D84  | 242.88 | 1.32 | 6.05   | 5.75  | 7.59           | 633.21             |
| D85  | 248.33 | 1.15 | 5.45   | 6.01  | 6.92           | 640.13             |
| D86  | 254.91 | 1.21 | 6.58   | 6.45  | 7.80           | 647.93             |
| D87  | 261.23 | 1.2  | 6.32   | 14.92 | 17.90          | 665.84             |
| D91  | 284.75 | 1.01 | 23.52  | 23.63 | 23.87          | 689.71             |
| D95  | 308.5  | 0.49 | 23.75  | 20.79 | 10.19          | 699.89             |
| D98  | 326.33 | 1.08 | 17.83  | 24.81 | 26.80          | 726.69             |
| D101 | 358.13 | 0.29 | 31.80  | 40.00 | 11.60          | 738.29             |
| D103 | 406.33 | 0.34 | 48.20  | 37.12 | 12.62          | 750.91             |
| D104 | 432.36 | 0.31 | 26.03  | 26.03 | 8.07           | 758.98             |

Total Area: 758.9833  
 1/2 Area: 379.4916  
 COM: 145.55

## Drive Point D

## TCE Data

| Sample | t      | TCE   | delt t | delt  | Area<br>TCE*delt | Cumulative<br>Area |
|--------|--------|-------|--------|-------|------------------|--------------------|
| D1     | 2.18   | 17.02 | 2.18   | 4.44  | 75.57            |                    |
| D3     | 6.70   | 15.41 | 4.52   | 4.41  | 67.96            |                    |
| D5     | 11     | 16.21 | 4.30   | 4.50  | 72.95            |                    |
| D7     | 15.7   | 15.47 | 4.70   | 4.30  | 66.52            |                    |
| D10    | 19.60  | 14.28 | 3.90   | 3.20  | 45.70            |                    |
| D12    | 22.10  | 15.26 | 2.50   | 3.55  | 54.17            |                    |
| D16    | 26.70  | 16.05 | 4.60   | 6.05  | 97.10            |                    |
| D19    | 34.20  | 15.08 | 7.50   | 7.80  | 117.62           |                    |
| D22    | 42.30  | 16.16 | 8.10   | 7.27  | 117.56           |                    |
| D25    | 48.75  | 17.1  | 6.45   | 7.29  | 124.66           |                    |
| D29    | 56.88  | 17.11 | 8.13   | 7.38  | 126.19           | 126.19             |
| D32    | 63.50  | 15.81 | 6.62   | 6.36  | 100.55           | 226.74             |
| D35    | 69.60  | 14.58 | 6.10   | 6.23  | 90.76            | 317.50             |
| D38    | 75.95  | 15.3  | 6.35   | 7.63  | 116.66           | 434.16             |
| D42    | 84.85  | 14.47 | 8.90   | 6.93  | 100.28           | 534.44             |
| D44    | 89.81  | 12.02 | 4.96   | 4.58  | 55.05            | 589.49             |
| D46    | 94.01  | 13.85 | 4.20   | 4.09  | 56.72            | 646.21             |
| D48    | 98.00  | 12.99 | 3.99   | 4.90  | 63.59            | 709.79             |
| D50    | 103.80 | 13.74 | 5.80   | 6.80  | 93.43            | 803.22             |
| D52    | 111.60 | 13.46 | 7.80   | 7.40  | 99.60            | 902.83             |
| D54    | 118.60 | 13.30 | 7.00   | 6.90  | 91.77            | 994.60             |
| D56    | 125.40 | 13.71 | 6.80   | 7.35  | 100.77           | 1095.37            |
| D58    | 133.30 | 13.29 | 7.90   | 7.95  | 105.66           | 1201.02            |
| D60    | 141.30 | 11.85 | 8.00   | 7.85  | 93.02            | 1294.04            |
| D62    | 149.00 | 9.86  | 7.70   | 7.90  | 77.89            | 1371.94            |
| D64    | 157.10 | 10.11 | 8.10   | 8.55  | 86.44            | 1458.38            |
| D66    | 166.10 | 9.30  | 9.00   | 7.40  | 68.82            | 1527.20            |
| D68    | 171.90 | 9.26  | 5.80   | 7.05  | 65.28            | 1592.48            |
| D70    | 180.20 | 9.66  | 8.30   | 8.05  | 77.76            | 1670.24            |
| D72    | 188    | 7.69  | 7.80   | 7.60  | 58.44            | 1728.69            |
| D74    | 195.40 | 7.78  | 7.40   | 8.36  | 65.00            | 1793.69            |
| D76    | 204.71 | 7.46  | 9.31   | 8.73  | 65.09            | 1858.78            |
| D78    | 212.85 | 7.26  | 8.14   | 8.09  | 58.77            | 1917.55            |
| D80    | 220.9  | 6.85  | 8.05   | 8.89  | 60.90            | 1978.44            |
| D82    | 230.63 | 6.17  | 9.73   | 10.99 | 67.81            | 2046.25            |
| D84    | 242.88 | 5.87  | 12.25  | 12.14 | 71.26            | 2117.52            |
| D86    | 254.91 | 5.99  | 12.03  | 11.95 | 71.58            | 2189.10            |
| D88    | 266.78 | 5.03  | 11.87  | 12.03 | 60.54            | 2249.63            |
| D90    | 278.98 | 4.6   | 12.20  | 11.97 | 55.04            | 2304.67            |
| D92    | 290.71 | 4.17  | 11.73  | 11.81 | 49.25            | 2353.92            |
| D94    | 302.6  | 4     | 11.89  | 15.08 | 60.30            | 2414.22            |
| D97    | 320.86 | 3.89  | 18.26  | 15.03 | 58.47            | 2472.69            |
| D99    | 332.66 | 4.39  | 11.80  | 18.63 | 81.81            | 2554.49            |
| D101   | 358.13 | 3.79  | 25.47  | 36.83 | 139.60           | 2694.10            |

Drive Point D

TCE Data

| Sample | t      | TCE   | delt t | delt   | Area<br>TCE*delt | Cumulative<br>Area |
|--------|--------|-------|--------|--------|------------------|--------------------|
| D103   | 406.33 | 3.02  | 48.20  | 125.01 | 377.55           | 3071.64            |
| D108   | 608.16 | 0.419 | 201.83 | 123.21 | 51.62            | 3123.27            |
| D110   | 652.75 | 0.17  | 44.59  | 44.59  | 7.45             | 3130.71            |

Average Co for TCA (Cmax): 16.04913 (D1 to D29)  
 Time averaged over: 60.19

Desorption curve starts at: 52.815  
 Total area under desorption curve: 3130.714

Equivalent pulse-mean =  $52.82 + (3130.71/16.05) = 247.88$  hr

## Drive Point D

TCA Data

| Sample | t      | TCA   | delt t | delt  | Area<br>TCA*delt | Cumulative<br>Area |
|--------|--------|-------|--------|-------|------------------|--------------------|
| D1     | 2.18   | 26.01 | 2.18   | 4.44  | 115.48           |                    |
| D3     | 6.70   | 23.67 | 4.52   | 4.41  | 104.38           |                    |
| D5     | 11     | 25.22 | 4.30   | 4.50  | 113.49           |                    |
| D7     | 15.7   | 23.76 | 4.70   | 4.30  | 102.17           |                    |
| D10    | 19.60  | 22.09 | 3.90   | 3.20  | 70.69            |                    |
| D12    | 22.10  | 22.94 | 2.50   | 3.55  | 81.44            |                    |
| D16    | 26.70  | 24.58 | 4.60   | 6.05  | 148.71           |                    |
| D19    | 34.20  | 23.35 | 7.50   | 7.80  | 182.13           |                    |
| D22    | 42.30  | 25.20 | 8.10   | 7.27  | 183.33           |                    |
| D25    | 48.75  | 26.35 | 6.45   | 7.29  | 192.09           |                    |
| D29    | 56.88  | 26.6  | 8.13   | 7.38  | 196.18           | 196.18             |
| D32    | 63.50  | 25.02 | 6.62   | 6.36  | 159.13           | 355.30             |
| D35    | 69.60  | 23.27 | 6.10   | 6.23  | 144.86           | 500.16             |
| D38    | 75.95  | 23.2  | 6.35   | 7.63  | 176.90           | 677.06             |
| D42    | 84.85  | 23.02 | 8.90   | 6.93  | 159.53           | 836.59             |
| D44    | 89.81  | 18.56 | 4.96   | 4.58  | 85.00            | 921.59             |
| D46    | 94.01  | 21.55 | 4.20   | 4.09  | 88.25            | 1009.84            |
| D48    | 98.00  | 20.62 | 3.99   | 4.90  | 100.93           | 1110.77            |
| D50    | 103.80 | 22.72 | 5.80   | 6.80  | 154.50           | 1265.27            |
| D52    | 111.60 | 21.01 | 7.80   | 7.40  | 155.47           | 1420.74            |
| D54    | 118.60 | 20.95 | 7.00   | 6.90  | 144.56           | 1565.30            |
| D56    | 125.40 | 20.95 | 6.80   | 7.35  | 153.98           | 1719.28            |
| D58    | 133.30 | 20.73 | 7.90   | 7.95  | 164.80           | 1884.08            |
| D60    | 141.30 | 18.17 | 8.00   | 7.85  | 142.63           | 2026.72            |
| D62    | 149.00 | 15.31 | 7.70   | 7.90  | 120.95           | 2147.67            |
| D64    | 157.10 | 15.24 | 8.10   | 8.55  | 130.30           | 2277.97            |
| D66    | 166.10 | 14.08 | 9.00   | 7.40  | 104.19           | 2382.16            |
| D68    | 171.90 | 14.01 | 5.80   | 7.05  | 98.77            | 2480.93            |
| D70    | 180.20 | 14.57 | 8.30   | 8.05  | 117.29           | 2598.22            |
| D72    | 188    | 11.51 | 7.80   | 7.60  | 87.48            | 2685.70            |
| D74    | 195.40 | 11.74 | 7.40   | 8.36  | 98.09            | 2783.78            |
| D76    | 204.71 | 10.91 | 9.31   | 8.73  | 95.19            | 2878.97            |
| D78    | 212.85 | 10.43 | 8.14   | 8.09  | 84.43            | 2963.41            |
| D80    | 220.9  | 10.01 | 8.05   | 8.89  | 88.99            | 3052.39            |
| D82    | 230.63 | 8.82  | 9.73   | 10.99 | 96.93            | 3149.33            |
| D84    | 242.88 | 8.36  | 12.25  | 12.14 | 101.49           | 3250.82            |
| D86    | 254.91 | 8.50  | 12.03  | 11.95 | 101.57           | 3352.39            |
| D88    | 266.78 | 7.34  | 11.87  | 12.03 | 88.34            | 3440.73            |
| D90    | 278.98 | 6.53  | 12.20  | 11.97 | 78.13            | 3518.86            |
| D92    | 290.71 | 5.76  | 11.73  | 11.81 | 68.03            | 3586.89            |
| D94    | 302.6  | 5.48  | 11.89  | 15.08 | 82.61            | 3669.50            |
| D97    | 320.86 | 5.34  | 18.26  | 15.03 | 80.26            | 3749.76            |
| D99    | 332.66 | 6.13  | 11.80  | 18.63 | 114.23           | 3863.99            |
| D101   | 358.13 | 5.2   | 25.47  | 36.83 | 191.54           | 4055.53            |

Drive Point D

TCA Data

| Sample | t      | TCA   | delt t | delt   | Area<br>TCA*delt | Cumulative<br>Area |
|--------|--------|-------|--------|--------|------------------|--------------------|
| D103   | 406.33 | 4.14  | 48.20  | 125.01 | 517.56           | 4573.09            |
| D108   | 608.16 | 0.772 | 201.83 | 123.21 | 95.12            | 4668.21            |
| D110   | 652.75 | 0.37  | 44.59  | 44.59  | 16.28            | 4684.49            |

Average Co for TCA (Cmax): 24.75639 (D1 to D29)  
Time averaged over: 60.19

Desorption curve starts at: 52.815  
Total area under desorption curve: 4684.486

Equivalent pulse-mean =  $52.82 + (4684.49/24.76) = 242.02$  hr



## Fully Penetrating Monitoring Well

## Iodide Data

| Sample | t     | I     | delt t | delt | Area<br>I*delt | Cumulative<br>Area |
|--------|-------|-------|--------|------|----------------|--------------------|
| M1     | 6.23  | 0.01  | 6.23   | 1.17 | 0.01           | 0.01               |
| M3     | 7.40  | 0.31  | 1.17   | 1.73 | 0.54           | 0.55               |
| M4     | 9.70  | 1.71  | 2.30   | 2.15 | 3.68           | 4.23               |
| M5     | 11.70 | 4.90  | 2.00   | 1.80 | 8.82           | 13.05              |
| M6     | 13.30 | 7.30  | 1.60   | 1.55 | 11.32          | 24.36              |
| M7     | 14.80 | 11.80 | 1.50   | 1.83 | 21.54          | 45.90              |
| M8     | 16.95 | 20.03 | 2.15   | 1.67 | 33.55          | 79.45              |
| M9     | 18.15 | 23.10 | 1.20   | 1.17 | 27.14          | 106.59             |
| M10    | 19.30 | 25.20 | 1.15   | 1.13 | 28.35          | 134.94             |
| M11    | 20.4  | 28.8  | 1.10   | 1.15 | 33.12          | 168.06             |
| M12    | 21.60 | 32.30 | 1.20   | 1.65 | 53.30          | 221.35             |
| M13    | 23.70 | 35.50 | 2.10   | 1.90 | 67.45          | 288.80             |
| M14    | 25.40 | 36.60 | 1.70   | 1.50 | 54.90          | 343.70             |
| M15    | 26.70 | 32.60 | 1.30   | 1.70 | 55.42          | 399.12             |
| M16    | 28.80 | 35.60 | 2.10   | 2.47 | 88.11          | 487.23             |
| M17    | 31.65 | 38.20 | 2.85   | 2.20 | 84.04          | 571.27             |
| M18    | 33.20 | 46.60 | 1.55   | 1.88 | 87.38          | 658.65             |
| M19    | 35.40 | 48.90 | 2.20   | 2.80 | 136.92         | 795.57             |
| M21    | 38.80 | 33.05 | 3.40   | 2.45 | 80.97          | 876.54             |
| M22    | 40.30 | 41.70 | 1.50   | 1.60 | 66.72          | 943.26             |
| M23    | 42.00 | 32.80 | 1.70   | 1.60 | 52.48          | 995.74             |
| M24    | 43.50 | 29.60 | 1.50   | 1.55 | 45.88          | 1041.62            |
| M25    | 45.10 | 18.90 | 1.60   | 1.35 | 25.52          | 1067.14            |
| M26    | 46.20 | 22.20 | 1.10   | 1.20 | 26.64          | 1093.78            |
| M27    | 47.50 | 18.10 | 1.30   | 1.40 | 25.34          | 1119.12            |
| M28    | 49.00 | 17.52 | 1.50   | 1.35 | 23.65          | 1142.77            |
| M29    | 50.20 | 15.76 | 1.20   | 1.20 | 18.91          | 1161.68            |
| M30    | 51.40 | 16.30 | 1.20   | 1.25 | 20.37          | 1182.06            |
| M31    | 52.70 | 14.40 | 1.30   | 1.35 | 19.44          | 1201.50            |
| M32    | 54.10 | 15.55 | 1.40   | 1.30 | 20.21          | 1221.71            |
| M33    | 55.30 | 15.68 | 1.20   | 1.05 | 16.46          | 1238.17            |
| M34    | 56.20 | 14.57 | 0.90   | 1.10 | 16.03          | 1254.20            |
| M35    | 57.50 | 13.90 | 1.30   | 1.10 | 15.29          | 1269.49            |
| M36    | 58.40 | 11.49 | 0.90   | 1.10 | 12.64          | 1282.13            |
| M37    | 59.70 | 11.90 | 1.30   | 1.20 | 14.28          | 1296.41            |
| M38    | 60.80 | 10.20 | 1.10   | 1.05 | 10.71          | 1307.12            |
| M39    | 61.80 | 10.10 | 1.00   | 1.10 | 11.11          | 1318.23            |
| M40    | 63.00 | 9.20  | 1.20   | 1.10 | 10.12          | 1328.35            |
| M41    | 64.00 | 10.70 | 1.00   | 1.00 | 10.70          | 1339.05            |
| M42    | 65.00 | 10.50 | 1.00   | 1.10 | 11.55          | 1350.60            |
| M43    | 66.20 | 8.80  | 1.20   | 1.05 | 9.24           | 1359.84            |
| M44    | 67.10 | 9.70  | 0.90   | 0.85 | 8.25           | 1368.09            |
| M45    | 67.9  | 8.8   | 0.80   | 0.95 | 8.36           | 1376.45            |
| M46    | 69.00 | 9.70  | 1.10   | 1.25 | 12.13          | 1388.57            |
| M47    | 70.40 | 8.80  | 1.40   | 1.40 | 12.32          | 1400.89            |
| M48    | 71.80 | 8.90  | 1.40   | 3.45 | 30.71          | 1431.60            |

## Fully Penetrating Monitoring Well

## Iodide Data

| Sample | t      | I     | delt t | delt  | Area<br>I*delt | Cumulative<br>Area |
|--------|--------|-------|--------|-------|----------------|--------------------|
| M49    | 77.30  | 9.20  | 5.50   | 3.60  | 33.12          | 1464.72            |
| M50    | 79.00  | 10.30 | 1.70   | 1.60  | 16.48          | 1481.20            |
| M51    | 80.50  | 9.80  | 1.50   | 1.35  | 13.23          | 1494.43            |
| M52    | 81.70  | 9.50  | 1.20   | 3.15  | 29.93          | 1524.35            |
| M54    | 86.80  | 6.61  | 5.10   | 5.15  | 34.04          | 1558.39            |
| M56    | 92.00  | 6.20  | 5.20   | 4.95  | 30.69          | 1589.08            |
| M58    | 96.70  | 5.94  | 4.70   | 6.30  | 37.42          | 1626.50            |
| M60    | 104.60 | 4.90  | 7.90   | 10.05 | 49.25          | 1675.75            |
| M63    | 116.80 | 3.20  | 12.20  | 10.45 | 33.44          | 1709.19            |
| M65    | 125.50 | 2.40  | 8.70   | 6.40  | 15.36          | 1724.55            |
| M66    | 129.60 | 2.10  | 4.10   | 6.05  | 12.71          | 1737.25            |
| M68    | 137.60 | 1.70  | 8.00   | 7.85  | 13.34          | 1750.60            |
| M70    | 145.30 | 1.30  | 7.70   | 7.85  | 10.20          | 1760.80            |
| M72    | 153.30 | 1.10  | 8.00   | 6.00  | 6.60           | 1767.40            |
| M73    | 157.30 | 1.20  | 4.00   | 3.85  | 4.62           | 1772.02            |
| M74    | 161.00 | 1.10  | 3.70   | 7.25  | 7.98           | 1780.00            |
| M76    | 171.80 | 0.80  | 10.80  | 9.40  | 7.52           | 1787.52            |
| M78    | 179.80 | 0.81  | 8.00   | 7.93  | 6.42           | 1793.94            |
| M80    | 187.66 | 0.71  | 7.86   | 9.94  | 7.06           | 1801.00            |
| M83    | 199.68 | 0.59  | 12.02  | 12.42 | 7.33           | 1808.33            |
| M86    | 212.51 | 0.51  | 12.83  | 12.36 | 6.30           | 1814.63            |
| M89    | 224.40 | 0.42  | 11.89  | 12.02 | 5.05           | 1819.68            |
| M91    | 236.55 | 0.38  | 12.15  | 9.09  | 3.45           | 1823.14            |
| M92    | 242.58 | 0.31  | 6.03   | 9.03  | 2.80           | 1825.93            |
| M93    | 254.60 | 0.27  | 12.02  | 12.02 | 3.25           | 1829.18            |

Area under peaks: 1829.179

1/2 Area: 914.5897

COM of peaks: 40.46

Area under iodide front: 795.5688

1/2 Area: 397.7844

COM of iodide front: 27.71

## Fully Penetrating Monitoring Well

| TCE Data<br>Sample | t      | TCE    | delt t | delt  | Area<br>TCE*delt | Cumulative<br>Area |
|--------------------|--------|--------|--------|-------|------------------|--------------------|
| M3                 | 7.40   | 40.25  | 7.40   | 10.35 | 416.63           | 416.63             |
| M6                 | 13.30  | 36.06  | 5.90   | 4.78  | 172.18           | 588.81             |
| M8                 | 16.95  | 29.76  | 3.65   | 3.55  | 105.65           | 694.46             |
| M11                | 20.4   | 24.519 | 3.45   | 3.38  | 82.75            | 777.21             |
| M13                | 23.70  | 20.21  | 3.30   | 5.63  | 113.66           | 890.87             |
| M17                | 31.65  | 16.86  | 7.95   | 5.85  | 98.60            | 989.47             |
| M19                | 35.40  | 12.55  | 3.75   | 4.32  | 54.27            | 1043.74            |
| M22                | 40.30  | 9.49   | 4.90   | 4.05  | 38.44            | 1082.18            |
| M24                | 43.50  | 11.69  | 3.20   | 2.95  | 34.50            | 1116.68            |
| M26                | 46.20  | 13.18  | 2.70   | 4.60  | 60.64            | 1177.32            |
| M31                | 52.70  | 13.53  | 6.50   | 4.55  | 61.58            | 1238.89            |
| M33                | 55.30  | 10.27  | 2.60   | 3.50  | 35.95            | 1274.84            |
| M37                | 59.70  | 12.54  | 4.40   | 4.35  | 54.53            | 1329.37            |
| M41                | 64.00  | 11.30  | 4.30   | 3.25  | 36.72            | 1366.09            |
| M43                | 66.20  | 12.86  | 2.20   | 1.95  | 25.07            | 1391.17            |
| M45                | 67.9   | 11.898 | 1.70   | 2.10  | 24.99            | 1416.15            |
| M47                | 70.40  | 10.30  | 2.50   | 4.70  | 48.40            | 1464.55            |
| M49                | 77.30  | 9.04   | 6.90   | 5.05  | 45.65            | 1510.20            |
| M51                | 80.50  | 6.55   | 3.20   | 3.35  | 21.94            | 1532.14            |
| M53                | 84     | 5.35   | 3.50   | 4.30  | 23.00            | 1555.14            |
| M55                | 89.1   | 9.849  | 5.10   | 5.33  | 52.50            | 1607.64            |
| M57                | 94.66  | 7.939  | 5.56   | 5.12  | 40.61            | 1648.25            |
| M59                | 99.33  | 7.613  | 4.67   | 6.81  | 51.84            | 1700.09            |
| M61                | 108.28 | 7.084  | 8.95   | 8.74  | 61.88            | 1761.97            |
| M63                | 116.80 | 5.43   | 8.52   | 8.52  | 46.29            | 1808.26            |

Area under desorption curve: 1808.258  
 Initial concentration (Cmax): 40.25 ppb

Equivalent pulse-mean =  $1808.26/40.25 = 44.93$  hr

## Fully Penetrating Monitoring Well

## TCA Data

| Sample | t      | TCA   | delt t | delt  | Area<br>TCA*delt | Cumulative<br>Area |
|--------|--------|-------|--------|-------|------------------|--------------------|
| M3     | 7.40   | 30.68 | 7.40   | 10.35 | 317.53           | 317.53             |
| M6     | 13.30  | 28.47 | 5.90   | 4.78  | 135.93           | 453.46             |
| M8     | 16.95  | 23.10 | 3.65   | 3.55  | 82.00            | 535.46             |
| M11    | 20.4   | 19.38 | 3.45   | 3.38  | 65.40            | 600.86             |
| M13    | 23.70  | 16.03 | 3.30   | 5.63  | 90.17            | 691.03             |
| M17    | 31.65  | 13.15 | 7.95   | 5.85  | 76.91            | 767.94             |
| M19    | 35.40  | 9.72  | 3.75   | 4.32  | 42.02            | 809.96             |
| M22    | 40.30  | 7.33  | 4.90   | 4.05  | 29.68            | 839.64             |
| M24    | 43.50  | 8.93  | 3.20   | 2.95  | 26.33            | 865.97             |
| M26    | 46.20  | 10.40 | 2.70   | 4.60  | 47.84            | 913.81             |
| M31    | 52.70  | 10.44 | 6.50   | 4.55  | 47.52            | 961.33             |
| M33    | 55.30  | 7.87  | 2.60   | 3.50  | 27.53            | 988.86             |
| M37    | 59.70  | 9.76  | 4.40   | 4.35  | 42.46            | 1031.32            |
| M41    | 64.00  | 8.76  | 4.30   | 3.25  | 28.48            | 1059.80            |
| M43    | 66.20  | 9.89  | 2.20   | 1.95  | 19.29            | 1079.09            |
| M45    | 67.9   | 9.11  | 1.70   | 2.10  | 19.13            | 1098.22            |
| M47    | 70.40  | 8.12  | 2.50   | 4.70  | 38.16            | 1136.39            |
| M49    | 77.30  | 7.10  | 6.90   | 5.05  | 35.83            | 1172.22            |
| M51    | 80.50  | 5.05  | 3.20   | 3.35  | 16.92            | 1189.14            |
| M53    | 84     | 3.99  | 3.50   | 4.30  | 17.14            | 1206.28            |
| M55    | 89.1   | 7.77  | 5.10   | 5.33  | 41.44            | 1247.72            |
| M57    | 94.66  | 6.10  | 5.56   | 5.12  | 31.19            | 1278.90            |
| M59    | 99.33  | 5.67  | 4.67   | 6.81  | 38.63            | 1317.54            |
| M61    | 108.28 | 4.92  | 8.95   | 8.74  | 42.94            | 1360.48            |
| M63    | 116.80 | 3.78  | 8.52   | 8.52  | 32.21            | 1392.68            |

Area under desorption curve: 1392.683  
 Initial concentration (Cmax): 30.68 ppb

Equivalent pulse-mean =  $1392.68/30.68 = 45.39$  hr

| Extraction Well<br>Iodide Data |        |        |        |      | Area   | Cumulative |
|--------------------------------|--------|--------|--------|------|--------|------------|
| Sample                         | t      | Iodide | delt t | delt | I*delt | Area       |
| S1                             | 0.36   | 0.04   | 0.36   | 3.38 | 0.14   | 0.14       |
| S3                             | 6.40   | 0.05   | 6.04   | 7.22 | 0.36   | 0.50       |
| S6                             | 14.80  | 0.08   | 8.40   | 5.95 | 0.48   | 0.97       |
| S8                             | 18.30  | 0.15   | 3.50   | 4.10 | 0.61   | 1.59       |
| S13                            | 23.00  | 0.27   | 4.70   | 2.95 | 0.80   | 2.38       |
| S14                            | 24.20  | 0.43   | 1.20   | 1.30 | 0.56   | 2.94       |
| S15                            | 25.60  | 0.65   | 1.40   | 1.20 | 0.78   | 3.72       |
| S16                            | 26.60  | 0.77   | 1.00   | 1.43 | 1.10   | 4.83       |
| S28                            | 28.47  | 1.22   | 1.87   | 1.38 | 1.68   | 6.51       |
| S19                            | 29.35  | 1.57   | 0.88   | 1.62 | 2.54   | 9.04       |
| S21                            | 31.70  | 2.3    | 2.35   | 2.22 | 5.12   | 14.16      |
| S22                            | 33.80  | 2.91   | 2.10   | 2.65 | 7.71   | 21.87      |
| S24                            | 37.00  | 4.2    | 3.20   | 2.90 | 12.18  | 34.05      |
| S26                            | 39.60  | 4.99   | 2.60   | 2.85 | 14.22  | 48.27      |
| S29                            | 42.70  | 6.28   | 3.10   | 2.60 | 16.33  | 64.60      |
| S31                            | 44.80  | 7      | 2.10   | 2.60 | 18.20  | 82.80      |
| S34                            | 47.90  | 8.26   | 3.10   | 2.05 | 16.93  | 99.73      |
| S35                            | 48.90  | 8.3    | 1.00   | 1.50 | 12.45  | 112.18     |
| S37                            | 50.90  | 9.58   | 2.00   | 1.50 | 14.37  | 126.55     |
| S38                            | 51.90  | 9.4    | 1.00   | 1.10 | 10.34  | 136.89     |
| S39                            | 53.10  | 9.72   | 1.20   | 1.00 | 9.72   | 146.61     |
| S40                            | 53.90  | 11.07  | 0.80   | 0.90 | 9.96   | 156.58     |
| S41                            | 54.90  | 10.98  | 1.00   | 1.05 | 11.53  | 168.10     |
| S42                            | 56.00  | 11.16  | 1.10   | 1.55 | 17.30  | 185.40     |
| S44                            | 58.00  | 10.37  | 2.00   | 2.65 | 27.48  | 212.88     |
| S47                            | 61.30  | 10.4   | 3.30   | 2.80 | 29.12  | 242.00     |
| S49                            | 63.60  | 9.52   | 2.30   | 2.15 | 20.47  | 262.47     |
| S51                            | 65.60  | 9.1    | 2.00   | 1.90 | 17.29  | 279.76     |
| S53                            | 67.40  | 8.6    | 1.80   | 1.90 | 16.34  | 296.10     |
| S55                            | 69.40  | 8.2    | 2.00   | 2.00 | 16.40  | 312.50     |
| S57                            | 71.40  | 7.4    | 2.00   | 2.00 | 14.80  | 327.30     |
| S59                            | 73.40  | 6.7    | 2.00   | 2.05 | 13.73  | 341.04     |
| S61                            | 75.50  | 6.3    | 2.10   | 2.15 | 13.54  | 354.58     |
| S63                            | 77.70  | 5.6    | 2.20   | 2.05 | 11.48  | 366.06     |
| S65                            | 79.60  | 5.53   | 1.90   | 2.25 | 12.44  | 378.50     |
| S67                            | 82.20  | 5.1    | 2.60   | 2.45 | 12.50  | 391.00     |
| S68                            | 84.50  | 3.91   | 2.30   | 3.05 | 11.93  | 402.92     |
| S70                            | 88.30  | 3.71   | 3.80   | 3.90 | 14.47  | 417.39     |
| S72                            | 92.30  | 3.41   | 4.00   | 4.05 | 13.81  | 431.20     |
| S74                            | 96.40  | 3.3    | 4.10   | 4.10 | 13.53  | 444.73     |
| S76                            | 100.50 | 3.1    | 4.10   | 6.05 | 18.75  | 463.49     |
| S78                            | 108.50 | 2.27   | 8.00   | 7.95 | 18.05  | 481.53     |
| S80                            | 116.40 | 1.92   | 7.90   | 6.05 | 11.62  | 493.15     |
| S81                            | 120.60 | 1.19   | 4.20   | 6.35 | 7.56   | 500.71     |
| S83                            | 129.10 | 1.44   | 8.50   | 8.25 | 11.88  | 512.59     |
| S85                            | 137.10 | 1.1    | 8.00   | 8.05 | 8.85   | 521.44     |
| S87                            | 145.20 | 0.99   | 8.10   | 8.05 | 7.97   | 529.41     |

## Extraction Well

## Iodide Data

| Sample | t      | Iodide | delt t | delt  | Area<br>I*delt | Cumulative<br>Area |
|--------|--------|--------|--------|-------|----------------|--------------------|
| S89    | 153.20 | 0.85   | 8.00   | 6.00  | 5.10           | 534.51             |
| S90    | 157.20 | 0.9    | 4.00   | 4.05  | 3.65           | 538.16             |
| S91    | 161.30 | 0.8    | 4.10   | 7.15  | 5.72           | 543.88             |
| S93    | 171.50 | 0.7    | 10.20  | 15.31 | 10.71          | 554.59             |
| S98    | 191.91 | 0.54   | 20.41  | 22.67 | 12.24          | 566.83             |
| S104   | 216.83 | 0.42   | 24.92  | 22.25 | 9.34           | 576.17             |
| S108   | 236.41 | 0.37   | 19.58  | 12.79 | 4.73           | 580.91             |
| S109   | 242.41 | 0.31   | 6.00   | 9.00  | 2.79           | 583.70             |
| S110   | 254.41 | 0.29   | 12.00  | 12.00 | 3.48           | 587.18             |

Area under Iodide peak: 587.1766  
1/2 Area: 293.5883

COM for Iodide peak: 68.11